

LUCAS

IGNITION

DISTRIBUTORS, H.T. COILS MAGNETOS, SUPPRESSORS

SECTION

F

For service purposes some distributors are supplied less clamping plate, actuating lever and driving dog, etc. (See Detailed Parts Section, pages F8 onwards, item Distributor, service). If required, these items should be ordered separately. Where service distributor is not shown, unit is supplied complete.

DISTRIBUTORS

Model Interpretation

Prefix

- B Ball bearing.
- D Distributor.
- D (1) Number indicates design change.
- H Horizontal cable outlets.
- K Small cast iron body with moulded contact breaker base and die-cast auto-advance weights.
- KY Die-cast body with pressed steel contact breaker base.
- M Micro control.
- P Porous bushing.
- U Large cast iron body with moulded contact breaker base.
- V Built-in vacuum control.
- X Hardened steel auto-advance mechanism.

Prefix

- Y Large cast iron body; pressed steel contact breaker base; die-cast auto-advance weights.
- Z Rolling weights auto-advance mechanism.


Suffix Numerals

 
- 1 Suitable for single cylinder engines.
- 2 Suitable for twin cylinder engines.
- 4 Suitable for four cylinder engines.
- 6 Suitable for six cylinder engines.
- 8 Suitable for eight cylinder engines.

Prefix or Suffix


- *A Fitted with automatic advance and retard.

** This symbol is omitted from latest models as they are all fitted with automatic advance mechanism.*

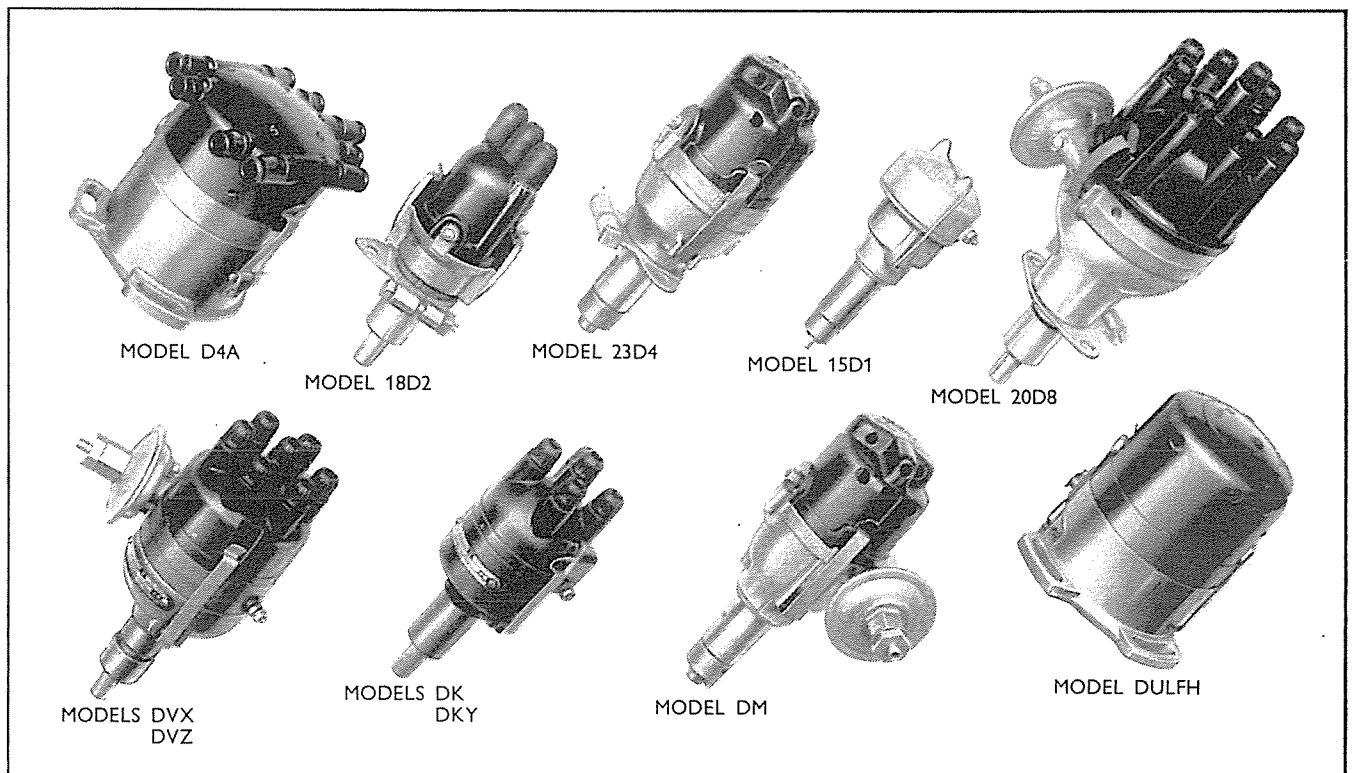




DISTRIBUTORS

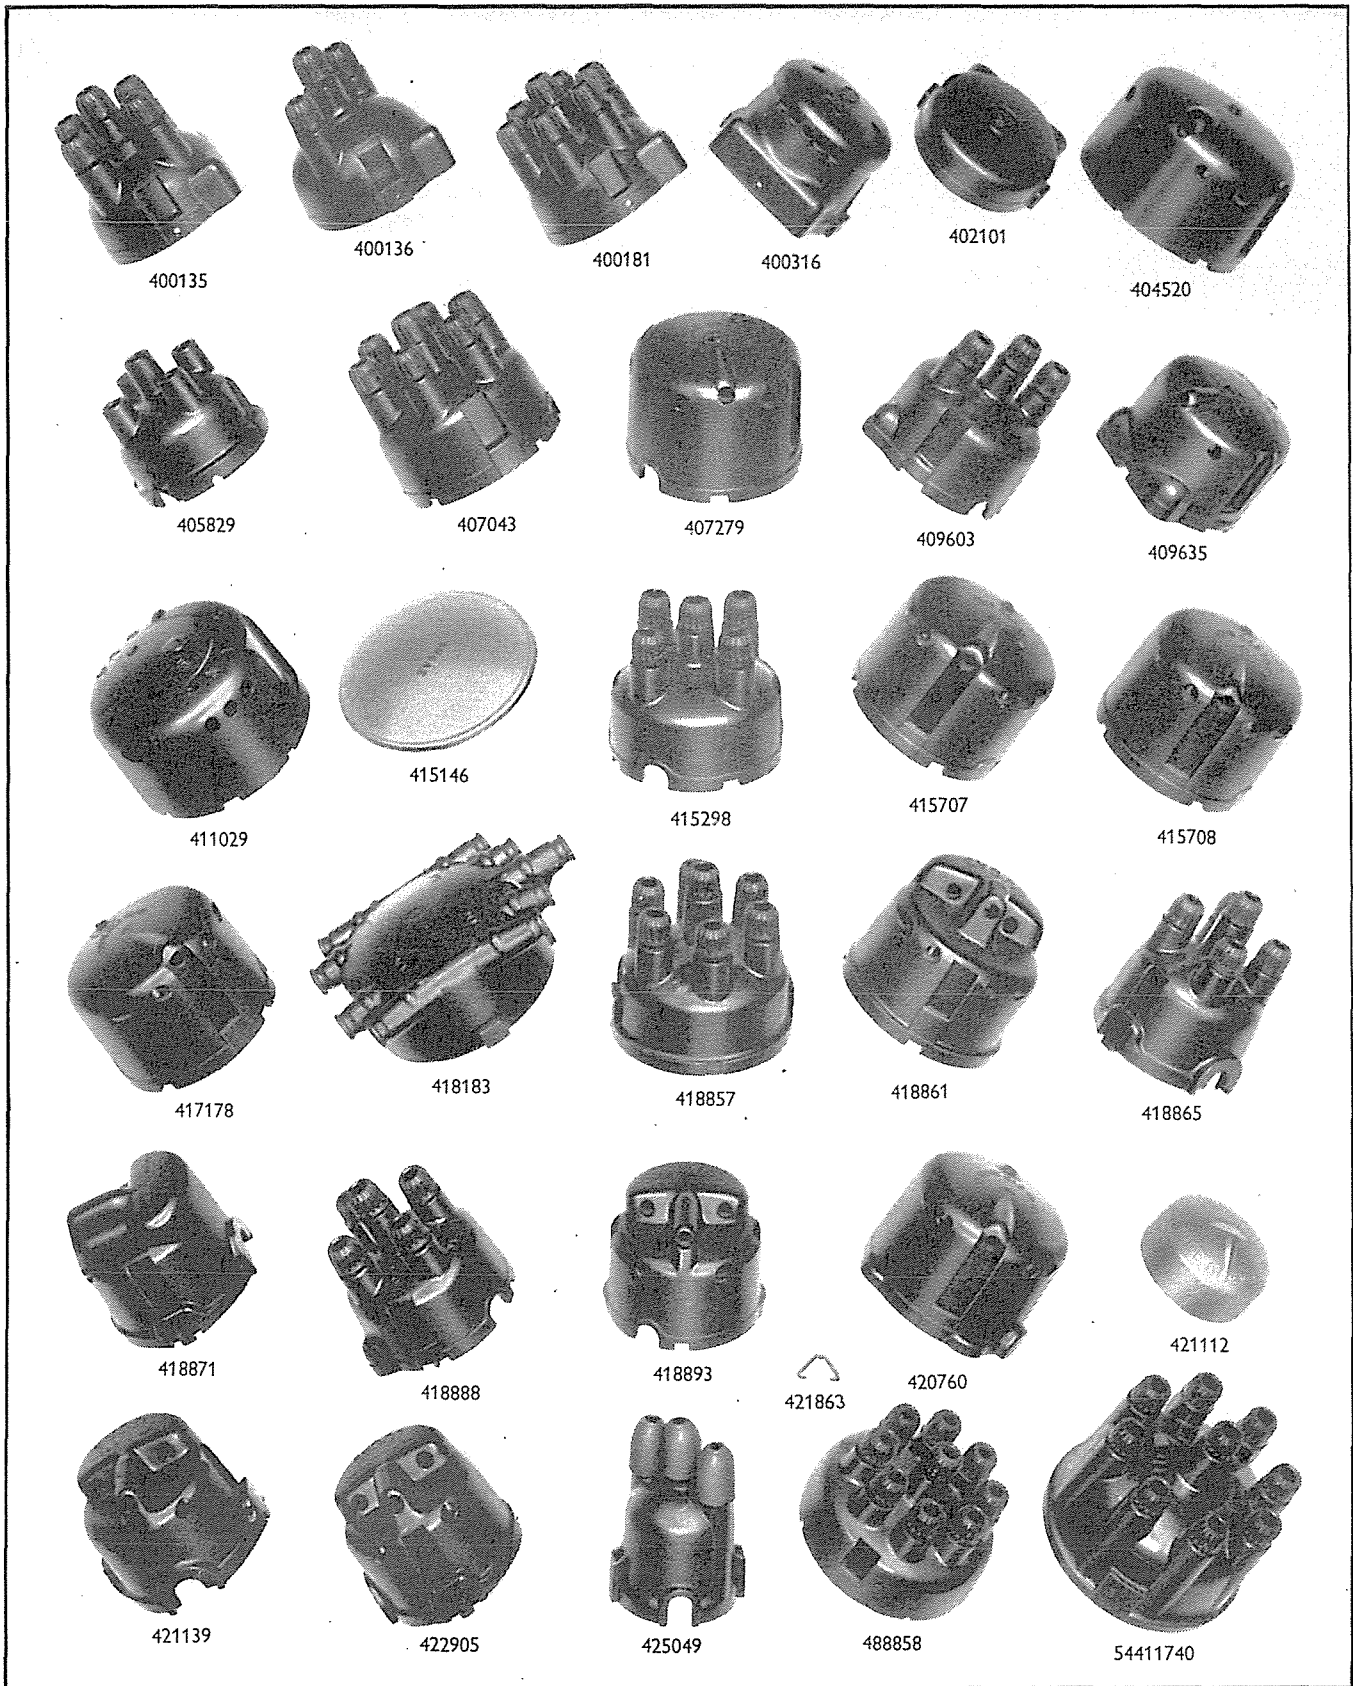


For detailed spare parts, see pages F8-F57

 
DISTRIBUTORS



CONNECTORS AND LEADS

 


400034

 


407010
409568 (DK Type)




423108

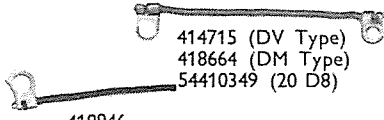


418946

 


419021

 

419023
420238

 

421088 - 54410351
425928

 

423298

SPEED LIMITER



410351

ROTOR ARMS



400051



400052



403866



407106



408355



408357



410876



411031



415088




418726



418731



423486

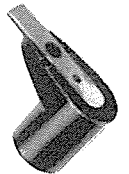

425620

CONDENSERS



400308




407044



415140




420302
423871

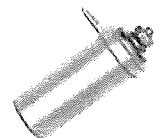

405833



421327

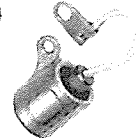

422368
424535
54413006



422849
54413002




54410823




54411935

CONTACT SETS

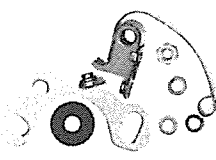

400415

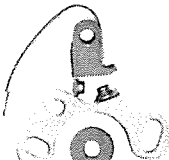

407050
54411216 (D3AH4)




403670
(2 sets)




415359




419398

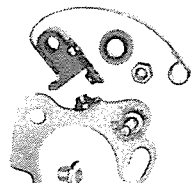


420196

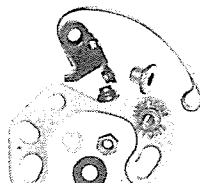


420197

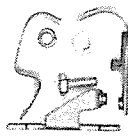

421106

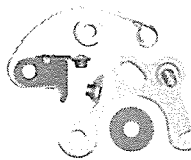

423153
54413568

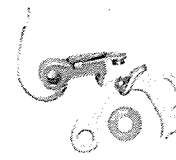


425219




54411772
(2 sets)

 For detailed spare parts, see pages F8-F57




DISTRIBUTORS


HOUSING, MICROMETERS

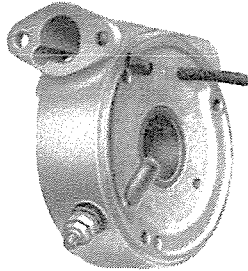


408913 (DVX)
414713 (DVZ)

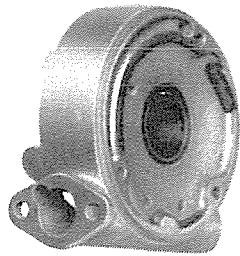


408914

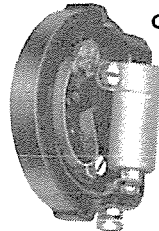


400164

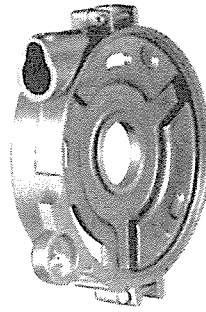


54410355

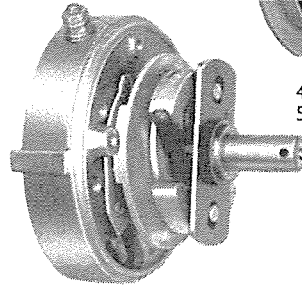


414618

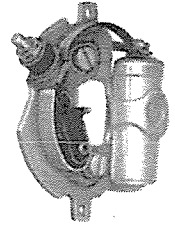

409614
54411507
(Shorter
Condenser)

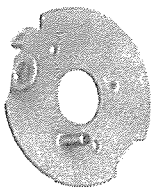

405321

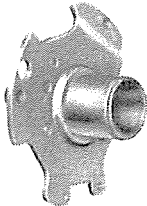

408940



409613



410520



415272


BASES, CONTACT BREAKER




418650
424858



418886

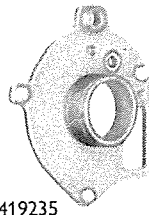


419235
419980 (with Pivot Pin)

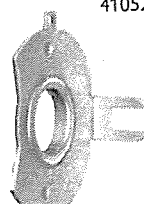


420178




420375

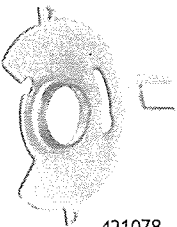

421078

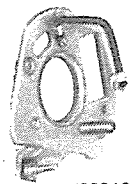


422318

 


423113




54410498

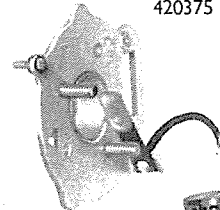


54410755

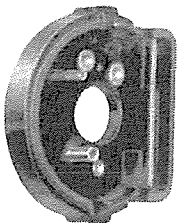


400001
405488 (Insul. return)

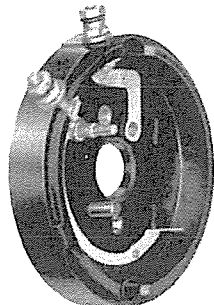

406469

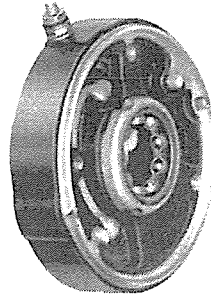


411087

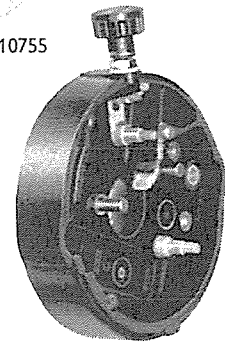

415488

For detailed spare parts, see pages F8-F57

 DISTRIBUTORS



BRUSH AND SPRINGS

404435 418856

CLIPS, CAP

405394 414585 420261 420262/S 421824 424158 425218
425765 490441 54411165

BUSHING

404374 419673 423121 410590 423571 419231 419430 420064 420406 421998

AUTO ADVANCE SPRINGS

419525/S 54410441 403654 400304 405394 403306

BEARINGS

189315 189272 189295

LUBRICATORS

419525/S 54410441 403654 400304 405394 403306

TERMINAL

422238

SHAFT AND ACTION PLATES

Lead 422235 422238

CAMS

PIVOTING WEIGHT TYPE
ROLLING WEIGHT TYPES

AUTO ADVANCE WEIGHTS

400149 (C) 400150 (AC) 407218 (C) 415729 (C) 415730 (AC) 418494 422353 54410282 410033/S 421056/S 403268 418321 (C) 418915 (AC)

TOGGLES

400141 407131 407216 418707 418706 419149

DRIVING DOGS AND SLEEVES

 
405282 418128 406132 405362 421825 419086 410601 420620 417219 422012 (Grooved) 406106 493010 (Slotted)

GEARS

220498 54410365 406142 418723 54160003 496058 418728 410712 496059 414728 199279


SUNDRY PARTS SET (Typical)

For detailed spare parts, see pages F8-F57




DISTRIBUTORS


CLAMPING PLATES AND ACTUATING LEVERS

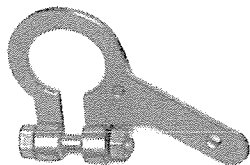


400812

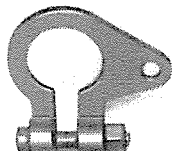


401290

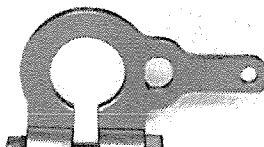

401327
409660 (Longer Lever)

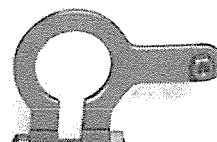


401335

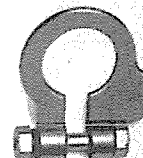


404370
405448



404411

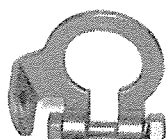


404422

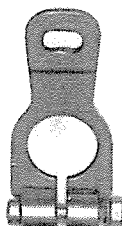


405337



405588

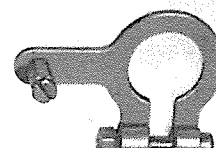


405819

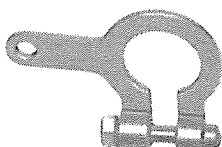


406015
409934




406105

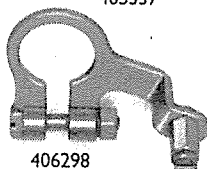

406298

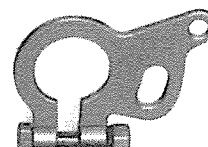


410612

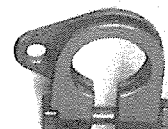


412201
421249




411012

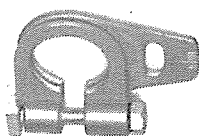


414770
419936

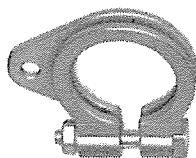


414909

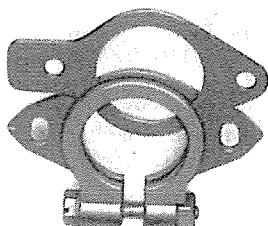


415158
418206 (Less Timing
Plate)

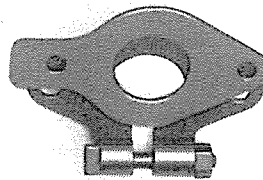


415256

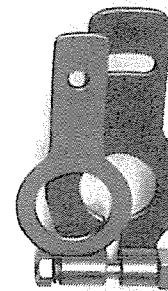


415731
420973 (Offset)

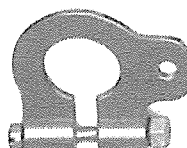


417497
402078

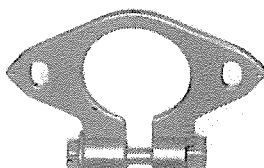


417615

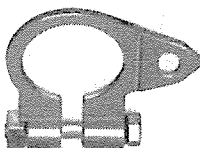


420151

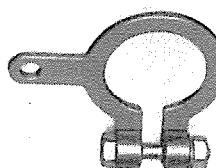

420617

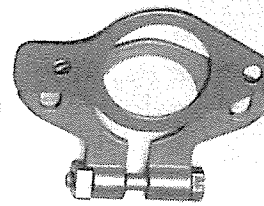


420663

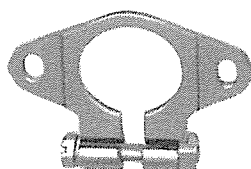


421191




421305

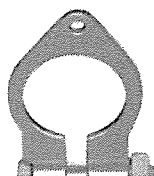


422311

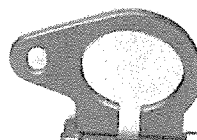

423605

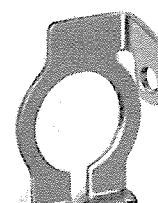


54410620

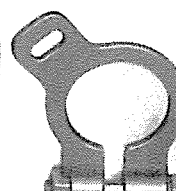


54410930

For detailed spare parts, see pages F8-F57

 
DISTRIBUTORS




MICRO ADJUSTING NUTS

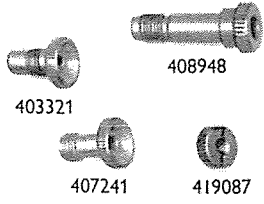


VACUUM CONTROL UNITS

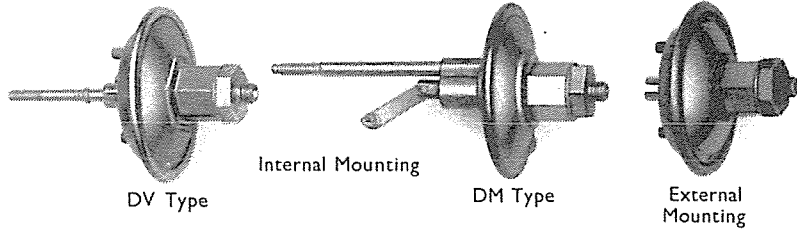


MICRO DETAILS SET

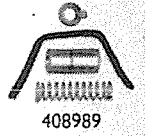


MICROMETER LEVERS

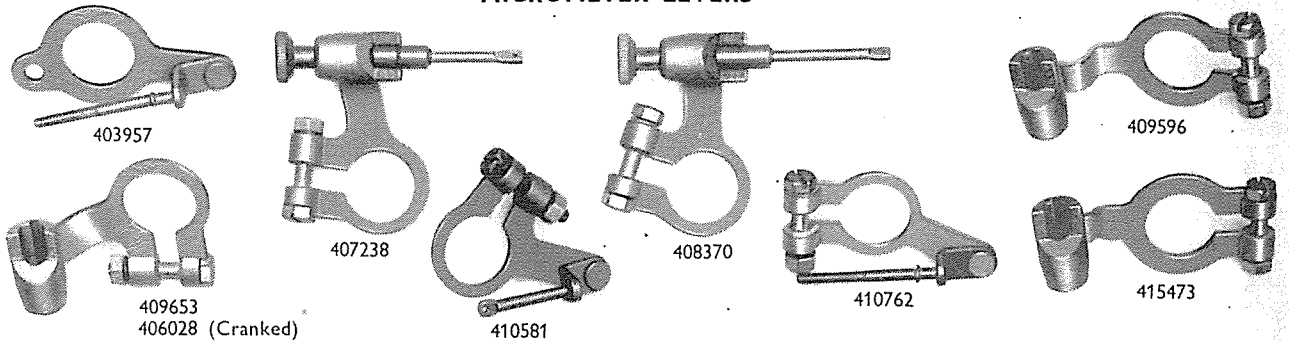

MICROMETER ASSEMBLIES

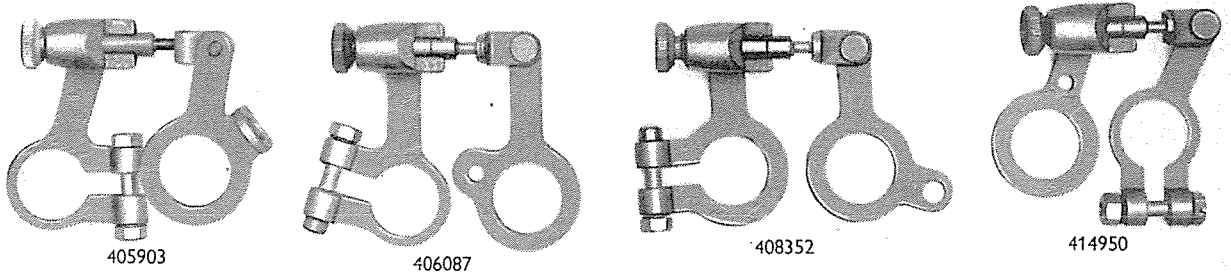

BRACKETS, VACUUM CONTROL UNITS

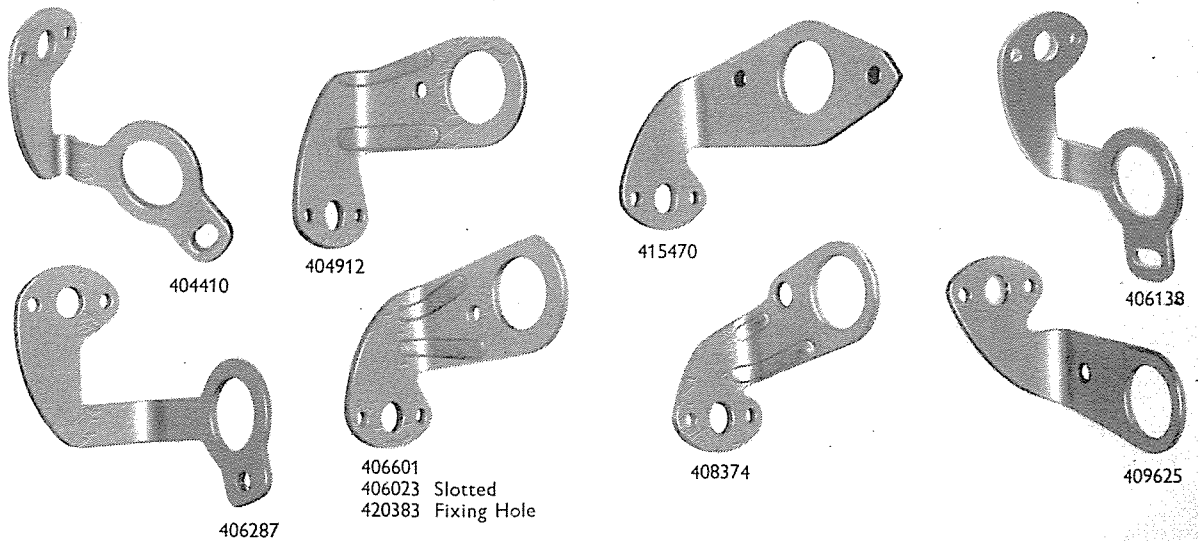

For detailed spare parts, see pages F8-F57

DETAILED SPARE PARTS

40012 — 40050

DISTRIBUTORS

Part No.	†40012A/B	40027A/B	†40033A	†40033B/D	†40033E	†40033F/J	†40042A	†40042B/D	†40045A	†40047A/D	†40048A/F	†40050A/J
Model	DUH6A	DKH4A	DZ6A	DVZ6A	DVZ6A	DVZ6A	DKYH4A	DKZH4A	DZ6A	DZ6A	DKY4A	DKYH4A
Type	BN139	V49-I	P29-1	P34	P34	P34	S65	S65	BS46-0	BS48-0	DA34	S76
Rotation	Clock	Clock	Clock	Clock	Clock	Clock	Anti-clock	Anti-clock	Clock	Clock	Clock	Anti-clock
Earth Return or Insulated Return	I.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	320	187	249	249	249	249	333	333	346	307	279	314
Range	14°-16°	12°-14°	11½°-13½°	11½°-13½°	11½°-13½°	11½°-13½°	16°-18°	16°-18°	19°-21°	10°-12½°	14°-16°	9°-11°
Replaced by (see footnote)	(40339)	—	(40404)	(40404)	(40404)	(40404)	(40074 & 401091)	(40074 & 401091)	(40179)	(40175)	(40162)	(40070)
§Plate/lever, clamping, timing or micrometer	407238	405588	—	412201	412201	412201	405588	405588	—	—	405903	405588
Screw, or nut and screw assembly	—	401119	401119	412202	412202	415087	401119	401119	401119	401119	401119	401119
Spring, ratchet, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Spring, return, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Unit, vacuum control	402306	—	402345	419071	419071	419071	—	—	—	—	—	—
Housing, micrometer	—	—	—	414713	414713	414713	—	—	—	—	—	—
Terminal details, housing	—	—	—	408986	408986	408986	—	—	—	—	—	—
§Nut, adjusting, micrometer	403321	—	—	—	—	—	—	—	—	—	403321	—
§Details set, micrometer	—	—	—	408989	408989	408989	—	—	—	—	408989	—
§Bracket, vacuum control unit	406601	—	406601	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	410581	—	—	—	—	—	406015	406015	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	—	—	—	—	—	—	410601	410601	—	—	+	410601
§Distributor, service	†40012/S (40339)	40027/S	40033/S	—	—	—	†40042/S (40074)	†40042/S (40074)	†40045/S (40179)	†40047/S (40175)	†40048/S (40162)	—
§ Cap, distributor	404520	400316	407043	407043	407043	407043	409635	409635	407043	407043	418888	409635
Nut, cable securing	—	—	410600	410600	410600	410600	—	—	410600	410600	410600	—
Brush and spring	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435
Rotor arm	410876	400051	415088	415088	415088	415088	400052	400052	415088	415088	400051	400052
Contact breaker, complete	—	400164	—	—	—	—	409614	409614	—	—	409614	409614
Contact set	400415	400415	407050	407050	407050	407050	407050	407050	407050	407050	407050	407050
Condenser	400308	400308	407044	407044	407044	407044	—	—	407044	407044	—	—
Base plate, contact breaker (with condenser on DKY)	406469	400001	410520	408940	408940	408940	409613	409613	410520	410520	409613	409613
Plate, bearing, contact breaker	—	—	—	—	—	—	—	—	—	—	—	—
Spring, star, base fixing	—	—	—	410712	410712	410712	—	—	—	—	—	—
Circlip, base fixing	—	—	—	414728	414728	414728	—	—	—	—	—	—
§ Pin, terminal and details, L.T.	123120	123022	—	408988	408988	408988	405314	405314	—	—	405314	405314
Bush, insulating, inside L.T. terminal or bridge	—	—	—	408945	408945	408945	409565	409565	—	—	409565	409565
Piece/pad, shaped, insulating, L.T. terminal	—	—	—	408944	408944	408944	405319	405319	—	—	405319	405319
Bush, contact breaker spring	—	409894	—	—	—	—	—	—	—	—	—	—
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Lead or connector, L.T.	—	400034	407010	407010	407010	407010	409568	409568	407010	407010	409568	409568
Lead, earth	—	—	—	414715	414715	414715	—	—	—	—	—	—
Cam	419947	420588	410509	414707	414707	414707	496016	410027	410509	410509	420588	496016
Springs, set, auto-advance	408534/S	404458	416089/S	416089/S	416089/S	416089/S	409644	—	410605/S	410605/S	404598	407206/S
Toggle	400141	400141	—	—	—	—	400141	—	—	—	400141	400141
Weight	403268	400149	410033/S	410033/S	410033/S	410033/S	400150	410033/S	410033/S	410033/S	400149	400150
Plate, shaft and action	404887	400116	410021	414704	414704	414704	409592	—	410021	410021	409579	409588
Lubricator	400304	400304	—	—	—	—	—	—	—	—	—	—
Bearing, bushing, top	—	404374	189272	189272	189272	189272	404374	404374	404374	404374	404374	404374
Bushing, bottom	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590
Clip, cap retaining	420261	420261	420261	420262/S	420262/S	420262/S	420261	420261	420261	420261	420261	420261
§Sundry parts, set	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Supplied by Vehicle Manufacturer
 § Recommended spares for stock

DETAILED SPARE PARTS

Part No.	40051A/B	†40052A	40053A	40053B/H	40054A/E	†40055A/B	†40056A/J	†40057F/H	40058A	†40058D/F	†40060A	40061A/D
Model	DY6A	DKZH4A	DKZH4A	DKYH4A	DKYH4A	DKY4A	DKYH4A	DKY4A	DKY4A	DKY4A	DZ6A	DVX4A
Type	AA64-0	V105-0	V106	V106	BQ22	BN157-2	A146	GC29	A131	A131	C43-0	BQ23
Rotation	Clock	Clock	Clock	Clock	Anti-clock	Clock	Clock	Anti-clock	Clock	Clock	Anti-clock	Anti-clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	418	282	332	463	337	354	469	338	267	267	340	230
Range	13°-15°	12°-14°	9°-11°	9°-11°	9°-11°	16°-18°	9°-11°	22°-24°	14°-16°	14°-16°	11½°-13°	9°-11°
Replaced by (see footnote)	—	(40195/S)	—	—	—	(40085)	(40251)	(40091)	—	(40197)	(40110)	—
§Plate/lever, clamping, timing or micrometer	405903	405588	405588	405588	405588	—	404422	—	404422	404422	—	405588
Screw, or nut and screw assembly	401119	401119	401119	401119	401119	401119	401119	401092	401119	401119	401119	401119
Spring, ratchet, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Spring, return, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Unit, vacuum control	—	—	—	—	—	419061	—	—	—	—	—	491064
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—	—	408914
Terminal details, housing	—	—	—	—	—	—	—	—	—	—	—	408986
§Nut, adjusting, micrometer	403321	—	403321	—	—	407241	—	—	—	—	—	408948
§Details set, micrometer	408989	—	408989	—	—	408989	—	—	—	—	—	408989
§Bracket, vacuum control unit	—	—	—	—	—	406601	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	409653	—	—	—	—	410612	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	+	+	+	+	410601	—	410601	+	+	+	—	410601
§Distributor, service	40051/S	†40052/S (40195/S)	40053/S	40053/S	40054/S	—	—	—	†40058/S (40197)	†40058/S (40197)	40060/S	—
§ Cap, distributor	407043	409635	409635	409635	409635	418888	409635	418888	418888	418888	407043	415298
Nut, cable securing	410600	—	—	—	—	410600	—	410600	410600	410600	410600	410600
Brush and spring	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435
Rotor arm	415088	400051	400051	400051	400052	400051	400051	400051	400051	400051	407106	408357
Contact breaker, complete	—	409614	409614	409614	409614	409614	409614	409614	409614	409614	—	—
Contact set	407050	407050	407050	407050	407050	407050	407050	407050	407050	407050	407050	407050
Condenser	407044	—	409613	—	—	—	—	—	—	—	407044	407044
Base plate, contact breaker (with condenser on DKY)	410520	409613	—	409613	409613	409613	409613	409613	409613	409613	410520	408940
Plate, bearing, contact breaker	—	—	—	—	—	—	—	—	—	—	—	—
Spring, star, base fixing	—	—	—	—	—	—	—	—	—	—	—	410712
Circlip, base fixing	—	—	—	—	—	—	—	—	—	—	—	414728
§ Pin, terminal and details, L.T.	407019	405314	405314	405314	405314	405314	405314	405314	405314	405314	—	408988
Bush, insulating, inside L.T. terminal or bridge	407006	409565	409565	409565	409565	409565	409565	409565	409565	409565	—	408945
Piece/pad, shaped, insulating, L.T. terminal	407018	405319	405319	405319	405319	405319	405319	405319	405319	405319	—	408944
Bush, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Lead or connector, L.T.	407010	409568	409568	409568	409568	409568	409568	409568	409568	409568	407010	407010
Lead, earth	—	—	—	—	—	—	—	—	—	—	—	414715
Cam	419947	418426	418426	420588	496016	420588	420588	496016	420588	420588	—	409921
Springs, set, auto-advance	407267/S	410604	410604	404461	409637/S	416001/S	419407	410137	405583	404598	410049/S	405396/S
Toggle	400141	—	—	400141	400141	418706	418706	400141	—	400141	—	407131
Weight	400149	410033/S	410033/S	400149	400150	400149	400149	400150	400149	400149	410033/S	415730
Plate, shaft and action	407183	410021	410021	409576	409588	409561	409576	409656	409579	409651	410022	409958
Lubricator	—	—	—	—	—	—	—	—	—	—	—	—
Bearing, bushing, top	404374	404374	404374	404374	404374	404374	404374	404374	404374	404374	404374	189272
Bushing, bottom	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590
Clip, cap retaining	420261	420261	420261	420261	420261	420261	420261	420261	420261	420261	420261	420262/S
§Sundry parts, set	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843

DISTRIBUTORS

40051 — 40061

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Supplied by Vehicle Manufacturer § Recommended spares for stock

DETAILED SPARE PARTS

F10

40061 — 40071

DISTRIBUTORS

Part No.	40061E	40061F/H	40062A/E	40063B	40064A/F	40066A	40068A/F	40069A/B	40069D/H	40070A/E	40071A/B	40071D/F
Model	DVX4A	DVX4A	DKY4A	DY6A	DKY4A	DXH6A	D4A8	DK4A	DKY4A	DKYH4A	DKY4A	DKY4A
Type	BQ23	BQ23	BP81	AA65-0	AA66	GC30	CW	FA51	FA51	S77	BU36	BU36
Rotation	Anti-clock	Anti-clock	Anti-clock	Clock	Clock	Clock	Clock	Anti-clock	Anti-clock	Anti-clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	230	230	372	420	393	342	436	95	417	230	363	363
Range	9°-11°	9°-11°	14°-16°	16°-18°	18°-20°	20°-23°	—	16°-18°	16°-18°	9°-11°	23°-27°	23°-27°
§Plate/lever, clamping, timing or micrometer	405588	405588	405588	405903	405903	—	411012	405588	—	—	—	—
Screw, or nut and screw assembly	401119	401119	401119	401119	401119	401092	—	401119	401119	401119	401092	401092
Spring, ratchet, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Spring, return, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Unit, vacuum control	419064	419064	—	—	—	—	—	—	—	400881	—	—
§Housing, micrometer	408914	408914	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	408986	408986	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	408948	408948	—	403321	403321	—	—	—	—	—	—	—
§Details set, micrometer	408989	408989	—	408989	408989	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	406287	—	—
§Lever, actuating	—	—	—	—	—	409660	—	—	405448	406298	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	410601	410601	—	—	—	—	405282	410601	410601	410601	410601	410601
§Distributor, service	—	—	40062/S	40063/S	40064/S	40066/S	—	40069/S	40069/S	40070/S	40071/S	40071/S
Cap, distributor	415298	415298	418888	407043	418888	407279	418183	400135	418888	409635	418888	418888
Nut, cable securing	410600	410600	410600	410600	410600	—	—	410600	410600	—	410600	410600
Brush and spring	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435
Rotor arm	408357	408357	400052	415088	400051	415088	411031	400052	400052	400052	400051	400051
Contact breaker, complete	—	—	409614	—	409614	—	—	400164	409614	409614	409614	409614
Contact set	407050	407050	407050	407050	407050	407050	415359	400415	407050	407050	407050	407050
Condenser	407044	407044	—	407044	—	407044	400308	400308	—	—	—	—
Base plate, contact breaker (with condenser on DKY)	408940	408940	409613	410520	409613	410520	414618	400001	409613	409613	409613	409613
Plate, bearing, contact breaker	—	—	—	—	—	—	—	—	—	—	—	—
Spring, star, base fixing	410712	410712	—	—	—	—	—	—	—	—	—	—
Circlip, base fixing	414728	414728	—	—	—	—	—	—	—	—	—	—
§ Pin, terminal and details, L.T.	408988	408988	405314	407019	405314	407019	123003	123022	405314	405314	405314	405314
Bush, insulating, inside L.T. terminal or bridge	408945	408945	409565	407006	409565	407006	409172	—	409565	409565	409565	409565
Piece/pad, shaped, insulating, L.T. terminal	408944	408944	405319	407018	405319	407018	161714	—	405319	405319	405319	405319
Bush, contact breaker spring	—	—	—	—	—	—	—	409894	—	—	—	—
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
§ Lead or connector, L.T.	407010	407010	409568	407010	409568	407010	—	400034	409568	409568	409568	409568
Lead, earth	414715	414715	—	—	—	—	—	—	—	—	—	—
Cam	409921	409921	496016	419947	420588	54411781	—	496016	496016	496016	420588	420588
Springs, set, auto-advance	405396/S	405396/S	407371	417373	405748/S	416076/S	—	406136/S	406136/S	416146/S	407267/S	406136/S
Toggle	407131	407131	400141	400141	400141	407131	—	400141	400141	400141	400141	418706
Weight	415730	415730	400150	400149	400149	415729	—	400150	400150	400150	400149	400149
Plate, shaft and action	409958	409958	409591	407185	409582	422182	414630	400130	409592	409588	409583	409583
Lubricator	—	—	—	—	—	—	—	400304	—	—	—	—
Bearing, bushing, top	189295	189272	404374	404374	404374	404374	—	404374	404374	404374	404374	404374
Bushing, bottom	410590	410590	410590	410590	410590	410590	189315	410590	410590	410590	410590	410590
Clip, cap retaining	420262/S	420262/S	420261	420261	420261	420261	414585	420261	420261	420261	420261	420261
§Sundry parts, set	400843	400843	400843	400843	400843	400843	—	400843	400843	400843	400843	400843

§ Recommended spares for stock

For illustrations, see pages F2-F7

continued

DETAILED SPARE PARTS

Part No.	40074A/F	40076A/F	40077D	40079A/B	40079D	†40080A	40081A/F	40085A	†40088A	40089A/E	40090A/E	40091A/H
Model	DKYH4A	DKYH4A	DU8A	DKX1A	DKX1A	DXH6A	DKY4A	DKY4A	DKY4A	DKYH4A	DVX6A	DKY4A
Type	V113	V116	BS51	AC33-1	AC33	GC31	CH28	BN157-2	BN169	DA36	GF19-0	GC34
Rotation	Anti-clock	Clock	Clock	Clock	Clock	Clock	Anti-clock	Clock	Clock	Clock	Anti-clock	Anti-clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	347	348	350	242	242	351	356	354	355	358	289	338
Range	16°-18°	11½°-13°	12°-15°	9°-11°	9°-11°	14°-16°	18°-20°	16°-18°	16°-18°	14°-16°	11½°-13°	22°-24°
Replaced by (see footnote)	—	—	—	—	—	(40093)	—	—	(40269)	—	—	—
§Plate/lever, clamping, timing or micrometer	403959	405588	406015	406105	406105	—	—	409653	409653	404422	415731	—
Screw, or nut and screw assembly	401082	401119	401119	401119	401119	401092	—	401119	401119	401119	412202	401082
Spring, ratchet, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Spring, return, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Unit, vacuum control	—	—	—	—	—	—	—	400890	400890	—	419074	—
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—	408914	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—	408986	—
§Nut, adjusting, micrometer	403321	—	—	—	—	—	—	407241	407241	—	—	403321
§Details set, micrometer	408989	—	—	—	—	—	—	—	—	—	408989	408989
§Bracket, vacuum control unit	—	—	—	—	—	—	—	410584	410584	—	—	—
§Lever, actuating	403957	—	—	—	—	409660	—	—	—	—	—	403957
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	†	—	†	†	—	—	—	—	—	—	—	†
§Distributor, service	40074/S	40076/S	40077/S	40079/S	40079/S	†40080/S (40093)	40081/S	40085/S	†40088/S (40269)	40089/S	—	40091/S
§ Cap, distributor	409635	409635	488858	402101	402101	407279	418888	418888	418888	409635	407043	418888
§ Nut, cable securing	—	—	410600	—	—	—	410600	410600	410600	—	410600	410600
§ Brush and spring	404435	404435	404435	—	—	404435	404435	404435	404435	404435	404435	404435
§ Rotor arm	400052	400051	411031	—	—	415088	400052	400051	400051	400051	407106	400052
§ Contact breaker, complete	409614	409614	—	400164	400164	—	409614	409614	409614	409614	—	409614
Contact set	407050	407050	403670	400415	400415	407050	407050	407050	407050	407050	407050	407050
Condenser	—	—	400308	400308	400308	407044	—	—	—	—	407044	—
§ Base plate, contact breaker (with condenser on DKY)	409613	409613	415488	400001	400001	410520	409613	409613	409613	409613	408940	409613
Plate, bearing, contact breaker	—	—	—	—	—	—	—	—	—	—	—	—
Spring, star, base fixing	—	—	—	—	—	—	—	—	—	—	410712	—
Circlip, base fixing	—	—	—	—	—	—	—	—	—	—	414728	—
§ Pin, terminal and details, L.T.	405314	405314	123120	123022	123022	407019	405314	405314	405314	405314	408988	405314
Bush, insulating, inside L.T. terminal or bridge	409565	409565	—	—	—	407006	409565	409565	409565	409565	408945	409565
Piece/pad, shaped, insulating, L.T. terminal	405319	405319	‡405139/S	—	—	407018	405319	405319	405319	405319	408944	405319
Bush, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
§ Lead or connector, L.T.	409568	409568	—	400034	400034	407010	409568	409568	409568	409568	407010	409568
Lead, earth	—	—	—	—	—	—	—	—	—	—	414715	—
Cam	496016	420588	496086	407932	407932	54411781	496016	420588	420588	420588	408999	496016
Springs, set, auto-advance	416004/S	404461	408534/S	405395/S	405395/S	407360/S	416012/S	416001/S	416004/S	406136/S	404458	410137
Toggle	400141	418706	400141	407131	407131	407131	400141	400141	400141	400141	407131	400141
Weight	400150	400149	403268	415729	415729	415729	400150	400149	400149	400149	415730	400150
Plate, shaft and action	409592	409577	408532	416556	416556	407366	409593	409651	409651	409651	415121	409656
Lubricator	—	—	403654	405394	—	—	—	—	—	—	—	—
Bearing, bushing, top	404374	404374	189272	404374	404374	404374	404374	404374	404374	404374	189272	404374
Bushing, bottom	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590
Clip, cap retaining	420261	420261	425765	420261	420261	420261	420261	420261	420261	420261	420262/S	420261
§Sundry parts, set	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843

DISTRIBUTORS

40074 — 40091

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Supplied by Vehicle Manufacturer
 § Recommended spares for stock ¶ Felt with packing springs

DETAILED SPARE PARTS

F12

40092 — 40107

Part No.	40092A	40092B/E	40093A	40093B/D	40094A/D	†40096A	†40096B/D	40100A/E	40103A/D	40105A/B	40105D	†40107A/B
Model	DXH6A	DXH6A	DXH6A	DXH6A	D9A2	DXH6A	DXH6A	DKH4A	DVXH4A	DVXH6A	DVXH6A	DX6A
Type	GC36	GC36	GC37	GC37	EM7	GC38	GC38	CJ26	G71	G73	G73	BN172
Rotation	Clock	Clock	Clock	Clock	Anti-clock	Clock	Clock	Anti-clock	Clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	357	382	351	351	304	357	382	362	403	266	403	355
Range	16°-18°	13°-15°	14°-16°	14°-16°	14°-16°	16°-18°	13°-15°	13°-15°	11°-13°	9°-11°	11°-13°	16°-18°
Replaced by (see footnote)	—	—	—	—	—	(40092)	(40092)	—	—	—	—	(40161)
§Plate/lever, clamping, timing or micrometer	414950	414950	414950	414950	415158	—	—	404411	414909	414909	414909	—
Screw, or nut and screw assembly	401119	401119	401119	401119	—	401092	401092	401082	412202	412202	412202	401119
Spring, ratchet, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Spring, return, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Unit, vacuum control	—	—	—	—	—	—	—	400898	419066	419066	419066	400890
§Housing, micrometer	—	—	—	—	—	—	—	—	408913	408913	408913	—
Terminal details, housing	—	—	—	—	—	—	—	—	408986	408986	408986	—
§Nut, adjusting, micrometer	403321	403321	403321	403321	—	—	—	—	408948	408948	408948	407241
§Details set, micrometer	408989	408989	408989	408989	—	—	—	—	408989	408989	408989	408989
§Bracket, vacuum control unit	—	—	—	—	—	—	—	404410	—	—	—	406601
§Lever, actuating	410762	410762	—	410762	—	409660	409660	—	—	—	—	409653
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	—	—	—	—	410601	—	—	410601	410601	410601	410601	—
§Distributor, service	40092/S	40092/S	40093/S	40093/S	—	†40096/S (40092)	†40096/S (40092)	40100/S	—	—	—	†40107/S (40161)
§ Cap, distributor	407279	407279	407279	407279	415146	407279	407279	400316	415707	415708	415708	407043
Nut, cable securing	—	—	—	—	—	—	—	—	—	—	—	410600
Brush and spring	404435	404435	404435	404435	—	404435	404435	404435	404435	404435	404435	404435
Rotor arm	415088	418726	415088	415088	—	415088	415088	400052	408355	415088	415088	415088
Contact breaker, complete	—	—	—	—	—	—	—	400164	—	—	—	—
Contact set	407050	407050	407050	407050	415359	407050	407050	400415	407050	407050	407050	407050
Condenser	407044	424535	407044	407044	415140	407044	407044	400308	407044	407044	407044	407044
§ Base plate, contact breaker (with condenser on DKY)	410520	410520	410520	410520	—	410520	410520	400001	408940	408940	408940	410520
Plate, bearing, contact breaker	—	—	—	—	—	—	—	—	—	—	—	—
Spring, star, base fixing	—	—	—	—	—	—	—	—	410712	410712	410712	—
Circlip, base fixing	—	—	—	—	—	—	—	—	414728	414728	414728	—
§ Pin, terminal and details, L.T.	407019	407019	407019	407019	—	407019	407019	123022	408988	408988	408988	407019
Bush, insulating, inside L.T. terminal or bridge	407006	407006	407006	407006	—	407006	407006	—	408945	408945	408945	407006
Piece/pad, shaped, insulating, L.T. terminal	407018	407018	407018	407018	—	407018	407018	—	408944	408944	408944	407018
Bush, contact breaker spring	—	—	—	—	—	—	—	409894	—	—	—	—
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Lead or connector, L.T.	407010	—	407010	407010	—	407010	407010	400034	407010	407010	407010	407010
Lead, earth	—	—	—	—	—	—	—	—	414715	414715	414715	—
Cam	54411781	54411781	54411781	54411781	415138	54411781	54411781	496016	409922	408999	408999	54411781
Springs, set, auto-advance	407231/S	405396/S	407360/S	407360/S	405395/S	407231/S	405396/S	405396/S	416051/S	416051/S	416051/S	416004/S
Toggle	407131	407131	407131	407131	407131	407131	407131	400141	407131	407131	407131	407131
Weight	415729	415729	415729	415729	415730	415729	415729	400150	415729	415729	415729	415729
Plate, shaft and action	407366	416539	407366	407366	415135	407366	407366	400127	410767	408991	410767	416558
Lubricator	—	—	—	—	—	—	—	400304	—	—	—	—
Bearing, bushing, top	404374	404374	404374	404374	404374	404374	404374	404374	189272	189272	189272	404374
Bushing, bottom	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590
Clip, cap retaining	420261	420261	420261	420261	420261	420261	420261	420261	420262/S	420262/S	420262/S	420261
§Sundry parts, set	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843

DISTRIBUTORS

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets § Recommended spares for stock

For illustrations, see pages F2-F7

continued

DETAILED SPARE PARTS

Part No.	40109A	40109B	40109D	40110A/B	40112A	†40113B	40114A/B	40115F	40115H	†40116A	†40116B	†40116D/E
Model	DX6A	DX6A	DX6A	DX6A	DVX4A	DY6A	DVXH4A	DKYH4A	DKYH4A	DVXH6A	DVXH6A	DVZH6A
Type	WG2	WG2	WG2	C43	BS49	AA76-0	BQ28-0	AJ33	AJ33	T73-0	T73-0	T73
Rotation	Anti-clock	Anti-clock	Anti-clock	Anti-clock	Clock	Clock	Anti-clock	Clock	Clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	369	369	369	340	371	372	290	398	427	375	387	387
Range	18°-20°	18°-20°	18°-20°	8°-9½°	16°-18°	14°-16°	14°-16°	9°-11°	9°-11°	16°-18°	14°-16°	14°-16°
Replaced by (see footnote)	—	—	—	—	—	(40063)	—	—	—	(40359)	(40359)	(40359)
§Plate/lever, clamping, timing or micrometer	—	—	—	—	409934	405903	415158	—	—	415158	415158	418206
Screw, or nut and screw assembly	401119	401119	401119	401119	401119	401119	415087	401082	401082	415087	415087	415087
Spring, ratchet, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Spring, return, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Unit, vacuum control	—	—	—	—	419065	—	418958	400922	400922	419066	419066	419066
§Housing, micrometer	—	—	—	—	408913	—	408914	—	—	408913	408913	408913
Terminal details, housing	—	—	—	—	408986	—	408986	—	—	408986	408986	408986
§Nut, adjusting, micrometer	—	—	—	—	408948	403321	408948	—	—	408948	408948	408948
§Details set, micrometer	—	—	—	—	408989	408989	408989	—	—	408989	408989	408989
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	410612	410612	410612	410612	—	—	—	405819	405819	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	+	—	—	—	—	—	—
§Dog or gear, driving	410601	410601	410601	—	—	+	410601	410601	410601	410601	410601	410601
§Distributor, service	40109/S	40109/S	40109/S	40110/S	—	†40113/S (40063)	—	40115/S	40115/S	—	—	—
§Cap, distributor	407043	407043	407043	407043	415298	407043	420760	409635	409635	415708	415708	415708
Nut, cable securing	410600	410600	410600	410600	410600	410600	—	—	—	—	—	—
Brush and spring	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435
Rotor arm	407106	407106	407106	407106	408355	415088	408357	400051	400051	415088	415088	415088
Contact breaker, complete	—	—	—	—	—	—	—	409614	409614	—	—	—
Contact set	407050	407050	407050	407050	407050	407050	407050	407050	407050	407050	407050	407050
Condenser	407044	407044	407044	407044	407044	407044	407044	—	—	407044	407044	407044
Base plate, contact breaker (with condenser on DKY)	410520	410520	410520	410520	408940	410520	408940	409613	409613	408940	408940	408940
Plate, bearing, contact breaker	—	—	—	—	—	—	—	—	—	—	—	—
Spring, star, base fixing	—	—	—	—	410712	—	410712	—	—	410712	410712	410712
Circlip, base fixing	—	—	—	—	414728	—	414728	—	—	414728	414728	414728
§Pin, terminal and details, L.T.	407019	407019	407019	407019	408988	407019	408988	405314	405314	408988	408988	408988
Bush, insulating, inside L.T. terminal or bridge	407006	407006	407006	407006	408945	407006	408945	409565	409565	408945	408945	408945
Piece/pad, shaped, insulating, L.T. terminal	407018	407018	407018	407018	408944	407018	408944	405319	405319	408944	408944	408944
Bush, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Lead or connector, L.T.	407010	407010	407010	407010	407010	407010	407010	409568	409568	407010	407010	407010
Lead, earth	—	—	—	—	414715	—	414715	—	—	414715	414715	414715
Cam	54411781	54411781	54411781	54411781	409922	419947	409921	420588	420588	408999	408999	414707
Springs, set, auto-advance	416019/S	416019/S	416019/S	407326/S	416001/S	407371	406137/S	406136/S	416076/S	410754	410765	414734
Toggle	407131	407131	407131	407131	407131	400141	407131	400141	400141	407131	407131	—
Weight	415730	415730	415730	415730	415729	400149	415730	400149	400149	415729	415729	410033/S
Plate, shaft and action	408475	408475	408475	407370	416525	407183	416400	409576	409576	410620	420191	414973
Lubricator	—	—	—	—	—	—	—	—	—	—	—	—
Bearing, bushing, top	189272	189295	189272	404374	189272	404374	189272	404374	404374	189272	189272	189272
Bushing, bottom	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590
Clip, cap retaining	420261	420261	420261	420261	420262/S	420261	420262/S	420261	420261	420262/S	420262/S	420262/S
§Sundry parts, set	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843

DISTRIBUTORS

40109 — 40116

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Supplied by Vehicle Manufacturer
§ Recommended spares for stock

DETAILED SPARE PARTS

40116 — 40130

DISTRIBUTORS

Part No.	†40116F	†40116H	†40117A/J	40121A/H	40123A/D	40125A/D	40125E/F	40126A/B	40126D	40126E	40129D/F	40130A
Model	DVZH6A	DVZH6A	DKY4A	DKY2A	DKYH4A	DVXH6A	DVXH6A	DKY2A	DKX2A	DKX2A	DKYH4A	DVX6A
Type	T73	T73	BN169	AJ30	BQ27	CC15	CC15	FY1	FY1	FY1	FA71	CM3-0
Rotation	Clock	Clock	Clock	Clock	Anti-clock	Anti-clock	Anti-clock	Anti-clock	Anti-clock	Anti-clock	Clock	Anti-clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	387	387	376	390	374	412	355	297	287	474	340	386
Range	14°-16°	14°-16°	16°-18°	18°-20°	13°-15°	23°-27°	16°-18°	11½°-13°	21°-23°	21°-23°	8°-9½°	20°-23°
Replaced by (see footnote)	(40359)	(40359)	(40269)	—	—	—	—	—	—	—	—	—
§Plate/lever, clamping, timing or micrometer	418206	417615	—	405588	415256	415158	415158	402078	402078	402078	—	415256
Screw, or nut and screw assembly	415087	415087	401119	401119	412202	415087	415087	401092	401092	401092	401119	412202
Spring, ratchet, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Spring, return, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Unit, vacuum control	419066	419066	419061	—	—	419064	419073	—	—	—	—	418958
§Housing, micrometer	408913	414713	—	—	—	408914	408914	—	—	—	—	408914
Terminal details, housing	408986	408986	—	—	—	408986	408986	—	—	—	—	408986
§Nut, adjusting, micrometer	408948	408948	407241	—	—	408948	408948	—	—	—	—	408948
§Details set, micrometer	408989	408989	408989	—	—	408989	408989	—	—	—	—	408989
§Bracket, vacuum control unit	—	—	406601	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	409653	—	—	—	—	—	—	—	404370	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	146460	146460	—	—
§Dog or gear, driving	410601	410601	—	—	410601	410601	410601	220498	220498	220498	410601	—
§Distributor, service	—	—	—	40121/S	40123/S	—	—	40126/S	40126/S	40126/S	40129/S	—
Cap, distributor	417178	417178	418888	409603	409635	417178	417178	409603	400136	400136	409635	407043
Nut, cable securing	—	—	410600	410600	—	—	—	410600	410600	410600	—	410600
Brush and spring	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435
Rotor arm	415088	415088	400051	400051	400052	407106	407106	400052	400052	400052	400051	407106
Contact breaker, complete	—	—	409614	409614	409614	—	—	409614	400164	400164	409614	—
Contact set	407050	407050	407050	407050	407050	407050	407050	407050	400415	400415	407050	407050
Condenser	407044	407044	—	—	—	407044	407044	—	400308	400308	—	407044
Base plate, contact breaker (with condenser on DKY)	408940	408940	409613	409613	409613	408940	408940	409613	400001	400001	409613	408940
Plate, bearing, contact breaker	—	—	—	—	—	—	—	—	—	—	—	—
Spring, star, base fixing	410712	410712	—	—	—	410712	401712	—	—	—	—	410712
Circlip, base fixing	414728	414728	—	—	—	414728	414728	—	—	—	—	414728
§ Pin, terminal and details, L.T.	408988	408988	405314	405314	405314	408988	408988	405314	123022	123022	405314	408988
Bush, insulating, inside L.T. terminal or bridge	408945	408945	409565	409565	409565	408945	408945	409565	—	—	409565	408945
Piece/pad, shaped, insulating, L.T. terminal	408944	408944	405319	405319	405319	408944	408944	405319	—	—	405319	408944
Bush, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
§ Lead or connector, L.T.	407010	407010	409568	409568	409568	407010	407010	409568	400034	400034	409568	407010
Lead, earth	414715	414715	—	—	—	414715	414715	—	—	—	—	414715
Cam	414707	414707	420588	414915	496016	408999	408999	418996	415283	415283	420588	408999
Springs, set, auto-advance	414734	414734	416001/S	408541	406136/S	407267/S	416004/S	407326/S	407326/S	416123/S	416019/S	406350
Toggle	—	—	418706	400141	400141	407131	407131	400141	407131	407131	400141	407131
Weight	410033/S	410033/S	400149	400149	400150	415730	415730	400150	415730	415730	400149	415730
Plate, shaft and action	414973	414973	409651	409582	409591	416520	416543	409588	416537	416548	409576	416502
Lubricator	—	—	—	—	—	—	—	—	—	—	—	—
Bearing, bushing, top	189272	189272	404374	404374	404374	189272	189272	404374	404374	404374	404374	189272
Bushing, bottom	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590
Clip, cap retaining	420262/S	420262/S	420261	420261	420261	420262/S	420262/S	420261	420261	420261	420261	420262/S
§Sundry parts, set	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets § Recommended spares for stock

For illustrations, see pages F2-F7

continued

F14

DETAILED SPARE PARTS

Part No.	40130B	40130D/E	‡40131A	‡40131B	40133A/E	40135A/B	40135D	40135E/H	†40137A/F	40140A/B	40140D	40140F/H
Model	DVX6A	DVX6A	DX6A	DX6A	DX6A	DVXH6A	DVXH6A	DVXH6A	DX6A	DVX4A	DVXH4A	DVXH4A
Type	CM3	CM3	CM3-0	CM3	BN161	T71	T71	T71	BS52	FJ6	FJ6	FJ6
Rotation	Anti-clock	Anti-clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Anti-clock	Anti-clock	Anti-clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	342	342	386	342	320D	266B	266B	266B	391	394A	394A	394A
Range	20°-23°	20°-23°	20°-23°	20°-23°	14°-16°	9°-11°	9°-11°	9°-11°	16°-18°	9°-11°	9°-11°	9°-11°
Replaced by (see footnote)	—	—	—	—	—	—	—	—	(40179)	—	—	—
§Plate/lever, clamping, timing or micrometer	415256	415256	415256	415256	—	405588	405588	405588	—	—	—	—
Screw, or nut and screw assembly	412202	412202	412202	412202	401119	401119	401119	401119	401119	—	—	—
Spring, ratchet, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Spring, return, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Unit, vacuum control	418958	418958	—	—	400853	418958	418958	418958	—	419072	419072	419072
§Housing, micrometer	408914	408914	—	—	—	408913	408913	408913	—	408914	408914	408914
Terminal details, housing	408986	408986	—	—	—	408986	408986	408986	—	408986	408986	408986
§Nut, adjusting, micrometer	408948	408948	—	—	403321	408948	408948	408948	—	408948	408948	408948
§Details set, micrometer	408989	408989	—	—	408989	408989	408989	408989	—	408989	408989	408989
§Bracket, vacuum control unit	—	—	—	—	—	406601	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	407238	—	—	406015	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	—	—	—	—	—	—	—	—	—	410601	410601	—
§Distributor, service	—	—	40131/S	40131/S	40133/S	—	—	—	†40137/S (40179)	—	—	—
§§ Cap, distributor	407043	407043	407043	407043	407043	415708	415708	415708	407043	415298	420760	420760
Nut, cable securing	410600	410600	410600	410600	410600	—	—	—	410600	410600	—	—
Brush and spring	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435
Rotor arm	407106	407106	415088	415088	415088	415088	415088	415088	415088	408357	408357	408357
Contact breaker, complete	—	—	—	—	—	—	—	—	—	—	—	—
Contact set	407050	407050	407050	407050	407050	407050	407050	407050	407050	407050	407050	407050
Condenser	407044	407044	407044	407044	407044	407044	407044	407044	407044	407044	407044	407044
Base plate, contact breaker (with condenser on DKY)	408940	408940	410520	410520	410520	408940	408940	408940	410520	408940	408940	408940
Plate, bearing, contact breaker	—	—	—	—	—	—	—	—	—	—	—	—
Spring, star, base fixing	410712	410712	—	—	—	410712	410712	410712	—	410712	410712	410712
Circlip, base fixing	414728	414728	—	—	—	414728	414728	414728	—	414728	414728	414728
§ Pin, terminal and details, L.T.	408988	408988	407019	407019	407019	408988	408988	408988	407019	408988	408988	408988
Bush, insulating, inside L.T. terminal or bridge	408945	408945	407006	407006	407006	408945	408945	408945	407006	408945	408945	408945
Piece/pad, shaped, insulating, L.T. terminal	408944	408944	407018	407018	407018	408944	408944	408944	407018	408944	408944	408944
Bush, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Lead or connector, L.T.	407010	407010	407010	407010	407010	407010	407010	407010	407010	407010	407010	407010
Lead, earth	414715	414715	—	—	—	414715	414715	414715	—	414715	414715	414715
Cam	408999	408999	54411781	54411781	54411781	408999	408999	408999	54411781	409921	409921	409921
Springs, set, auto-advance	407256/S	407256/S	406350	407256/S	409644	407248/S	407248/S	407248/S	408540	415745	415745	415745
Toggle	407131	407131	407131	407131	407131	407131	407131	407131	407131	407131	407131	407131
Weight	415730	415730	415729	415729	415729	415729	415729	415729	415729	415730	415730	415730
Plate, shaft and action	416502	416502	422182	422182	416512	408991	408991	408991	407366	409958	409958	409958
Lubricator	—	—	—	—	—	—	—	—	—	—	—	—
Bearing, bushing, top	189295	189272	404374	404374	404374	189272	189295	189272	404374	189272	189272	189272
Bushing, bottom	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590
Clip, cap retaining	420262/S	420262/S	420261	420261	420261	420262/S	420262/S	420262/S	420261	420262/S	420262/S	420262/S
§Sundry parts, set	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843

DISTRIBUTORS

40130 — 40140

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Return unit for possible repair
 § Recommended spares for stock || Supplied by Vehicle Manufacturer

DETAILED SPARE PARTS

F16

40141 — 40149

DISTRIBUTORS

Part No.	40141A/F	40142A/F	40143A/D	40143E/F	†40144A/B	†40144D/E	†40147A	†40147B	†40147D/H	†40148A/F	40149A	40149B/D
Model	DKYH4A	DKY4A	DX6A	DX6A	DKY4A	DKY4A	DVX6A	DVX6A	DVX6A	DKY4A	DVXH6A	DVXH6A
Type	BN182	AA74	D8	D8	V140	V140	BN186	BN186	BN186	AE4	GC42	GC42
Rotation	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Anti-clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	392	395J	396	396	397K	409L	399	399	399	405M	411	411
Range	20°-23°	20°-23°	16°-18°	16°-18°	11°-13°	20°-23°	13°-15°	13°-15°	13°-15°	18°-20°	13°-15°	13°-15°
Replaced by (see footnote)	—	—	—	—	(40071)	(40071)	(40371)	(40371)	(40371)	(40081)	—	—
§Plate/lever, clamping, timing or micrometer	—	405903	—	405903	415256	415256	—	—	415256	—	409660	405588
Screw, or nut and screw assembly	401119	401119	401092	401119	412202	412202	—	—	412202	401119	401092	401119
Spring, ratchet, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Spring, return, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Unit, vacuum control	402365	—	—	—	—	—	419067	419067	419067	—	419066	419066
§Housing, micrometer	—	—	—	—	—	—	408913	408913	408913	—	408913	408913
Terminal details, housing	—	—	—	—	—	—	408986	408986	408986	—	408986	408986
§Nut, adjusting, micrometer	407241	403321	—	403321	—	—	408948	408948	408948	—	408948	408948
§Details set, micrometer	408989	408989	—	408989	—	—	408989	408989	408989	—	408989	408989
§Bracket, vacuum control unit	415470	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	415473	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	410601	—	—	—	410601	410601	—	—	410601	—	—	—
§Distributor, service	40141/S	40142/S	40143/S	40143/S	†40144/S (40071)	†40144/S (40071)	—	—	—	†40148/S (40081)	—	—
§ Cap, distributor	409635	418888	407043	407043	418888	418888	407043	407043	407043	418888	415708	415708
Nut, cable securing	—	410600	410600	410600	410600	410600	410600	410600	410600	410600	—	—
Brush and spring	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435
Rotor arm	400051	400051	415088	415088	400051	400051	415088	415088	415088	400052	415088	415088
Contact breaker, complete	409614	409614	—	—	409614	409614	—	—	—	409614	—	—
Contact set	407050	407050	407050	407050	407050	407050	407050	407050	407050	407050	407050	407050
Condenser	—	—	407044	407044	—	—	407044	407044	407044	—	407044	407044
Base plate, contact breaker (with condenser on DKY)	409613	409613	410520	410520	409613	409613	408940	408940	408940	409613	408940	408940
Plate, bearing, contact breaker	—	—	—	—	—	—	—	—	—	—	—	—
Spring, star, base fixing	—	—	—	—	—	—	410712	410712	410712	—	410712	410712
Circlip, base fixing	—	—	—	—	—	—	414728	414728	414728	—	414728	414728
§ Pin, terminal and details, L.T.	405314	405314	407019	407019	405314	405314	408988	408988	408988	405314	408988	408988
Bush, insulating, inside L.T. terminal or bridge	409565	409565	407006	407006	409565	409565	408945	408945	408945	409565	408945	408945
Piece/pad, shaped, insulating, L.T. terminal	405319	405319	407018	407018	405319	405319	408944	408944	408944	405319	408944	408944
Bush, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Lead or connector, L.T.	409568	409568	407010	407010	409568	409568	407010	407010	407010	409568	407010	407010
Lead, earth	—	—	—	—	—	—	414715	414715	414715	—	414715	414715
Cam	420588	420588	54411781	54411781	420588	420588	408999	408999	408999	496016	408999	408999
Springs, set, auto-advance	416042/S	416047/S	407256/S	407256/S	406699	417163	405396/S	405396/S	405396/S	416055/S	416103/S	416103/S
Toggle	400141	400141	407131	407131	400141	400141	407131	407131	407131	400141	407131	407131
Weight	400149	400149	415729	415729	400149	400149	415729	415729	415729	400150	415729	415729
Plate, shaft and action	409582	409582	422182	422182	409577	409582	420191	420191	420191	416702	420191	420191
Lubricator	—	—	—	—	—	—	—	—	—	—	—	—
Bearing, bushing, top	404374	404374	404374	404374	404374	404374	189272	189295	189272	404374	189272	189295
Bushing, bottom	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590
Clip, cap retaining	420261	420261	420261	420261	420261	420261	420262/S	420262/S	420262/S	420261	420262/S	420262/S
§Sundry parts, set	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets § Recommended spares for stock

DETAILED SPARE PARTS

Part No.	40149E/F	40152A	40152B	40152H/J	†40154A	†40154B/D	†40155A/B	40156A	40156B/D	40156E/F
Model	DVXH6A	DKYH4A	DKYH4A	DKYH4A	DVXH4A	DVXH4A	DVXH6A	DVXH6A	DVXH6A	DVXH6A
Type	GC42	A167	A167	A167	G86	G86	G88	GC40	GC40	GC40
Rotation	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	411	424	424	424	413	413	426	382	382	382
Range	13°-15°	7°-9°	7°-9°	7°-9°	18°-20°	18°-20°	16°-18°	13°-15°	13°-15°	13°-15°
Replaced by (see footnote)	—	—	—	—	(40504)	(40504)	(40565)	—	—	—
§Plate/lever, clamping, timing or micrometer	405588	—	—	—	414909	414909	414909	409660	405588	405588
Screw, or nut and screw assembly	401119	—	—	—	412202	412202	412202	401092	401119	401119
Spring, ratchet, micrometer	—	—	—	—	—	—	—	—	—	—
Spring, return, micrometer	—	—	—	—	—	—	—	—	—	—
§Unit, vacuum control	419066	—	—	—	419066	419066	419066	419073	419073	419073
§Housing, micrometer	408913	—	—	—	408913	408913	408913	408913	408913	408913
Terminal details, housing	408986	—	—	—	408986	408986	408986	408986	408986	408986
§Nut, adjusting, micrometer	408948	—	—	—	408948	408948	408948	408948	408948	408948
§Details set, micrometer	408989	—	—	—	408989	408989	408989	408989	408989	408989
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	—	417219	417219	417219	410601	410601	410601	—	—	—
§Distributor, service	—	40152/S	40152/S	40152/S	—	—	—	—	—	—
Cap, distributor	415708	409635	409635	409635	415707	415707	415708	415708	415708	415708
Nut, cable securing	—	—	—	—	—	—	—	—	—	—
Brush and spring	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435
Rotor arm	415088	400051	400051	400051	408355	408355	415088	415088	415088	415088
Contact breaker, complete	—	409614	409614	409614	—	—	—	—	—	—
Contact set	407050	407050	407050	407050	407050	407050	407050	407050	407050	407050
Condenser	407044	—	—	—	407044	407044	407044	407044	407044	407044
Base plate, contact breaker (with condenser on DKY)	408940	409613	409613	409613	408940	408940	408940	408940	408940	408940
Plate, bearing, contact breaker	—	—	—	—	—	—	—	—	—	—
Spring, star, base fixing	410712	—	—	—	410712	410712	410712	410712	410712	410712
Circlip, base fixing	414728	—	—	—	414728	414728	414728	414728	414728	414728
§ Pin, terminal and details, L.T.	408988	405314	405314	405314	408988	408988	408988	408988	408988	408988
Bush, insulating, inside L.T. terminal or bridge	408945	409565	409565	409565	408945	408945	408945	408945	408945	408945
Piece/pad, shaped, insulating, L.T. terminal	408944	405319	405319	405319	408944	408944	408944	408944	408944	408944
Bush, contact breaker spring	—	—	—	—	—	—	—	—	—	—
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—
Lead or connector, L.T.	407010	409568	409568	409568	407010	407010	407010	407010	407010	407010
Lead, earth	414715	—	—	—	414715	414715	414715	414715	414715	414715
Cam	408999	420588	420588	420588	409922	423001	408999	408999	408999	408999
Springs, set, auto-advance	416103/S	416075/S	416075/S	416075/S	416075/S	416075/S	416136/S	405396/S	405396/S	405396/S
Toggle	407131	400141	400141	400141	407131	407131	407131	407131	407131	407131
Weight	415729	400149	400149	400149	415729	415729	415729	415729	415729	415729
Plate, shaft and action	420191	409577	409576	409576	416521	419229	410736	420191	420191	420191
Lubricator	—	—	—	—	—	—	—	—	—	—
Bearing, bushing, top	189272	404374	404374	404374	189272	189272	189272	189272	189295	189272
Bushing, bottom	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590
Clip, cap retaining	420262/S	420261	420261	420261	420262/S	420262/S	420262/S	420262/S	420262/S	420262/S
§Sundry parts, set	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843

DISTRIBUTORS

40149 — 40156

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets § Recommended spares for stock

DETAILED SPARE PARTS

F18

40157 — 40172

Part No.	40157A	40157B/D	40158A/D	40161A/F	40162A/E	†40163A	40164A/B	40165A/E	40166A	†40167A	†40167B/H	40172A/F
Model	DVXH6A	DVXH6A	DVXH4A	DX6A	DKY4A	DUH6A	DKZ4A	DZ6A	DXH6A	DKY4A	DKY4A	DVX4A
Type	A170	A170	AA79	BN192	DA37	BN193	P74-0	P75-0	GF19	BP86	BP86	BN189
Rotation	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Anti-clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	I.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	429	432	392	423	279	423	256	260	289	428	437	430
Range	18°-20°	14°-16°	20°-23°	18°-20°	14°-16°	18°-20°	12½°-14½°	8°-10°	13°-15°	18°-20°	20°-23°	16°-18°
Replaced by (see footnote)	—	—	—	—	—	(40339)	—	—	—	(40071)	(40071)	—
§Plate/lever, clamping, timing or micrometer	—	—	—	—	404422	—	—	—	—	415256	415256	405588
Screw, or nut and screw assembly	—	—	—	401119	401119	401119	401119	401119	412202	412202	412202	401119
Spring, ratchet, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Spring, return, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Unit, vacuum control	419066	419067	419067	417499	—	417499	402313	402345	—	—	—	419066
§Housing, micrometer	408913	408913	408913	—	—	—	—	—	—	—	—	408913
Terminal details, housing	408986	408986	408986	—	—	—	—	—	—	—	—	408986
§Nut, adjusting, micrometer	—	—	—	403321	—	403321	—	—	—	—	—	408948
§Details set, micrometer	408989	408989	408989	408989	—	408989	—	—	—	—	—	408989
§Bracket, vacuum control unit	—	—	—	406601	—	406601	408374	404912	—	—	—	—
§Lever, actuating	—	—	—	407238	—	407238	417618	417618	415731	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	—	—	—	—	—	—	—	—	—	410601	410601	—
§Distributor, service	—	—	—	40161/S	40162/S	†40163/S (40339)	40164/S	40165/S	40166/S	†40167/S (40071)	†40167/S (40071)	—
§ Cap, distributor	417178	417178	420760	407043	418888	404520	418888	407043	407279	418888	418888	415298
Nut, cable securing	—	—	—	410600	410600	—	410600	410600	—	410600	410600	410600
§ Brush and spring	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435
§ Rotor arm	415088	415088	408355	415088	400051	410876	400051	415088	407106	400051	400051	408355
§ Contact breaker, complete	—	—	—	—	409614	—	409614	—	—	409614	409614	—
§ Contact set	407050	407050	407050	407050	407050	400415	407050	407050	407050	407050	407050	407050
§ Condenser	407044	407044	407044	407044	—	400308	—	407044	407044	—	—	407044
§ Base plate, contact breaker (with condenser on DKY)	408940	408940	408940	410520	409613	406469	409613	410520	410520	409613	409613	408940
Plate, bearing, contact breaker	—	—	—	—	—	—	—	—	—	—	—	—
§ Spring, star, base fixing	410712	410712	410712	—	—	—	—	—	—	—	—	410712
§ Circlip, base fixing	414728	414728	414728	—	—	—	—	—	—	—	—	414728
§ Pin, terminal and details, L.T.	408988	408988	408988	407019	405314	123120	405314	—	407019	405314	405314	408988
Bush, insulating, inside L.T. terminal or bridge	408945	408945	408945	407006	409565	—	409565	—	407006	409565	409565	408945
Piece/pad, shaped, insulating, L.T. terminal	408944	408944	408944	407018	405319	—	405319	—	407018	405319	405319	408944
Bush, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
§ Lead or connector, L.T.	407010	407010	407010	407010	409568	—	407010	407010	407010	409568	409568	407010
§ Lead, earth	414715	414715	414715	—	—	—	—	—	—	—	—	414715
§ Cam	408999	408999	409922	54411781	420588	419947	418426	410509	54411781	420588	420588	409922
§ Springs, set, auto-advance	416078/S	416082/S	410820/S	416035/S	404598	489686/S	416083/S	410048/S	404458	416042/S	407267/S	416079/S
§ Toggle	407131	407131	407131	407131	400141	400141	—	—	407131	400141	400141	407131
§ Weight	415729	415729	415729	415729	400149	403268	410033/S	410033/S	415730	400149	400149	415729
§ Plate, shaft and action	416533	416533	417505	422182	409579	404888	410021	410021	416532	409582	409582	416525
§ Lubricator	—	—	—	—	—	400304	—	—	—	—	—	—
§ Bearing, bushing, top	189272	189272	189272	404374	404374	410590	404374	404374	189272	404374	404374	189272
§ Bushing, bottom	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590
§ Clip, cap retaining	420262/S	420262/S	420262/S	420261	420261	420261	420261	420261	420261	420261	420261	420262/S
§ Sundry parts, set	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843

DISTRIBUTORS

Note. For replacement distributor spare parts, see appropriate column under part number

† When ordering, quote part number shown in brackets

‡ Supplied by Vehicle Manufacturer

§ Recommended spares for stock

For illustrations, see pages F2-F7

continued

DETAILED SPARE PARTS

Part No.	40173A/E	40174A	40175E/F	40179A/D	40181A	†40182A/E	40189A/B	40192A/D	40193A/B	40194A/B	40195A/B	40196A/B
Model	DK6A	DKX4A	DZ6A	DX6A	DVXH6A	DKY4A	DVX6A	DKY4A	DKY4A	DKY4A	DKYH4A	DKYH4A
Type	CJ30	BE2	BS56-0	BS57	A173	CH27	BN17	BP75	AA61	G45	V87	S67
Rotation	Anti-clock	Clock	Clock	Clock	Clock	Anti-clock	Clock	Anti-clock	Clock	Clock	Clock	Anti-clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	368	300	330	391	434	359	399	264	403	294	282	282
Range	9°-11°	24°-27°	11°-13°	16°-18°	18°-20°	20°-23°	13°-15°	16°-18°	11°-13°	24°-27°	12°-14°	12°-14°
Replaced by (see footnote)	—	—	—	—	—	(40091)	—	—	—	—	—	—
§Plate/lever, clamping, timing or micrometer	—	401327	406087	406087	—	—	—	405588	405903	408352	405588	—
Screw, or nut and screw assembly	—	401092	401082	401082	—	—	—	401119	401119	401082	401119	401119
Spring, ratchet, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Spring, return, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Unit, vacuum control	—	—	—	—	419067	—	419064	—	—	—	—	402314
§Housing, micrometer	—	—	—	—	408913	—	408913	—	—	—	—	—
Terminal details, housing	—	—	—	—	408986	—	408986	—	—	—	—	—
§Nut, adjusting, micrometer	—	—	403321	403321	—	—	408948	—	403321	403321	—	—
§Details set, micrometer	—	—	—	408989	408989	—	408989	—	408989	408989	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	406287
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	406298
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	—	406106	—	†	—	—	†	410601	—	410601	†	410601
§Distributor, service	40173/S	40174/S	40175/S	40179/S	—	†40182/S (40091)	—	40192/S	40193/S	40194/S	40195/S	40196/S
§ Cap, distributor	400181	400135	407043	407043	417178	418888	407043	418888	418888	418888	409635	409635
Nut, cable securing	410600	410600	410600	410600	—	410600	410600	410600	410600	410600	—	—
Brush and spring	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435
Rotor arm	403866	400051	415088	415088	415088	400052	415088	400052	400051	400051	400051	400052
Contact breaker, complete	400164	400164	—	—	—	409614	—	409614	409614	409614	409614	409614
Contact set	400415	400415	407050	407050	407050	407050	407050	407050	407050	407050	407050	407050
Condenser	400308	400308	407044	407044	407044	—	407044	—	—	—	—	—
Base plate, contact breaker (with condenser on DKY)	400001	400001	410520	410520	408940	409613	408940	409613	409613	409613	409613	409613
Plate, bearing, contact breaker	—	—	—	—	—	—	—	—	—	—	—	—
Spring, star, base fixing	—	—	—	—	410712	—	410712	—	—	—	—	—
Circlip, base fixing	—	—	—	—	414728	—	414728	—	—	—	—	—
§ Pin, terminal and details, L.T.	123022	123022	—	407019	408988	405314	408988	405314	405314	405314	405314	405314
Bush, insulating, inside L.T. terminal or bridge	—	—	—	407006	408945	409565	408945	409565	409565	409565	409565	409565
Piece/pad, shaped, insulating, L.T. terminal	—	—	—	407018	408944	405319	408944	405319	405319	405319	405319	405319
Bush, contact breaker spring	409894	409894	—	—	—	—	—	—	—	—	—	—
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Lead or connector, L.T.	400034	400034	407010	407010	407010	409568	407010	409568	409568	409568	409568	409568
Lead, earth	—	—	—	—	414715	—	414715	—	—	—	—	—
Cam	419947	408408	410509	54411781	408999	496016	408999	496016	420588	420588	420588	496016
Springs, set, auto-advance	405396/S	407917	410048	408540	407256/S	416004/S	405396	407313	407248/S	409631/S	409636	409636
Toggle	400141	407131	—	407131	407131	400141	407131	400141	400141	400141	400141	400141
Weight	400150	415729	410033/S	415729	415729	400150	415729	400150	400149	400149	400149	400150
Plate, shaft and action	400107	416636	410021	407366	416535	416702	420191	409592	409577	409583	409577	409588
Lubricator	400304	—	—	—	—	—	—	—	—	—	—	—
Bearing, bushing, top	404374	404374	404374	404374	189272	404374	189272	404374	404374	404374	404374	404374
Bushing, bottom	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590
Clip, cap retaining	420261	420261	420261	420261	420262/S	420261	420262	420261	420261	420261	420261	420261
§Sundry parts, set	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843

DISTRIBUTORS

40173 — 40196

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Supplied by Vehicle Manufacturer
 § Recommended spares for stock

DETAILED SPARE PARTS

F20

40197 - 40207

Part No.	40197A/B	‡40198A/D	†40199A/D	†40199E	†40200A/B	†40200D	†40201A/B	†40205A/B	40206A	40206D/E	40207A	40207B
Model	DKY4A	DVXH6A	DVXH6A	DVX6A	DVX6A	DVX6A	DVX4A	DKYH4A	DKY4A	DKYH4A	DVX6A	DVX6A
Type	AA55	GC47	GC48	GC48	G97	G97	V140	A152	AE8	AE8	C50	C50
Rotation	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Anti-clock	Anti-clock	Anti-clock	Anti-clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	293	439	440	440	441	441	409	289	445	445	340	340
Range	14°-16°	16°-18°	13°-15°	13°-15°	9°-11°	9°-11°	20°-23°	11½°-13°	18°-20°	18°-20°	8°-9½°	8°-9½°
Replaced by (see footnote)	—	—	(40695)	(40695)	(40283)	(40283)	(40479)	(40076)	—	—	—	—
§Plate/lever, clamping, timing or micrometer	405903	414909	414909	414909	414909	414909	415256	—	—	—	415256	410612
Screw, or nut and screw assembly	401119	412202	412202	412202	412202	412202	412202	401119	401119	401119	412202	401082
Spring, ratchet, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Spring, return, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Unit, vacuum control	—	418958	419066	419066	419077	419077	419070	—	—	—	418958	418958
§Housing, micrometer	—	408913	408913	408913	408913	408913	408913	—	—	—	408914	408914
Terminal details, housing	—	408986	408986	408986	408986	408986	408986	—	—	—	408986	408986
§Nut, adjusting, micrometer	403321	408948	408948	408948	408948	408948	—	—	—	—	408948	408948
§Details set, micrometer	408989	408989	408989	408989	408989	408989	408989	—	—	—	408989	408989
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	—	410601	410601	410601	410601	410601	410601	—	—	—	—	—
§Distributor, service	40197/S	—	—	—	—	—	—	†40205/S (40076)	40206/S	40206/S	—	—
§ Cap, distributor	418888	415708	415708	407043	407043	407043	415298	409635	418888	409635	407043	407043
Nut, cable securing	410600	—	—	410600	410600	410600	410600	—	410600	—	410600	410600
Brush and spring	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435
Rotor arm	400051	415088	415088	415088	415088	415088	408355	400051	400052	400052	407106	407106
Contact breaker, complete	409614	—	—	—	—	—	—	409614	409614	409614	—	—
Contact set	407050	407050	407050	407050	407050	407050	407050	407050	407050	407050	407050	407050
Condenser	—	407044	407044	407044	407044	407044	407044	—	—	—	407044	407044
Base plate, contact breaker (with condenser on DKY)	409613	408940	408940	408940	408940	408940	408940	409613	409613	409613	408940	408940
Plate, bearing, contact breaker	—	—	—	—	—	—	—	—	—	—	—	—
Spring, star, base fixing	—	410712	410712	410712	410712	410712	410712	—	—	—	410712	410712
Circlip, base fixing	—	414728	414728	414728	414728	414728	414728	—	—	—	414728	414728
§ Pin, terminal and details, L.T.	405314	408988	408988	408988	408988	408988	408988	405314	405314	405314	408988	408988
Bush, insulating, inside L.T. terminal or bridge	409565	408945	408945	408945	408945	408945	408945	409565	409565	409565	408945	408945
Piece/pad, shaped, insulating, L.T. terminal	405319	408944	408944	408944	408944	408944	408944	405319	405319	405319	408944	408944
Bush, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Lead or connector, L.T.	409568	407010	407010	407010	407010	407010	407010	409568	409568	409568	407010	407010
Lead, earth	—	414715	414715	414715	414715	414715	414715	—	—	—	414715	414715
Cam	420588	408999	408999	408999	408999	408999	409922	420588	496016	496016	408999	408999
Springs, set, auto-advance	405583	416136/S	416076/S	416076/S	409637/S	409637/S	418484	406350	415487	415487	407326/S	407326/S
Toggle	400141	407131	407131	407131	407131	407131	407131	400141	400141	400141	407131	407131
Weight	400149	415729	415729	415729	415729	415729	415729	400149	400150	400150	415730	415730
Plate, shaft and action	409651	410620	410767	410767	410737	419230	416521	409577	416702	416702	416540	416540
Lubricator	—	—	—	—	—	—	—	—	—	—	—	—
Bearing, bushing, top	404374	189272	189272	189272	189272	189272	189272	404374	404374	404374	189272	189272
Bushing, bottom	410590	410590	410590	410590	410590	419231	410590	410590	410590	410590	410590	410590
Clip, cap retaining	420261	420262/S	420262/S	420262/S	420262/S	420262/S	420262/S	420261	420261	420261	420262/S	420262/S
§Sundry parts, set	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843

DISTRIBUTORS

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Return unit for possible repair
 § Recommended spares for stock ¶ Supplied by Vehicle Manufacturer

DETAILED SPARE PARTS

Part No.	40207D/E	40210A/B	†40215A/E	40216A/B	40217A	40217B/E	40218A/D	†40219A/B	†40219D	†40219E/F	†40221A	†40221E
Model	DVX6A	DVZ6A	DVZ6A	DVXH6A	DVXH4A	DVXH4A	DKYH4A	DKYH4A	DKYH4A	DKYH4A	DK4A	DK4A
Type	C50	QX	P77	BU41	BQ31	BQ31	T86	CJ32	CJ32	CJ32	RT	RT-0
Rotation	Anti-clock	Clock	Clock	Anti-clock	Anti-clock	Anti-clock	Anti-clock	Anti-clock	Anti-clock	Anti-clock	Anti-clock	Anti-clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	378	387	459	450	453	476	454	455	455	455	77	384
Range	14°-16°	14°-16°	12°-14°	18°-20°	16°-21°	18°-20°	14°-16°	11°-13°	11°-13°	11°-13°	7°-8½°	7°-9°
Replaced by (see footnote)	—	—	(40405)	—	—	—	—	(40236)	(40236)	(40236)	(40224)	(40224)
§Plate/lever, clamping, timing or micrometer	410612	417615	419936	417615	415158	415158	—	—	—	—	405588	401290
Screw, or nut and screw assembly	401082	415087	412202	415087	415087	415087	401119	401119	401119	401119	401119	401082
Spring, ratchet, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Spring, return, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Unit, vacuum control	419066	419066	419071	419070	425367	425367	400881	400898	418986	418986	—	—
§Housing, micrometer	408914	408913	414713	408914	408914	408914	—	—	—	—	—	—
Terminal details, housing	408986	408986	408986	408986	408986	408986	—	—	—	—	—	—
§Nut, adjusting, micrometer	408948	408948	—	408948	408948	408948	—	—	—	—	—	—
§Details set, micrometer	408989	408989	408989	408989	408989	408989	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	406287	404410	404410	—	—	—
§Lever, actuating	—	—	—	—	—	—	406298	404411	404411	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	—	410601	—	410601	410601	410601	410601	—	—	—	—	—
§Distributor, service	—	—	—	—	—	—	40218/S	†40219/S (40236)	†40219/S (40236)	†40219/S (40236)	†40221/S (40224)	†40221/S (40224)
§ Cap, distributor	407043	407043	407043	415708	420760	420760	409635	409635	409635	409635	400135	400135
Nut, cable securing	410600	410600	410600	—	—	—	—	—	—	—	410600	410600
Brush and spring	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435
Rotor arm	407106	415088	415088	407106	408357	408357	400052	400052	400052	400052	400052	400052
Contact breaker, complete	—	—	—	—	—	—	409614	409614	409614	409614	400164	400164
Contact set	407050	407050	407050	407050	407050	407050	407050	407050	407050	407050	400415	400415
Condenser	407044	407044	407044	407044	407044	407044	—	—	—	—	400308	400308
Base plate, contact breaker (with condenser on DKY)	408940	408940	408940	408940	408940	408940	409613	409613	409613	409613	400001	400001
Plate, bearing, contact breaker	—	—	—	—	—	—	—	—	—	—	—	—
Spring, star, base fixing	410712	410712	410712	410712	410712	410712	—	—	—	—	—	—
Circlip, base fixing	414728	414728	414728	414728	414728	414728	—	—	—	—	—	—
§ Pin, terminal and details, L.T.	408988	408988	408988	408988	408988	408988	405314	405314	405314	405314	123022	123022
Bush, insulating, inside L.T. terminal or bridge	408945	408945	408945	408945	408945	408945	409565	409565	409565	409565	—	—
Piece/pad, shaped, insulating, L.T. terminal	408944	408944	408944	408944	408944	408944	405319	405319	405319	405319	409894	409894
Bush, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Piece, insulating, contact breaker spring Lead or connector, L.T.	407010	407010	407010	407010	407010	407010	409568	409568	409568	409568	400034	400034
Lead, earth	414715	414715	414715	414715	414715	414715	—	—	—	—	—	—
Cam	408999	414707	414707	408999	409921	409921	496016	496016	496016	496016	496016	496016
Springs, set, auto-advance	405396/S	414734	410605/S	416146/S	407256/S	416125/S	416106/S	416107/S	416107/S	416107/S	405396/S	404299/S
Toggle	407131	—	—	407131	407131	407131	400141	400141	400141	400141	400141	400141
Weight	415730	410033/S	410033/S	415730	415730	415730	400150	400150	400150	400150	400150	400150
Plate, shaft and action	420189	414973	414704	416502	416544	416523	409591	409588	409588	409588	400125	400125
Lubricator	—	—	—	407207	—	—	—	—	—	—	400304	400304
Bearing, bushing, top	189272	189272	189272	189272	189272	189272	404374	404374	404374	404374	404374	404374
Bushing, bottom	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590
Clip, cap retaining	420262/S	420262/S	420262/S	420262/S	420262/S	420262/S	420261	420261	420261	420261	420261	420261
§Sundry parts, set	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843

DISTRIBUTORS

40207 — 40221

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets § Recommended spares for stock

DETAILED SPARE PARTS

F22

40223 — 40239

Part No.	40223A	40224A	40225A	40228A	40228B/D	†40230A/E	40232A/B	40235A/B	40236A	40236B/D	†40237A/B	40239A/B
Model	DULFH8A	DK4A	DKZ4A	DX6A	DX6A	DVX4A	DKYH4A	DX6A	DKYH4A	DKYH4A	DKYH4A	DVXH4A
Type	CW23	BN24-0	P27	FA73	FA73	G100	V154	WG3	CJ32	CJ32	A177	AE
Rotation	Clock	Anti-clock	Clock	Anti-clock	Anti-clock	Clock	Clock	Anti-clock	Anti-clock	Anti-clock	Clock	Anti-clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	312	77	225	452	495	467	463	471	455	493	410	372
Range	8°-10°	7°-8½°	8°-10°	14°-16°	20°-23°	20°-22°	9°-11°	12½°-13½°	11°-13°	11°-13°	9°-11°	14°-16°
Replaced by (see footnote)	—	—	—	—	—	(40504)	—	—	—	—	(40251)	—
§Plate/lever, clamping, timing or micrometer	411012	—	408370	415256	415256	414909	415256	—	—	—	—	—
Screw, or nut and screw assembly	—	—	401119	412202	412202	412202	412202	401119	—	—	—	401082
Spring, ratchet, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Spring, return, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Unit, vacuum control	—	—	402313	—	—	419066	—	—	—	—	—	419073
§Housing, micrometer	—	—	—	—	—	408913	—	—	—	—	—	408914
Terminal details, housing	—	—	—	—	—	408986	—	—	—	—	—	408986
§Nut, adjusting, micrometer	—	—	407241	—	—	408948	—	—	—	—	—	408948
§Details set, micrometer	—	—	—	—	—	408989	—	—	—	—	—	408989
§Bracket, vacuum control unit	—	—	408374	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	410612	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	405282	—	—	410601	410601	410601	410601	—	—	—	417219	410601
§Distributor, service	—	40224/S	40225/S	40228/S	40228/S	—	40232/S	40235/S	40236/S	40236/S	†40237/S (40251)	—
§ Cap, distributor	411029	400135	418888	407043	407043	415298	409635	407043	409635	409635	409635	420760
Nut, cable securing	—	410600	410600	410600	410600	410600	—	410600	—	—	—	—
Brush and spring	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435
Rotor arm	411031	400052	400051	407106	407106	408355	400051	407106	400052	400052	400051	408357
Contact breaker, complete	—	400164	409614	—	—	—	409614	—	409614	409614	409614	—
Contact set	403670	400415	407050	407050	407050	407050	407050	407050	407050	407050	407050	407050
Condenser	400308	400308	—	407044	407044	407044	—	407044	—	—	—	407044
Base plate, contact breaker (with condenser on DKY)	‡411087	400001	409613	410520	410520	408940	409613	410520	409613	409613	409613	408940
Plate, bearing, contact breaker	—	—	—	—	—	—	—	—	—	—	—	—
Spring, star, base fixing	—	—	—	—	—	410712	—	—	—	—	—	410712
Circlip, base fixing	—	—	—	—	—	414728	—	—	—	—	—	414728
§ Pin, terminal and details, L.T.	—	123022	405314	407019	407019	408988	405314	407019	405314	405314	405314	408988
Bush, insulating, inside L.T. terminal or bridge	—	—	409565	407006	407006	408945	409565	407006	409565	409565	409565	408945
Piece/pad, shaped, insulating, L.T. terminal	—	—	405319	407018	407018	408944	405319	407018	405319	405319	405319	408944
Bush, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Lead or connector, L.T.	—	400034	409568	407010	407010	407010	409568	407010	409568	409568	409568	407010
Lead, earth	—	—	—	—	—	414715	—	—	—	—	—	414715
Cam	—	496016	418426	54411781	54411781	409922	420588	54411781	496016	496016	420588	409921
Springs, set, auto-advance	411045/S	405396/S	410046/S	407360/S	406136/S	416113/S	404461	419406	416107/S	416139/S	417221	419089
Toggle	400141	400141	—	407131	407131	407131	400141	407131	400141	400141	400141	407131
Weight	403268	400150	410033/S	415730	415730	418494	400149	415730	400150	400150	400149	415730
Plate, shaft and action	405281	400125	410021	416535	408404	419661	409576	419433	409588	409588	409576	416400
Lubricator	405394	400304	—	—	—	—	—	—	—	—	—	—
Bearing, bushing, top	189315	404374	404374	189272	189272	189272	404374	189272	404374	404374	404374	189272
Bushing, bottom	—	410590	410590	410590	410590	419231	410590	410590	410590	410590	410590	410590
Clip, cap retaining	425765	420261	420261	420261	420261	420261/S	420261	420261	420261	420261	420261	420261/S
§Sundry parts, set	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843

DISTRIBUTORS

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Complete with cam § Recommended spares for stock

For illustrations, see pages F2-F7

continued

DETAILED SPARE PARTS

Part No.	40241A/B	†40244A/K	40245B/D	40249A/B	40251A/F	40252A/B	40252D	†40253A	†40257A/D	40258A/B	†40262A/D	†40263A/B
Model	DKH4A	DM2P4	DVX4A	DVX6A	DKYH4A	DM6	DM6	DULFH8A	DKY4A	DKYH4A	DKYH4A	DVX6A
Type	FA81	CW52	AE12	GC49	A169	CW53	CW53	XW7	BN208	BN209	BN206	GC50
Rotation	Clock	Clock	Anti-clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock
Earth Return or Insulated Return	I.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	340	484	479	439	469	487	487	308	366	366	490	355
Range	11½°-13°	6½°-8½°	16°-18°	16°-18°	9°-11°	7°-9°	7°-9°	8°-10°	14°-16°	14°-16°	14°-16°	16°-18°
Replaced by (see footnote)	—	(40512)	—	—	—	—	—	(40223)	(40270)	—	(40270)	(40435)
§Plate/lever, clamping, timing or micrometer	404370	421191	—	414909	—	421191	421191	411012	—	—	—	414909
Screw, or nut and screw assembly	401119	415087	401082	412202	—	415087	415087	—	401119	401119	401119	412202
Spring, ratchet, micrometer	—	421825	—	—	—	421825	421825	—	—	—	—	—
Spring, return, micrometer	—	419086	—	—	—	419086	419086	—	—	—	—	—
§Unit, vacuum control	—	419254	419165	418958	—	419480	419480	—	419171	419171	402365	419309
§Housing, micrometer	—	—	408914	408913	—	—	—	—	—	—	—	408913
Terminal details, housing	—	—	408986	408986	—	—	—	—	—	—	—	408986
§Nut, adjusting, micrometer	—	419087	408948	408948	—	419087	419087	—	407241	407241	407241	408948
§Details set, micrometer	—	—	408989	408989	—	—	—	—	408989	408989	408989	408989
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	406601	406601	415470	—
§Lever, actuating	—	—	—	—	—	—	—	—	409653	409653	415473	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	410601	493010	—	410601	410601	‡	‡	405282	—	—	410601	410601
§Distributor, service	40241/S	—	—	—	40251/S	—	—	—	†40257/S (40270)	40258/S	†40262/S (40270)	—
§ Cap, distributor	400316	418865	415298	407043	409635	418857	418857	411029	418888	409635	409635	407043
Nut, cable securing	—	410600	410600	410600	—	410600	410600	—	410600	—	—	410600
Brush and spring	404435	418856	404435	404435	404435	418856	418856	404435	404435	404435	404435	404435
Rotor arm	400051	400051	408357	415088	400051	418726	418726	411031	400051	400051	400051	415088
Contact breaker, complete	—	—	—	—	—	409614	—	—	409614	409614	409614	—
Contact set	400415	420196	407050	407050	407050	419398	420197	403670	407050	407050	407050	407050
Condenser	400308	420302	407044	407044	—	423871	423871	400308	—	—	—	407044
Base plate, contact breaker (with condenser on DKY)	405488	418650	408940	408940	409613	419235	419980	‡411087	409613	409613	409613	408940
Plate, bearing, contact breaker	—	420178	—	—	—	420375	420375	—	—	—	—	—
Spring, star, base fixing	—	496043	410712	410712	—	496058	496058	—	—	—	—	410712
Circlip, base fixing	—	496042	414728	414728	—	496059	496059	—	—	—	—	414728
§ Pin, terminal and details, L.T.	123022	423369	408988	408988	405314	407019	407019	123120	405314	405314	405314	408988
Bush, insulating, inside L.T. terminal or bridge	—	—	408945	408945	409565	408927	408927	—	409565	409565	409565	408945
Piece/pad, shaped, insulating, L.T. terminal	—	418623	408944	408944	405319	405319	405319	‡405139/S 409894	405319	405319	405319	408944
Bush, contact breaker spring	409894	418933	—	—	—	418933	419950	—	—	—	—	—
Piece, insulating, contact breaker spring	—	418935	—	—	—	418935	—	—	—	—	—	—
Lead or connector, L.T.	400034	418946	407010	407010	409568	419021	419021	—	409568	409568	409568	407010
Lead, earth	—	418664	414715	414715	—	419023	419023	—	—	—	—	414715
Cam	420588	496076	409921	408999	420588	496074	496074	—	420588	420588	420588	408999
Springs, set, auto-advance	416019/S	416131/S	416109/S	406136/S	419407	416134/S	416134/S	411061	416132/S	416132/S	416136/S	416004/S
Toggle	400141	419149	407131	407131	400141	419149	419149	400141	400141	400141	400141	407131
Weight	400149	418321	415730	415729	400149	418321	418321	403268	400149	400149	400149	415729
Plate, shaft and action	400115	421629	416552	410620	409576	419258	419258	405281	409651	409651	409651	410620
Lubricator	400304	—	—	—	—	419525/S	419525/S	405394	—	—	—	—
Bearing, bushing, top	404374	—	189272	189272	404374	—	—	189315	404374	404374	404374	189272
Bushing, bottom	410590	419430	410590	410590	410590	—	—	—	410590	410590	410590	410590
Clip, cap retaining	420261	425765	420262/S	420262/S	420261	425765	425765	425765	420261	420261	420261	420262/S
§Sundry parts, set	400843	419644	400843	400843	400843	419645	419645	400843	400843	400843	400843	400843

DISTRIBUTORS

40241 — 40263

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Supplied by Vehicle Manufacturer
 § Recommended spares for stock ¶ Complete with cam ¶ Felt, with packing springs

DETAILED SPARE PARTS

F24

40264 — 40286

DISTRIBUTORS

Part No.	40264A/B	40269A/B	40270A/D	†40276A/B	40277A/D	†40280A/B	40282A	40283A/B	40283D/E	40283F/J	†40284A/K	40286A
Model	DVXH6A	DKY4A	DKY4A	DVX6A	DKY4A	DVX6A	DY6A	DMB6	DMBZ6	DMBZ6	DM2P4	Ford
Type	GC16	BN169	BN208	GC53	CH33	BS62	G47	G104	G104	G104	BN212	Special
Rotation	Anti-clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	492	376	366	496	356	330	295	441	441	441	376	585
Range	18°-20°	16°-18°	14°-16°	18°-20°	16°-18°	11½°-13°	16°-18°	9°-11°	9°-11°	9°-11°	16°-18°	11½°-13°
Replaced by (see footnote)	—	—	—	(40693)	—	(40435)	—	—	—	—	(40497)	—
§Plate/lever, clamping, timing or micrometer	415158	—	—	414909	—	—	—	421191	421191	421191	421191	405337
Screw, or nut and screw assembly	415087	401119	401119	412202	—	401119	401082	415087	415087	412202	415087	401082
Spring, ratchet, micrometer	—	—	—	—	—	—	—	421825	421825	421825	421825	—
Spring, return, micrometer	—	—	—	—	—	—	—	419086	419086	419086	419086	—
§Unit, vacuum control	419073	419061	419171	419309	—	419065	—	419681	419681	419681	420755	—
§Housing, micrometer	408914	—	—	408913	—	408913	—	—	—	—	—	—
Terminal details, housing	408986	—	—	408986	—	408986	—	—	—	—	—	—
§Nut, adjusting, micrometer	408948	407241	407241	408948	—	408948	403321	419087	419087	419087	419087	—
§Details set, micrometer	408989	408989	408989	408989	—	408989	408989	—	—	—	—	—
§Bracket, vacuum control unit	—	406601	406601	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	409653	409653	—	—	—	408352	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	‡418723	‡418723	‡418723	—	—
§Dog or gear, driving	410601	—	410601	410601	—	†	410601	410601	410601	420620	410601	405362
§Distributor, service	—	—	40270/S	—	40277/S	—	40282/S	—	—	—	—	—
Cap, distributor	417178	418888	418888	407043	418888	407043	407043	418857	418857	418857	418871	405829
Nut, cable securing	—	410600	410600	410600	410600	410600	410600	410600	410600	410600	—	—
Brush and spring	404435	404435	404435	404435	404435	404435	404435	418856	418856	418856	418856	404435
Rotor arm	407106	400051	400051	415088	400051	415088	415088	418726	418726	418726	400051	400051
Contact breaker, complete	—	409614	409614	—	409614	—	—	—	—	—	—	—
Contact set	407050	407050	407050	407050	407050	407050	407050	419398	419398	420197	420196	407050
Condenser	407044	—	—	407044	—	407044	407044	423871	423871	423871	423871	405833
Base plate, contact breaker (with condenser on DKY)	408940	409613	409613	408940	409613	408940	410520	419235	419235	419980	418650	405321
Plate, bearing, contact breaker	—	—	—	—	—	—	—	420375	420375	420375	420178	—
Spring, star, base fixing	410712	—	—	410712	—	410712	—	496058	496058	496058	496043	—
Circlip, base fixing	414728	—	—	414728	—	414728	—	496059	496059	496059	496042	—
§ Pin, terminal and details, L.T.	408988	405314	405314	408988	405314	408988	407019	407019	407019	407019	423369	405314
Bush, insulating, inside L.T. terminal or bridge	408945	409565	409565	408945	409565	408945	407006	408927	408927	408927	‡161353	405315
Piece/pad, shaped, insulating, L.T. terminal	408944	405319	405319	408944	405319	408944	407018	405319	405319	405319	—	405319
Bush, contact breaker spring	—	—	—	—	—	—	—	418933	418933	419950	419950	—
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	418935	418935	—	—	—
Lead or connector, L.T.	407010	409568	409568	407010	409568	407010	407010	419021	419021	419021	—	—
Lead, earth	414715	—	—	414715	—	414715	—	419023	419023	419023	418664	—
Cam	408999	420588	420588	408999	420588	408999	419947	496074	496079	496079	496076	420588
Springs, set, auto-advance	416143/S	416001/S	416132/S	419457	416012/S	407326/S	407206/S	421560/S	421560/S	421560/S	408382/S	422219
Toggle	407131	418706	400141	407131	400141	407131	400141	418707	—	—	418707	400141
Weight	415730	400149	400149	415729	400149	415729	400149	418321	410033/S	410033/S	418321	400149
Plate, shaft and action	416552	409651	409651	416522	409582	410737	409651	419680	419741	419741	419669	422257
Lubricator	—	—	—	—	—	—	—	419525/S	419525/S	§422557	—	405394
Bearing, bushing, top	189272	404374	404374	189272	404374	189272	404374	189272	189272	189272	—	—
Bushing, bottom	410590	410590	410590	410590	410590	410590	410590	419673	419673	419673	419430	410590
Clip, cap retaining	420262/S	420261	420261	420262/S	420261	420262/S	420261	425765	425765	421824	425765	490441
§Sundry parts, set	400843	400843	400843	400843	400843	400843	400843	419645	419645	419645	419644	419644

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Supplied by Vehicle Manufacturer
 § Recommended spares for stock †† Oil seal ††† Washer, insulating, contact spring § Damper

For illustrations, see pages F2-F7

continued

DETAILED SPARE PARTS

Part No.	†40289A/K	40290A/D	40290E/K	†40293A	40294A/B	†40295A/J	†40297A/D	†40299A/E	†40299L	†40301A	†40301B/D	†40305A/B
Model	DM2P4	DMZ6	DMZ6	DVX6A	DVX4A	DM2P4	DVZ6A	DM2P4	DM2P4	DVZ6A	DVZ6A	DM6
Type	P79	P80	P80	GC54	BS50	BN208	P80	BN214	BN214	DC106	DC106	DC126
Rotation	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	500	448	448	440	502	376	448	504	504	503	280	503
Range	14½°-16½°	10°-12°	10°-12°	13°-15°	11½°-13½°	14°-16°	10°-12°	17°-19°	17°-19°	11°-13°	14°-16°	11°-13°
Replaced by (see footnote)	(40540)	—	—	(40695)	—	(40539)	(40290)	(40494)	(40494)	(40360)	(40360)	(40359)
§Plate/lever, clamping, timing or micrometer	414770	414770	414770	414909	—	421191	419936	421191	421191	417615	417615	421191
Screw, or nut and screw assembly	412202	412202	412202	412202	401119	415087	412202	415087	415087	415087	415087	415087
Spring, ratchet, micrometer	421825	421825	421825	—	—	421825	—	421825	421825	—	—	421825
Spring, return, micrometer	419086	419086	419086	—	—	419086	—	419086	419086	—	—	419086
§Unit, vacuum control	421662	418630	54412741	419066	419125	419738	419794	419832	419832	419558	419558	419786
§Housing, micrometer	—	—	—	408913	408913	—	408913	—	408913	408913	408913	—
Terminal details, housing	—	—	—	408986	408986	—	408986	—	408986	408986	408986	—
§Nut, adjusting, micrometer	419087	419087	419087	408948	408948	419087	—	419087	419087	408948	408948	419087
§Details set, micrometer	—	—	—	408989	408989	—	408989	—	408989	408989	408989	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	—	—	—	410601	+	—	—	410601	410601	410601	418128	418128
§Distributor, service	—	—	—	—	—	—	—	—	—	—	—	—
Cap, distributor	418865	418857	418857	407043	415298	418865	407043	418871	422905	407043	407043	418857
Nut, cable securing	410600	410600	410600	410600	410600	410600	410600	—	—	410600	410600	410600
Brush and spring	418856	418856	418856	404435	404435	418856	404435	418856	418856	404435	404435	418856
Rotor arm	400051	418726	418726	415088	408355	400051	415088	400051	400051	415088	415088	418726
Contact breaker, complete	—	—	—	—	—	—	—	—	—	—	—	—
Contact set	420196	419398	420197	407050	407050	420196	407050	420196	420196	407050	407050	419398
Condenser	54413002	423871	423871	407044	407044	420302	407044	420302	420302	407044	407044	423871
Base plate, contact breaker (with condenser on DKY)	418650	419235	419980	408940	408940	418650	408940	418650	418650	408940	408940	419235
Plate, bearing, contact breaker	420178	420375	420375	—	—	420178	—	420178	420178	—	—	420375
Spring, star, base fixing	496043	496058	496058	410712	410712	496043	410712	496043	496043	410712	410712	496058
Circlip, base fixing	496042	496059	496059	414728	414728	496042	414728	496042	496042	414728	414728	496059
Pin, terminal and details, L.T.	419882	407019	407019	408988	408988	423369	408988	423369	423369	408988	408988	407019
Bush, insulating, inside L.T. terminal or bridge	—	408927	408927	408945	408945	¶161353	408945	—	—	408945	408945	408927
Piece/pad, shaped, insulating, L.T. terminal	418623	405319	405319	408944	408944	—	408944	418623	418623	408944	408944	405319
Bush, contact breaker spring	418933	418933	419950	—	—	419950	—	418933	418933	—	—	418933
Piece, insulating, contact breaker spring	418935	418935	—	—	—	—	—	418935	418935	—	—	418935
Lead or connector, L.T.	418946	419021	419021	407010	407010	—	407010	418946	418946	407010	407010	419021
Lead, earth	418664	419023	419023	414715	414715	418664	414715	418664	418664	414715	414715	419023
Cam	496078	496079	496079	408999	409922	496076	414707	496076	496076	414707	414707	496074
Springs, set, auto-advance	416088/S	410049/S	410049/S	416091/S	408382/S	408382/S	416145/S	416146/S	416146/S	410049/S	410049/S	419901
Toggle	—	—	—	407131	407131	418707	—	418707	418707	—	—	418707
Weight	410033/S	410033/S	410033/S	415729	415729	418321	410033/S	418321	418321	410033/S	410033/S	418321
Plate, shaft and action	419689	420909	420909	410767	419904	419669	414704	421153	421153	414973	414973	420611
Lubricator	—	419525/S	419525/S	—	—	—	—	—	—	—	—	419525/S
Bearing, bushing, top	—	—	—	189272	189272	—	189272	—	—	189272	189272	—
Bushing, bottom	419430	—	—	410590	410590	419430	410590	419430	419430	410590	410590	—
Clip, cap retaining	425765	425765	421824	420262/S	420262/S	425765	420262/S	425765	425765	420262/S	420262/S	425765
Sundry parts, set	419644	419645	419645	400843	400843	419644	400843	419644	419644	400843	400843	419645

DISTRIBUTORS

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Supplied by Vehicle Manufacturer
 § Recommended spares for stock ¶ Washer, insulating, contact spring

DETAILED SPARE PARTS

F26

40305 — 40317

DISTRIBUTORS

Part No.	†40305D/J	40307A/D	40307E	40307F	40308A/B	40308D/J	†40310A	†40310B/H	†40311D/J	†40312A/F	†40312H/L	†40317A
Model	DM6	DM6	DM6	DM6	DM6	DM6	DM6	DM6	DM6	DM6	DM6	DM2P4
Type	DC126	BN192	BN192	BN192	BN215	BN215	DC	DC	DC119	T	T	AJ41
Rotation	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	503	423	423	423	399	399	503	503	280	280	280	398
Range	11°-13°	18°-20°	18°-20°	18°-20°	13°-15°	13°-15°	11°-13°	11°-13°	14°-16°	14°-16°	14°-16°	9°-11°
Replaced by (see footnote)	(40359)	—	—	—	—	—	(40359)	(40359)	(40360)	(40401)	(40401)	(40571)
§Plate/lever, clamping, timing or micrometer	421191	421191	421191	421191	421191	421191	421191	421191	421191	421191	421191	421191
Screw, or nut and screw assembly	415087	415087	415087	415087	412202	412202	415087	415087	415087	415087	415087	415087
Spring, ratchet, micrometer	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825
Spring, return, micrometer	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086
§Unit, vacuum control	54412958	419890	419890	419890	54412348	54412348	419786	54412958	54412958	419786	54412958	419972
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087
§Details set, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	418128	410601	410601	420620	410601	420620	418128	418128	418128	410601	410601	410601
§Distributor, service	—	—	—	—	—	—	—	—	—	—	—	—
Cap, distributor	418857	418857	418857	418857	418861	418861	418861	418861	418857	418857	418857	418871
Nut, cable securing	410600	410600	410600	410600	—	—	—	—	410600	410600	410600	—
Brush and spring	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856
Rotor arm	418726	418726	418726	418726	418726	418726	418726	418726	418726	418726	418726	400051
Contact breaker, complete	—	—	—	—	—	—	—	—	—	—	—	—
Contact set	420197	419398	420197	420197	419398	420197	419398	420197	420197	419398	420197	420196
Condenser	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871	54413002
Base plate, contact breaker (with condenser on DKY)	419980	419235	419980	419980	419235	419980	419235	419980	419980	419235	419980	418650
Plate, bearing, contact breaker	420375	420375	420375	420375	420375	420375	420375	420375	420375	420375	420375	420178
Spring, star, base fixing	496058	496058	496058	496058	496058	496058	496058	496058	496058	496058	496058	496043
Circlip, base fixing	496059	496059	496059	496059	496059	496059	496059	496059	496059	496059	496059	496042
Pin, terminal and details, L.T.	407019	407019	407019	407019	407019	407019	407019	407019	407019	407019	407019	423369
Bush, insulating, inside L.T. terminal or bridge	408927	408927	408927	408927	408927	408927	408927	408927	408927	408927	408927	—
Piece/pad, shaped, insulating, L.T. terminal	405319	405319	405319	405319	405319	405319	405319	405319	405319	405319	405319	418623
Bush, contact breaker spring	419950	418933	419950	419950	418933	419950	418933	419950	419950	418933	419950	418933
Piece, insulating, contact breaker spring	—	418935	—	—	418935	—	418935	—	—	418935	—	418935
Lead or connector, L.T.	419021	419021	419021	419021	419021	419021	419021	419021	419021	419021	419021	418946
Lead, earth	419023	419023	419023	419023	419023	419023	419023	419023	419023	419023	419023	418664
Cam	496074	496074	496074	496074	496074	496074	496074	496074	496074	496074	496074	496076
Springs, set, auto-advance	419901	409631/S	409631/S	409631/S	416151/S	416151/S	419901	419901	416115/S	416115/S	416115/S	406136/S
Toggle	418707	418707	418707	418707	418707	418707	418707	418707	418707	418707	418707	418707
Weight	418321	418321	418321	418321	418321	418321	418321	418321	418321	418321	418321	418321
Plate, shaft and action	420611	419892	419892	419892	419913	419913	420611	420611	419913	419913	419913	419953
Lubricator	419525/S	419525/S	419525/S	419525/S	419525/S	419525/S	419525/S	419525/S	419525/S	419525/S	419525/S	—
Bearing, bushing, top	—	—	—	—	—	—	—	—	—	—	—	—
Bushing, bottom	—	—	—	—	—	—	—	—	—	—	—	419430
Clip, cap retaining	425765	425765	425765	421824	425765	425765	425765	425765	425765	425765	425765	425765
§Sundry parts, set	419645	419645	419645	419645	419645	419645	419645	419645	419645	419645	419645	419644

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets § Recommended spares for stock

DETAILED SPARE PARTS

Part No.	40318A/B	†40319A	†40320A/B	†40321A/F	†40321H/J	40327A	40327B/F	†40330A/E	†40332A/E	40333A/B	40333D/J	†40336A
Model	DVXH4A	DM2P4	DM2P4	DM2P4	DM2P4	DM6	DM6	DM2P4	DM2P4	D2H4	D2H4	DM2P4
Type	AJ38	BN213	BN215	BN180	BN180	BN219	BN219	G95	CJ33	A176	A176	CH34
Rotation	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Anti-clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	398	508	430	393	393	423	423	467	493	469	469	356
Range	9°-11°	15°-17°	16°-18°	18°-20°	18°-20°	18°-20°	18°-20°	20°-22°	11°-13°	9°-11°	9°-11°	18°-20°
Replaced by (see footnote)	—	(40538)	(40495)	(40496)	(40496)	—	—	(40504)	(40515)	—	—	(40534)
§Plate/lever, clamping, timing or micrometer	417497	421191	421191	421191	421191	421191	421191	420151	—	—	—	—
Screw, or nut and screw assembly	401092	415087	415087	415087	415087	415087	415087	415087	—	—	—	—
Spring, ratchet, micrometer	—	421825	421825	421825	421825	421825	421825	421825	421825	—	—	421825
Spring, return, micrometer	—	419086	419086	419086	419086	419086	419086	419086	419086	—	—	419086
§Unit, vacuum control	419961	419738	420006	420278	420278	419890	419890	420006	420918	—	—	419832
§Housing, micrometer	408913	—	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	408986	—	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	408948	419087	419087	419087	419087	419087	419087	419087	419087	—	—	419087
§Details set, micrometer	408989	—	—	—	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	410601	410601	—	—	—	410601	410601	410601	—	410601	410601	—
§Distributor, service	—	—	—	—	—	—	—	—	—	—	—	—
Cap, distributor	420760	418871	418865	418865	418865	418861	418861	418871	418871	418893	418893	418865
Nut, cable securing	—	—	410600	410600	410600	—	—	—	—	—	—	410600
Brush and spring	404435	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856
Rotor arm	408355	400051	400051	400051	400051	418726	418726	400051	400052	400051	400051	400051
Contact breaker, complete	—	—	—	—	—	—	—	—	—	54411507	54411507	—
Contact set	407050	420196	420196	420196	420196	419398	420197	420196	420196	407050	407050	420196
Condenser	407044	54413002	420302	420302	54413002	423871	423871	54413002	54413002	54413006	54413006	54413002
Base plate, contact breaker (with condenser on DKY)	408940	418650	418650	418650	418650	419235	419980	418650	418650	418886	418886	418650
Plate, bearing, contact breaker	—	420178	420178	420178	420178	420375	420375	420178	420178	—	—	420178
Spring, star, base fixing	410712	496043	496043	496043	496043	496058	496058	496043	496043	—	—	496043
Circlip, base fixing	414728	496042	496042	496042	496042	496059	496059	496042	496042	—	—	496042
§ Pin, terminal and details, L.T.	408988	423369	423369	423369	423369	407019	407019	423369	423369	405314	405314	423369
Bush, insulating, inside L.T. terminal or bridge	408945	—	—	—	¶161353	408927	408927	—	—	409565	409565	—
Piece/pad, shaped, insulating, L.T. terminal	408944	418623	418623	418623	—	405319	405319	418623	—	405319	405319	418623
Bush, contact breaker spring	—	418933	418933	418933	419950	418933	419950	418933	418933	—	—	418933
Piece, insulating, contact breaker spring	—	418935	418935	418935	—	418935	—	418935	418935	—	—	418935
Lead or connector, L.T.	407010	418946	418946	418946	—	419021	419021	418946	—	—	—	418946
Lead, earth	414715	418664	418664	418664	418664	419023	419023	418664	418664	—	—	418664
Cam	409922	496076	496076	496078	496078	496074	496074	496078	496077	420944	420944	496076
Springs, set, auto-advance	406136/S	420418	422243/S	416168/S	416168/S	409631/S	409631/S	416159/S	420128/S	420492	420492	416167/S
Toggle	407131	418707	418707	—	—	418707	418707	—	418707	418707	418707	418707
Weight	415729	418321	418321	410033/S	410033/S	418321	418321	410033/S	418915	418321	418321	418321
Plate, shaft and action	419962	419668	419669	419689	419689	419892	419892	419689	420114	420467	420467	419668
Lubricator	—	—	—	—	—	419525/S	419525/S	—	—	—	—	—
Bearing, bushing, top	189272	—	—	—	—	—	—	—	—	—	—	—
Bushing, bottom	410590	419430	419430	419430	419430	—	—	419430	419430	420064	419430	419430
Clip, cap retaining	420262/S	425765	425765	425765	425765	425765	425765	425765	425765	425218	425218	425765
§Sundry parts, set	400843	419644	419644	419644	419644	419645	419645	419644	419644	420491	420491	419644

DISTRIBUTORS

40318 — 40336

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets § Recommended spares for stock

¶ Washer, insulating, contact spring

DETAILED SPARE PARTS

F28

40337 — 40355

Part No.	40337A/D	40339A/B	40339D	40339E	40345A	40346A	40347A	†40352A	†40352B	†40352D/E	†40354A	†40355A
Model	DM2P4	DUH6A	DUH6A	DUH6A	DX6A	DX6A	DKY2A	DKX2A	DKX2A	DKX2A	DM6	DM2P4
Type	BS63	BN223	BN223	BN223	WG7	WG8	AJ44	RO	RO	RO	C	A203
Rotation	Clock	Clock	Clock	Clock	Anti-clock	Anti-clock	Clock	Anti-clock	Anti-clock	Anti-clock	Clock	Clock
Earth Return or Insulated Return	E.R.	I.R.	I.R.	I.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	502	423	423	423	520	521	518	509	509	561	523	504
Range	11½°-13½°	18°-20°	18°-20°	18°-20°	17°-19°	20°-23°	16°-18°	9°-11°	9°-11°	13°-15°	20°-23°	17°-19°
Replaced by (see footnote)	—	—	—	—	—	—	—	(40449)	(40449)	(40449)	(40608)	(40502)
§Plate/lever, clamping, timing or micrometer	420617	—	—	—	—	—	405588	417497	406105	406105	421191	—
Screw, or nut and screw assembly	401119	401119	401119	401119	401119	401119	401119	401119	401119	401119	415087	—
Spring, ratchet, micrometer	421825	—	—	—	—	—	—	—	—	—	421825	421825
Spring, return, micrometer	419086	—	—	—	—	—	—	—	—	—	419086	419086
§Unit, vacuum control	420278	417499	417499	417499	—	—	—	—	—	—	420005	420537
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	419087	403321	403321	403321	—	—	—	—	—	—	419087	419087
§Details set, micrometer	—	408989	408989	408989	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	420383	406023	406023	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	406028	406028	410612	410612	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	—	410601	410601	410601	410601	410601	—	—	—	—	410601	—
§Distributor, service	—	40339/S	40339/S	40339/S	40345/S	40346/S	40347/S	40352/S	40352/S	40352/S	—	—
Cap, distributor	418865	404520	404520	404520	407043	407043	409603	400136	400136	400136	418861	418865
Nut, cable securing	410600	—	—	—	410600	410600	410600	410600	410600	410600	—	410600
Brush and spring	418856	404435	404435	404435	404435	404435	404435	404435	404435	404435	418856	418856
Rotor arm	400051	410876	410876	410876	407106	407106	400051	400052	400052	400052	418726	400051
Contact breaker, complete	—	—	—	—	—	—	409614	400164	400164	400164	—	—
Contact set	420196	400415	400415	400415	407050	407050	407050	400415	400415	400415	419398	420196
Condenser	54413002	400308	400308	400308	407044	407044	—	400308	400308	400308	423871	54413002
Base plate, contact breaker (with condenser on DKY)	418650	406469	406469	406469	410520	410520	409613	400001	400001	400001	419235	418650
Plate, bearing, contact breaker	420178	—	—	—	—	—	—	—	—	—	420375	420178
Spring, star, base fixing	496043	—	—	—	—	—	—	—	—	—	496058	496043
Circlip, base fixing	496042	—	—	—	—	—	—	—	—	—	496059	496042
§ Pin, terminal and details, L.T.	423369	123120	123120	123120	407019	407019	405314	123022	123022	123022	407019	423369
Bush, insulating, inside L.T. terminal or bridge	—	—	—	—	407006	407006	409565	—	—	—	408927	—
Piece/pad, shaped, insulating, L.T. terminal	418623	—	—	—	407018	407018	405319	—	—	—	405319	418623
Bush, contact breaker spring	418933	—	—	—	—	—	—	—	—	—	418933	418933
Piece, insulating, contact breaker spring	418935	—	—	—	—	—	—	—	—	—	418935	418935
Lead or connector, L.T.	418946	—	—	—	407010	407010	409568	400034	400034	400034	419021	418946
Lead, earth	418664	—	—	—	—	—	—	—	—	—	419023	418664
Cam	496076	419947	419947	419947	54411781	54411781	414915	415283	415283	415283	496074	496076
Springs, set, auto-advance	408382/S	489686/S	489686/S	489686/S	405396/S	420393/S	420356	416031/S	416031/S	421538/S	420623	416146/S
Toggle	418707	400141	400141	400141	407131	407131	400141	407131	407131	407131	418707	418707
Weight	418321	403268	403268	403268	415730	415730	400149	415730	415730	415730	418321	418321
Plate, shaft and action	420274	404888	404888	404888	408475	408404	409582	421414	421414	421414	420447	421153
Lubricator	—	400304	400304	405394	—	—	—	—	—	—	419525/S	—
Bearing, bushing, top	—	—	—	—	189272	189272	404374	—	—	—	—	—
Bushing, bottom	419430	410590	410590	410590	410590	410590	410590	420406	420406	420406	—	419430
Clip, cap retaining	425765	420261	420261	420261	420261	420261	420261	420261	420261	420261	425765	425765
§Sundry parts, set	419644	400843	400843	400843	400843	400843	400843	400843	400843	400843	419645	419644

DISTRIBUTORS

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets § Recommended spares for stock

For illustrations, see pages F2-F7

continued

DETAILED SPARE PARTS

Part No.	40356A	40357A	40358A/B	40358D/H	40359A/B	40359D/H	40360A/B	40360D/F	†40363A	†40364D/H	†40365A/D	†40366A
Model	DKY4A	DXH4A	D2AH4	D2AH4	DM6	DM6	DM6	DM6	DM2P4	DM6	DM2P4	DMX6
Type	BP89	OM16	A177	A177	DC	DC	DC	DC	BP89	DC	V164	C54
Rotation	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	524	392	410	410	527	527	280	280	526	527	409D	523
Range	16°-18°	20°-23°	9°-11°	9°-11°	13°-15°	13°-15°	14°-16°	14°-16°	16°-18°	13°-15°	19°-22°	20°-23°
Replaced by (see footnote)	—	—	—	—	—	—	—	—	(40517)	(40359)	(40479)	(40608)
§Plate/lever, clamping, timing or micrometer	415256	415256	—	—	420663	420663	420663	420663	421191	421191	421191	421191
Screw, or nut and screw assembly	412202	412202	—	—	415087	415087	415087	415087	415087	415087	415087	415087
Spring, ratchet, micrometer	—	—	—	—	—	—	—	—	421825	421825	421825	421825
Spring, return, micrometer	—	—	—	—	—	—	—	—	419086	419086	419086	419086
§Unit, vacuum control	—	—	—	—	419786	54412958	419786	54412958	421700	54412958	420006	420005
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	—	—	—	—	—	—	—	—	419087	419087	419087	419087
§Details set, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	410601	410601	417219	417219	418128	418128	418128	418128	410601	418128	410601	—
§Distributor, service	40356/S	40357/S	40357/S	40357/S	—	—	—	—	—	—	—	—
Cap, distributor	418888	415707	418893	418893	418857	418857	418857	418857	418865	418857	418865	418861
Nut, cable securing	410600	—	—	—	410600	410600	410600	410600	410600	410600	410600	—
Brush and spring	404435	404435	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856
Rotor arm	400051	410351	400051	400051	418726	418726	418726	418726	400051	418726	400051	418726
Contact breaker, complete	409614	—	54411507	54411507	—	—	—	—	—	—	—	—
Contact set	407050	407050	407050	407050	419398	420197	419398	420197	420196	420197	420196	419398
Condenser	—	407044	54413006	54413006	423871	423871	423871	423871	54413002	423871	54413002	423871
Base plate, contact breaker (with condenser on DKY)	409613	410520	418886	418886	419235	419980	419235	419980	418650	419980	418650	419235
Plate, bearing, contact breaker	—	—	—	—	420375	420375	420375	420375	420178	420375	420178	420375
Spring, star, base fixing	—	—	—	—	496058	496058	496058	496058	496043	496058	496043	496058
Circlip, base fixing	—	—	—	—	496059	496059	496059	496059	496042	496059	496042	496059
Pin, terminal and details, L.T.	405314	407019	405314	405314	407019	407019	407019	407019	423369	407019	423369	407019
Bush, insulating, inside L.T. terminal or bridge	409565	407006	409565	409565	408927	408927	408927	408927	—	408927	—	408927
Piece/pad, shaped, insulating, L.T. terminal	405319	407018	405319	405319	405319	405319	405319	405319	418623	405319	418935	405319
Bush, contact breaker spring	—	—	—	—	418933	419950	418933	419950	418933	419950	418933	418933
Piece, insulating, contact breaker spring	—	—	—	—	418935	—	418935	—	418935	—	418935	418935
Lead or connector, L.T.	409568	407010	—	—	419021	419021	419021	419021	418946	419021	423298	419021
Lead, earth	—	—	—	—	419023	419023	419023	419023	418664	419023	418664	419023
Cam	420588	408408	420944	420944	496074	496074	496074	496074	496076	496074	496076	420683
Springs, set, auto-advance	416019/S	410820/S	421497	421497	416180	416180	416115/S	416115/S	416001/S	416180	420658	420623
Toggle	400141	407131	418707	418707	418707	418707	418707	418707	418707	418707	418707	418707
Weight	400149	415729	418321	418321	418321	418321	418321	418321	418321	418321	418321	415729
Plate, shaft and action	409582	420465	420467	420467	420611	420611	419913	419913	419669	420611	419668	420680
Lubricator	—	—	—	—	419525/S	419525/S	419525/S	419525/S	—	419525/S	—	419525/S
Bearing, bushing, top	404374	404374	—	—	—	—	—	—	—	—	—	—
Bushing, bottom	410590	410590	420064	419430	—	—	—	—	419430	—	419430	—
Clip, cap retaining	420261	420261	425218	425218	421824	421824	421824	421824	425765	425765	425765	425765
Sundry parts, set	400843	400843	420491	420491	419645	419645	419645	419645	419644	419645	419644	419645

DISTRIBUTORS

40356 — 40366

Note. For replacement distributor spare parts, see appropriate column under service number † When ordering, quote part number shown in brackets § Recommended spares for stock

DETAILED SPARE PARTS

F30

40367 — 40386

DISTRIBUTORS

Part No.	40367A/B	40367D/H	40368A/B	40368D/H	40369A/B	40369D/E	40371A/F	†40372A	†40376A/B	40377A	†40380A	†40386A
Model	D2A4	D2A4	D2A4	D2A4	D2A4	D2A4	DM6	DVX6A	DM2P4	D2MP4	DM2P4	DM2P4
Type	DA41	DA41	DA37	DA37	DA42	DA42	BN234	GC53	T91	BQ31	BQ33	BN216-1
Rotation	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Anti-clock	Anti-clock	Anti-clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	364	364	279	279	267	267	399	362	230	476	531	538
Range	11°-13°	11°-13°	14°-16°	14°-16°	14°-16°	14°-16°	13°-15°	14°-16°	9°-11°	18°-20°	15°-17°	20°-23°
Replaced by (see footnote)	—	—	—	—	—	—	—	(40696)	(40511)	—	(40491)	(40500)
§Plate/lever, clamping, timing or micrometer	—	—	—	—	—	—	421191	414909	421191	421191	421191	421191
Screw, or nut and screw assembly	—	—	—	—	—	—	415087	412202	415087	415087	415087	415087
Spring, ratchet, micrometer	—	—	—	—	—	—	421825	—	421825	421825	421825	421825
Spring, return, micrometer	—	—	—	—	—	—	419086	—	419086	419086	419086	419086
§Unit, vacuum control	—	—	—	—	—	—	54412348	419077	420790	420791	420918	419254
§Housing, micrometer	—	—	—	—	—	—	—	408913	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	408986	—	—	—	—
§Nut, adjusting, micrometer	—	—	—	—	—	—	419087	408948	419087	419087	419087	419087
§Details set, micrometer	—	—	—	—	—	—	—	408989	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	—	—	—	—	—	—	—	410601	410601	410601	—	—
§Distributor, service	40367/S	40367/S	40368/S	40368/S	40369/S	40369/S	—	—	—	—	—	—
Cap, distributor	418888	418888	418888	418888	418888	418888	418857	407043	421139	418871	418871	418865
Nut, cable securing	410600	410600	410600	410600	410600	410600	410600	410600	—	—	—	410600
Brush and spring	418856	418856	418856	418856	418856	418856	418856	404435	418856	418856	418856	418856
Rotor arm	400051	400051	400051	400051	400051	400051	418726	415088	400052	400052	400052	400051
Contact breaker, complete	54411507	54411507	54411507	54411507	54411507	54411507	—	—	—	—	—	—
Contact set	407050	407050	407050	407050	407050	407050	420197	407050	420196	420196	420196	420196
Condenser	54413006	54413006	54413006	54413006	54413006	54413006	423871	407044	54413002	54413002	54413002	54413002
Base plate, contact breaker (with condenser on DKY)	418886	418886	418886	418886	418886	418886	419980	408940	418650	418650	418650	418650
Plate, bearing, contact breaker	—	—	—	—	—	—	420375	—	420178	420178	420178	420178
Spring, star, base fixing	—	—	—	—	—	—	496058	410712	496043	496043	496043	496043
Circlip, base fixing	—	—	—	—	—	—	496059	414728	496042	496042	496042	496042
§ Pin, terminal and details, L.T.	405314	405314	405314	405314	405314	405314	407019	408988	423369	423369	423369	423369
Bush, insulating, inside L.T. terminal or bridge	409565	409565	409565	409565	409565	409565	408927	408945	—	—	—	—
Piece/pad, shaped, insulating, L.T. terminal	405319	405319	405319	405319	405319	405319	405319	408944	418623	418623	418623	418623
Bush, contact breaker spring	—	—	—	—	—	—	419950	—	418933	418933	418933	418933
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	418935	418935	418935	418935
Lead or connector, L.T.	—	—	—	—	—	—	419021	407010	418946	418946	418946	418946
Lead, earth	—	—	—	—	—	—	419023	414715	418664	418664	418664	418664
Cam	420944	420944	420944	420944	420944	420944	496074	408999	496077	496077	496077	496076
Springs, set, auto-advance	407267/S	407267/S	420756	420756	420757	420757	416151/S	416051/S	407267/S	407267/S	416194/S	416126/S
Toggle	418707	418707	418707	418707	418707	418707	418707	407131	418707	418707	418707	418707
Weight	418321	418321	418321	418321	418321	418321	418321	415729	418915	418915	418915	418321
Plate, shaft and action	420467	420467	420670	420670	420672	420672	419913	410767	420830	420832	420917	419668
Lubricator	—	—	—	—	—	—	54410441	—	—	—	—	—
Bearing, bushing, top	—	—	—	—	—	—	—	189272	—	—	—	—
Bushing, bottom	420064	419430	420064	419430	420064	419430	—	410590	419430	419430	419430	419430
Clip, cap retaining	425218	425218	425218	425218	425218	425218	421824	420262/S	425765	425765	425765	425765
§Sundry parts, set	420491	420491	420491	420491	420491	420491	419645	400843	419644	419644	419644	419644

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Supplied by Vehicle Manufacturer
 § Recommended spares for stock

DETAILED SPARE PARTS

Part No.	†40392B	40394A	40394B/H	†40395A	†40396A/D	40401A/F	†40402A/N	†40402Q/U	†40403A/D	40404A/F	40405A/F	40408A/D
Model	DMX6	DM6	DM6	DM2P4	DM2P4	DM6	D2A4	D2A4	DM2P4	DMZ6	DMZ6	DMBZ6A
Type	C54-1	BS68	BS68	V166	BQ33-1	T93	CW67	CW67	V167	P82	P77	G112
Rotation	Clock	Clock	Clock	Clock	Anti-clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	540	542	542	543	544	546	548	548	550	249	459	554
Range	16°-18°	16°-18°	16°-18°	14°-16°	15°-17°	10°-20°	6°-8°	6°-8°	13°-15°	11½°-13°	12°-14°	19°-21°
Replaced by (see footnote)	(40608)	—	—	(40537)	(40491)	—	(40711)	(40711)	(40698)	—	—	—
§Plate/lever, clamping, timing or micrometer	421191	421191	421191	—	421191	421191	421305	421305	421191	421249	414770	421191
Screw, or nut and screw assembly	415087	415087	415087	—	421194	415087	415087	415087	415087	412202	415087	415087
Spring, ratchet, micrometer	421825	421825	421825	421825	421825	421825	—	—	421825	421825	421825	421825
Spring, return, micrometer	419086	419086	419086	419086	419086	419086	—	—	419086	419086	419086	419086
§Unit, vacuum control	421015	421027	54413188	421068	420918	54412033	—	—	421221	54412741	54412741	421362
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	419087	419087	419087	419087	419087	419087	—	—	419087	419087	419087	419087
§Details set, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	410601	410601	410601	410601	410601	420620	—	493010	410601	—	—	410601
§Distributor, service	—	—	—	—	—	—	—	—	—	—	—	—
Cap, distributor	418861	418857	418857	418871	418871	418857	418888	418888	418871	418857	418857	418857
Nut, cable securing	—	410600	410600	—	—	410600	410600	410600	—	410600	410600	410600
Brush and spring	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856
Rotor arm	418726	418726	418726	400051	400052	418726	400051	400051	400051	418726	418726	418726
Contact breaker, complete	—	—	—	—	—	—	54411507	54411507	—	—	—	—
Contact set	420197	419398	420197	420196	420196	420197	407050	407050	420196	420197	420197	420197
Condenser	423871	423871	423871	54413002	54413002	423871	54413006	54413006	54413002	423871	423871	423871
Base plate, contact breaker (with condenser on DKY)	419980	419235	419980	418650	418650	419980	418886	418886	418650	419980	419980	419980
Plate, bearing, contact breaker	420375	420375	420375	420178	420178	420375	—	—	420178	420375	420375	420375
Spring, star, base fixing	496058	496058	496058	496043	496043	496058	—	—	496043	496058	496058	496058
Circlip, base fixing	496059	496059	496059	496042	496042	496059	—	—	496042	496059	496059	496059
Pin, terminal and details, L.T.	407019	407019	407019	423369	423369	407019	405314	405314	423369	407019	407019	407019
Bush, insulating, inside L.T. terminal or bridge	408927	408927	408927	—	—	408927	409565	409565	‡161353	408927	408927	408927
Piece/pad, shaped, insulating, L.T. terminal	405319	405319	405319	418623	418623	405319	405319	405319	—	405319	405319	405319
Bush, contact breaker spring	419950	418933	419950	418933	418933	419950	—	—	419950	419950	419950	419950
Piece, insulating, contact breaker spring	—	418935	—	418935	418935	—	—	—	—	—	—	‡418723
Lead or connector, L.T.	419021	419021	419021	418946	418946	419021	—	—	419021	419021	419021	419021
Lead, earth	419023	419023	419023	418664	418664	419023	—	—	418664	419023	419023	419023
Cam	420683	496074	496074	496076	496077	496074	420944	420944	497076	496079	496079	496079
Springs, set, auto-advance	421018	416194/S	416194/S	416193/S	416194/S	416111/S	416097/S	416097/S	421277	416089/S	410605/S	410605/S
Toggle	418707	418707	418707	419149	418707	418707	419149	419149	418707	—	—	—
Weight	415729	418321	418321	418321	418321	418915	418321	418321	418321	410033/S	410033/S	410033/S
Plate, shaft and action	421022	418330	418330	421065	420917	421321	421310	421310	421065	420909	420909	419741
Lubricator	419525/S	419525/S	419525/S	—	—	419525/S	—	—	—	419525/S	419525/S	419525/S
Bearing, bushing, top	—	—	—	—	—	—	—	—	—	—	—	189272
Bushing, bottom	—	—	—	419430	419430	—	419430	419430	419430	—	—	419673
Clip, cap retaining	425765	425765	425765	425765	425765	425765	425218	54411165	425765	421824	425765	425765
Sundry parts, set	419645	419645	419645	419644	419644	419645	420491	420491	419644	419645	419645	419645

DISTRIBUTORS

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Oil seal § Recommended spares for stock
 † Washer, insulating, contact spring

DETAILED SPARE PARTS

F32

40408 — 40427

Part No.	40408E/H	40410A/D	40411B	†40414A	†40414E	40417A	†40422A/B	†40423A/D	40424A/E	†40425A/B	†40427A
Model	DMBZ6	DMBZ4	DVXH6A	DM2P4	DM2P4	DX6A	DM2P4	DM6	DM6	DM2P4	DM2P4
Type	G112	G113	BU41-1	BN238	BN238	WG11	YH13	BS69	BS71	BQ36	BN240
Rotation	Clock	Clock	Anti-clock	Clock	Clock	Anti-clock	Clock	Clock	Clock	Anti-clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	554	552	555	562	562	564	569	570	570	571	573
Range	19°-21°	19°-21°	14°-16°	15°-17°	15°-17°	16°-18°	15°-17°	—	14°-16°	16½°-18½°	18°-20°
Replaced by (see footnote)	—	—	—	(40509)	(40509)	—	(40520)	(40424)	—	(40491)	(40624)
§Plate/lever, clamping, timing or micrometer	421191	420151	417615	421191	421191	410612	421191	421191	421191	421191	421191
Screw, or nut and screw assembly	415087	415087	415087	415087	415087	401119	415087	415087	415087	415087	415087
Spring, ratchet, micrometer	421825	421825	—	421825	421825	—	421825	421825	421825	421825	421825
Spring, return, micrometer	419086	419086	—	419086	419086	—	419086	419086	419086	419086	419086
§Unit, vacuum control	54413040	419681	419070	421456	421456	—	420755	54413188	54413188	421634	420537
§Housing, micrometer	—	—	408914	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	408986	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	419087	419087	408948	419087	419087	—	419087	419087	419087	419087	419087
§Details set, micrometer	—	—	408989	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	410601	410601	410601	410601	410601	410601	—	410601	—	410601	410601
§Distributor, service	—	—	—	—	—	40417/S	—	—	—	—	—
Cap, distributor	418857	418859	415708	418871	422905	407043	418865	418857	418857	418871	418871
Nut, cable securing	410600	410600	—	—	—	410600	410600	410600	410600	—	—
Brush and spring	418856	418856	404435	418856	418856	404435	418856	418856	418856	418856	418856
Rotor arm	418726	408355	407106	400051	400051	407106	400051	418726	418726	400052	400051
Contact breaker, complete	‡422557	‡422557	—	—	—	—	—	—	—	—	—
Contact set	420197	420197	407050	420196	420196	407050	420196	420197	420197	420196	420196
Condenser	423871	423871	407044	54413002	54413002	407044	54413002	423871	423871	54413002	54413002
Base plate, contact breaker (with condenser on DKY)	419980	419980	408940	418650	418650	410520	418650	419980	419980	418650	418650
Plate, bearing, contact breaker	420375	420375	—	420178	420178	—	420178	420375	420375	420178	420178
Spring, star, base fixing	496058	496058	410712	496043	496043	—	496043	496058	496058	496043	496043
Circlip, base fixing	496059	496059	414728	496042	496042	—	496042	496059	496059	496042	496042
§ Pin, terminal and details, L.T.	407019	407019	408988	423369	423369	407019	423369	407019	407019	423369	423369
Bush, insulating, inside L.T. terminal or bridge	408927	408927	408945	—	418623	407006	*161353	408927	408927	—	—
Piece/pad, shaped, insulating, L.T. terminal	405319	405319	408944	418623	—	407018	—	405319	405319	418623	418623
Bush, contact breaker spring	419950	419950	—	418933	418933	—	418933	419950	419950	418933	418933
Piece, insulating, contact breaker spring	‡418723	‡418723	—	418935	418935	—	418935	—	—	418935	418935
Lead or connector, L.T.	419021	419021	407010	418946	418946	—	418946	419021	419021	418946	418946
Lead, earth	419023	419023	414715	418664	418664	—	418664	419023	419023	418664	418664
Cam	496079	421368	408999	496076	496076	54411781	496076	496074	496074	496077	496076
Springs, set, auto-advance	410605/S	410605/S	421374	421458	421458	421488	421596	421616	421616	421639	422243/S
Toggle	—	—	407131	419149	419149	407131	418707	418707	418707	418707	418707
Weight	410033/S	410033/S	415730	418321	418321	415730	418321	418321	418321	418915	418321
Plate, shaft and action	419741	419741	420189	420007	420007	408475	419669	419913	419913	420832	421153
Lubricator	419525/S	—	—	—	—	—	—	419525/S	419525/S	—	—
Bearing, bushing, top	—	189272	189272	—	—	189272	—	—	—	—	—
Bushing, bottom	419673	419673	410590	419430	419430	410590	419430	—	—	419430	419430
Clip, cap retaining	425765	425765	420262/S	425765	425765	420261	425765	425765	425765	425765	425765
§Sundry parts, set	419645	419645	400843	419644	419644	400843	419644	419645	419645	419644	419644

DISTRIBUTORS

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Damper § Recommended spares for stock
 || Oil seal ¶ Washer, insulating, contact spring

For illustrations, see pages F2-F7

continued

DETAILED SPARE PARTS

Part No.	†40427B/D	†40427F	†40428A/B	40429A/D	†40430A/B	40431A/K	40431L	†40434A	40435A	†40436A	†40437A	40442A/E
Model	DM2P4	DM2P4	DM2P4	DM6	DM2P4	DM2P4	DM2P4	DM2P4	DVX6A	DVX6A	DM2P4	DM6
Type	BN240	BN240	S94	BS72	BQ33-2	BZ1	BZ1	V166-1	GC50-1	GC48-1	V170	A209
Rotation	Clock	Clock	Clock	Clock	Anti-clock	Anti-clock	Anti-clock	Clock	Clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	587	587	574	575	544	504	504	579	577	578	580	583
Range	16°-18°	16°-18°	16°-18°	19°-21°	15°-17°	18°-20°	18°-20°	12°-14°	18°-20°	14°-16°	19°-21°	11½°-13°
Replaced by (see footnote)	(40624)	(40624)	(40682)	—	(40491)	—	—	(40477)	—	(40694)	(40478)	—
§Plate/lever, clamping, timing or micrometer	421191	421191	421191	420617	421191	420151	420151	—	414909	414909	—	421191
Screw, or nut and screw assembly	415087	415087	415087	401119	415087	415087	415087	—	412202	412202	—	415087
Spring, ratchet, micrometer	421825	421825	421825	421825	421825	421825	—	421825	—	—	421825	421825
Spring, return, micrometer	419086	419086	419086	419086	419086	419086	419086	419086	—	—	419086	419086
§Unit, vacuum control	420537	420537	421700	421642	420918	423380	423380	421684	421710	421720	421221	421189
§Housing, micrometer	—	—	—	—	—	—	—	—	408913	408913	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	408986	408986	—	—
§Nut, adjusting, micrometer	419087	419087	419087	419087	419087	419087	419087	419087	408948	408948	419087	419087
§Details set, micrometer	—	—	—	—	—	—	—	—	408989	408989	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	410601	410601	410601	—	410601	410601	420620	410601	410601	410601	410601	420620
§Distributor, service	—	—	—	—	—	—	—	—	—	—	—	—
Cap, distributor	418871	422905	418871	418857	418871	418865	418865	418871	407043	407043	418871	418861
Nut, cable securing	—	—	—	410600	—	410600	410600	—	410600	410600	—	—
Brush and spring	418856	418856	418856	418856	418856	418856	418856	418856	404435	404435	418856	418856
Rotor arm	400051	400051	400051	418726	400052	400052	400052	400051	415088	415088	400051	418726
Contact breaker, complete	—	—	—	—	—	—	—	—	—	—	—	—
Contact set	420196	420196	420196	420197	420196	420196	420196	420196	407050	407050	420196	420197
Condenser	54413002	54413002	54413002	423871	54413002	422849	422849	54413002	407044	407044	54413002	423871
Base plate, contact breaker (with condenser on DKY)	418650	418650	418650	419980	418650	424858	424858	418650	408940	408940	418650	419980
Plate, bearing, contact breaker	420178	420178	420178	420375	420178	420178	420178	420178	—	—	420178	420375
Spring, star, base fixing	496043	496043	496043	496058	496043	496043	496043	496043	410712	410712	496043	496058
Circlip, base fixing	496042	496042	496042	496059	496042	496042	496042	496042	414728	414728	496042	496059
Pin, terminal and details, L.T.	423369	423369	423369	407019	423369	423369	423369	423369	408988	408988	423369	407019
Bush, insulating, inside L.T. terminal or bridge	—	—	—	408927	—	—	—	—	408945	408945	—	408927
Piece/pad, shaped, insulating, L.T. terminal	418623	418623	—	405319	—	—	—	418623	408944	408944	418623	405319
Bush, contact breaker spring	418933	418933	418933	419950	418933	418933	418933	418933	—	—	418933	419950
Piece, insulating, contact breaker spring	418935	418935	418935	—	418935	418935	418935	418935	—	—	418935	—
Lead or connector, L.T.	418946	418946	—	419021	—	—	—	418946	407010	407010	418946	419021
Lead, earth	418664	418664	418664	419023	418664	418664	418664	418664	414715	414715	418664	419023
Cam	496076	496076	496076	496074	496077	496077	421854	496076	408999	408999	496076	496074
Springs, set, auto-advance	422243/S	422243/S	424103	421645	416194/S	416103/S	410049	420355/S	421716	421721	421727	421851
Toggle	418707	418707	418707	418707	418707	418707	—	419149	407131	407131	418707	418707
Weight	418321	418321	418321	418321	418915	418915	54410282	418321	415729	415729	418321	418321
Plate, shaft and action	421153	421153	419669	421640	420917	420832	54410294	421065	410736	420191	419668	421321
Lubricator	—	—	—	419525/S	—	—	—	—	—	—	—	419525/S
Bearing, bushing, top	—	—	—	—	—	—	—	—	189272	189272	—	—
Bushing, bottom	419430	419430	419430	—	419430	419430	419430	419430	410590	410590	419430	—
Clip, cap retaining	425765	425765	425765	425765	425765	425765	425765	425765	420262/S	420262/S	425765	421824
§Sundry parts, set	419644	419644	419644	419645	419644	419644	419644	419644	400843	400843	419644	419645

DISTRIBUTORS

40427 — 40442

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets § Recommended spares for stock

DETAILED SPARE PARTS

F34

40444 — 40467

DISTRIBUTORS

Part No.	40444A/E	40445A/B	40449A/B	†40452A/E	40453A	†40459A/D	40462A	†40463A	†40463B	40464B/E	40465A	40467D
Model	DM6	DVX6A	DKX2A	DM2P4	DY6A	DMBZ6A	DX6A	DM2P4	DM2P4	DMZ6	DM2P4	DM6
Type	GF24	GCS9	RO-21	BN	G48-0	G116	D17	P79-1	P79-1	P80-1	SA19	CF23-1
Rotation	Anti-clock	Clock	Anti-clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Anti-clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	557	584	590	591	292	596	599	500	500	448	600	558
Range	11½°-13°	20°-23°	11½°-13°	6°-8°	24°-27°	13°-15°	16°-18°	14½°-16½°	14½°-16½°	10°-12°	18°-20°	9°-11°
Replaced by (see footnote)	—	—	—	(40498)	—	(40720)	—	(40527)	(40527)	—	—	—
§Plate/lever, clamping, timing or micrometer	420973	414909	406105	421191	408352	421191	405903	414770	414770	414770	421191	420973
Screw, or nut and screw assembly	412202	412202	401119	415087	401082	415087	401119	412202	412202	415087	415087	412202
Spring, ratchet, micrometer	421825	—	—	421825	—	421825	—	421825	421825	421825	421825	421825
Spring, return, micrometer	419086	—	—	419086	—	419086	—	419086	419086	419086	419086	419086
§Unit, vacuum control	54412958	—	—	420278	—	54413040	—	422503	422826	54413300	421456	424256
§Housing, micrometer	—	408913	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	408986	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	419087	408948	—	419087	403321	419087	403321	419087	419087	419087	419087	419087
§Details set, micrometer	—	408989	—	—	408989	—	408989	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	—	410601	—	410601	410601	410601	—	—	—	—	410601	—
§Distributor, service	—	—	40449/S	—	40453/S	—	40462/S	—	—	—	—	—
Cap, distributor	418861	407043	400136	422905	407043	418857	407043	418865	418865	418857	418871	418857
Nut, cable securing	—	410600	410600	—	410600	410600	410600	410600	410600	410600	—	410600
Brush and spring	418856	404435	404435	418856	404435	418856	404435	418856	418856	418856	418856	418856
Rotor arm	418731	415088	400052	400051	415088	418726	415088	400051	400051	418726	400051	418731
Contact breaker, complete	—	—	400164	—	—	—	—	—	—	—	—	—
Contact set	420197	407050	400415	420196	407050	420197	407050	420196	420196	420197	420196	420197
Condenser	423871	407044	400308	54413002	407044	423871	407044	54413002	54413002	423871	54413002	423871
Base plate, contact breaker (with condenser on DKY)	419980	408940	400001	418650	410520	419980	410520	418650	418650	419980	418650	419980
Plate, bearing, contact breaker	420375	—	—	420178	—	420375	—	420178	420178	420375	420178	420375
Spring, star, base fixing	496058	410712	—	496043	—	496058	—	496043	496043	496058	496043	496058
Circlip, base fixing	496059	414728	—	496042	—	496059	—	496042	496042	496059	496042	496059
Pin, terminal and details, L.T.	407019	408988	123022	423369	407019	407019	407019	423369	423369	407019	423369	407019
Bush, insulating, inside L.T. terminal or bridge	408927	408945	—	—	407006	408927	407006	—	—	408927	—	408927
Piece/pad, shaped, insulating, L.T. terminal	405319	408944	—	—	407018	405319	407018	418623	418623	405319	418623	405319
Bush, contact breaker spring	419950	—	—	418933	—	419950	—	418933	418933	419950	418933	419950
Piece, insulating, contact breaker spring	—	—	—	418935	—	‡422557	—	418935	418935	—	418935	—
Lead or connector, L.T.	419021	407010	400034	—	407010	419021	407010	418946	418946	419021	418946	419021
Lead, earth	419023	414715	—	418664	—	419023	—	418664	418664	419023	418664	419023
Cam	496074	408999	415283	496076	419947	496079	54411781	496078	496078	496079	496076	496074
Springs, set, auto-advance	421377	422037	421538/S	421386/S	407344	422425	422466	416088/S	416088/S	410049/S	422349	421393
Toggle	418707	407131	407131	419149	400141	‡418723	407131	—	—	—	419149	418707
Weight	418915	415729	415730	418321	400149	410033/S	415729	410033/S	410033/S	410033/S	418321	418915
Plate, shaft and action	421391	420190	421935	421629	407189	419741	407366	419689	419689	420909	420007	421391
Lubricator	54410441	—	—	—	—	419525/S	—	—	—	419525/S	—	419525/S
Bearing, bushing, top	—	189272	—	—	404374	189272	404374	—	—	—	—	—
Bushing, bottom	—	410590	420406	419430	410590	419673	410590	419430	419430	—	419430	—
Clip, cap retaining	425765	420262/S	420261	425765	420261	421824	420261	425765	425765	425765	425765	421824
§Sundry parts, set	419645	400843	400843	419644	400843	419645	400843	419644	419644	419645	419644	419645

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Damper
 § Recommended spares for stock ¶ Oil seal

DETAILED SPARE PARTS

Part No.	40470A	40471A/B	†40472A/B	‡40473A	40476A	40477A	40477B/D	40478A	40479A	40479B/D	40479E	†40480A
Model	DM6	DM6	DM6	DVX6A	DM6	DM2	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4
Type	A209-1	T101	A214	GC	BS75	V166-2	V166	V170-1	V164-1	V164-1	V164-1	V167-1
Rotation	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	605	322	606	608	609	579	579	580	409	409	409	550
Range	15°-17°	7°-9°	20°-23°	10°-20°	20°-23°	14°-16°	14°-16°	20°-23°	20°-23°	20°-23°	20°-23°	14°-16°
Replaced by (see footnote)	—	—	(40673)	—	—	—	—	—	—	—	—	(40698)
§Plate/lever, clamping, timing or micrometer	421191	421191	421191	414909	421191	—	—	—	421191	421191	421191	421191
Screw, or nut and screw assembly	415087	415087	412202	412202	415087	—	—	—	415087	415087	415087	415087
Spring, ratchet, micrometer	421825	421825	421825	—	421825	421825	421825	421825	421825	421825	421825	421825
Spring, return, micrometer	419086	419086	419086	—	419086	419086	419086	419086	419086	419086	419086	419086
§Unit, vacuum control	419681	54412958	421189	—	423040	421957	54411230	421958	54411727	54411727	54411727	54411480
§Housing, micrometer	—	—	—	408913	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	408986	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	419087	419087	419087	408948	419087	419087	419087	419087	419087	419087	419087	419087
§Details set, micrometer	—	—	—	408989	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	410601	410601	410601	410601	—	410601	420620	420620	420620	420620	420620	420620
§Distributor, service	—	—	—	—	—	—	—	—	—	—	—	—
Cap, distributor	418861	418857	418861	407043	418857	418871	418871	418871	418865	418865	418865	418871
Nut, cable securing	—	410600	—	410600	410600	—	—	—	410600	410600	410600	—
Brush and spring	418856	418856	418856	404435	418856	418856	418856	418856	418856	418856	418856	418856
Rotor arm	418726	418726	418726	415088	418726	400051	400051	400051	400051	400051	400051	400051
Contact breaker, complete	—	—	—	—	—	—	—	—	—	—	—	—
Contact set	420197	420197	420197	407050	420197	423153	423153	423153	423153	423153	423153	423153
Condenser	423871	423871	423871	407044	423871	423871	423871	423871	423871	423871	423871	423871
Base plate, contact breaker (with condenser on DKY)	419980	419980	419980	408940	419980	422318	422318	422318	422318	422318	422318	422318
Plate, bearing, contact breaker	420375	420375	420375	—	420375	421078	421078	421078	421078	421078	421078	421078
Spring, star, base fixing	496058	496058	496058	410712	496058	—	—	—	—	—	—	—
Circlip, base fixing	496059	496059	496059	414728	496059	—	—	—	—	—	—	—
§ Pin, terminal and details, L.T.	407019	407019	407019	408988	407019	422238	422238	422238	422238	422238	422238	422238
Bush, insulating, inside L.T. terminal or bridge	408927	408927	408927	408945	408927	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353
Piece/pad, shaped, insulating, L.T. terminal	405319	405319	405319	408944	405319	—	—	—	—	—	—	—
Bush, contact breaker spring	419950	419950	419950	—	419950	419950	419950	419950	419950	419950	419950	419950
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Lead or connector, L.T.	419021	419021	419021	407010	419021	422235	422235	422235	422235	422235	422235	422235
Lead, earth	419023	419023	419023	414715	419023	421088	421088	421088	421088	421088	421088	421088
Cam	496074	496074	496074	408999	496074	496076	496076	496076	496076	496076	419072	496076
Springs, set, auto-advance	416055/S	407267/S	406136	422908	423039	416082/S	54411430	421727	420658	420658	54411568	421277
Toggle	418707	418707	418707	407131	418707	419149	418707	418707	418707	418707	—	418707
Weight	418321	418321	418321	415729	418321	418321	418321	418321	418321	418321	422353	418321
Plate, shaft and action	418330	419258	420447	410767	420447	421065	421065	419668	419668	419668	54410290	421065
Lubricator	419525/S	419525/S	419525/S	—	419525/S	—	—	—	—	—	—	—
Bearing, bushing, top	—	—	—	189272	—	—	—	—	—	—	—	—
Bushing, bottom	—	—	—	410590	—	419430	419430	419430	419430	421998	421998	419430
Clip, cap retaining	425765	425765	421824	420262/S	425765	425765	425765	425765	425765	421824	421824	425765
§Sundry parts, set	419645	419645	419645	419843	419645	419644	419644	419644	419644	419644	419644	419644

DISTRIBUTORS

40470 — 40480

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Return unit for possible repair
 § Recommended spares for stock ¶ Washer, insulating, contact spring

DETAILED SPARE PARTS

F36

40480 — 40492

DISTRIBUTORS

Part No.	†40480B/E	†40480F	40484A	40485A	†40488A	40489A/B	40490A/B	40490D	40491A/B	40491D/E	40491F	40492A
Model	DM2P4	DM2P4	DVXH6A	DMBZ6A	DM2P4	DX6A	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4
Type	V167-1	V167-1	XW11-1	G119	BN238-1	WG13	T104	T104	BQ33-2	BQ33-2	BQ33-2	S94-1
Rotation	Clock	Clock	Anti-clock	Clock	Clock	Anti-clock	Clock	Clock	Anti-clock	Anti-clock	Anti-clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	550	550	612	616	546	617	619	619	544	544	544	574
Range	14°-16°	14°-16°	18°-20°	11°-13°	11°-13°	13°-15°	18°-20°	18°-20°	16°-18°	16°-18°	16°-18°	13°-15°
Replaced by (see footnote)	(40698)	(40698)	—	—	(40510)	—	—	—	—	—	—	—
§Plate/lever, clamping, timing or micrometer	421191	421191	417615	421191	421191	410612	421191	421191	421191	421191	421191	421191
Screw, or nut and screw assembly	415087	415087	415087	415087	415087	401119	415087	415087	415087	415087	415087	415087
Spring, ratchet, micrometer	421825	421825	—	421825	421825	—	421825	421825	421825	421825	421825	421825
Spring, return, micrometer	419086	419086	—	419086	419086	—	419086	419086	419086	419086	419086	419086
§Unit, vacuum control	54411480	54411480	419073	419681	423284	—	54411333	54411333	421948	421948	421948	421948
§Housing, micrometer	—	—	408914	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	408986	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	419087	419087	408948	419087	419087	—	419087	419087	419087	419087	419087	419087
§Details set, micrometer	—	—	408989	—	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	420620	420620	410601	410601	410601	410601	—	—	420620	420620	420620	420620
§Distributor, service	—	—	—	—	—	—	—	—	—	—	—	—
Cap, distributor	418871	418871	417178	418857	418871	407043	418871	418871	418871	418871	418871	418871
Nut, cable securing	—	—	—	410600	—	410600	—	—	—	—	—	—
Brush and spring	418856	418856	404435	418856	418856	404435	418856	418856	418856	418856	418856	418856
Rotor arm	400051	400051	407106	418726	400051	407106	400051	400051	400052	400052	400052	400051
Contact breaker, complete	—	—	—	—	—	—	—	—	—	—	—	—
Contact set	423153	423153	407050	420197	420196	407050	423153	423153	423153	423153	423153	423153
Condenser	423871	423871	407044	423871	54413002	424535	423871	423871	423871	423871	423871	423871
Base plate, contact breaker (with condenser on DKY)	422318	422318	408940	419980	418650	410520	422318	422318	422318	422318	422318	422318
Plate, bearing, contact breaker	421078	421078	—	420375	420178	—	421078	421078	421078	421078	421078	421078
Spring, star, base fixing	—	—	410712	496058	496043	—	—	—	—	—	—	—
Circlip, base fixing	—	—	414728	496059	496042	—	—	—	—	—	—	—
§ Pin, terminal and details, L.T.	422238	422238	408988	407019	423369	407019	422238	422238	422238	422238	422238	422238
Bush, insulating, inside L.T. terminal or bridge	¶161353	¶161353	408945	408927	¶161353	407006	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353
Piece/pad, shaped, insulating, L.T. terminal	—	—	408944	405319	—	407018	—	—	—	—	—	—
Bush, contact breaker spring	419950	419950	—	419950	419950	—	419950	419950	419950	419950	419950	419950
Piece, insulating, contact breaker spring	—	—	—	‡422557	—	—	—	—	—	—	—	—
Lead or connector, L.T.	422235	422235	407010	419021	423298	407010	422235	422235	422235	422235	422235	422235
Lead, earth	421088	421088	414715	419023	418664	420238	421088	421088	421088	421088	421088	421088
Cam	496076	424423	408999	496079	496076	54411781	496076	496076	496077	496077	421887	496076
Springs, set, auto-advance	421277	54412549	423218	416145	416111/S	423347	423391	423391	421538	421538	416029	424103
Toggle	418707	—	407131	¶418723	418707	407131	418707	418707	418707	418707	—	418707
Weight	418321	422353	415730	410033/S	418321	415730	418321	418321	418915	418915	54410282	418321
Plate, shaft and action	421065	54410290	416552	419741	423077	419433	420007	420007	420917	420917	54410294	419669
Lubricator	—	—	—	419525/S	—	—	—	—	—	—	—	—
Bearing, bushing, top	—	—	189272	189272	—	189272	—	—	—	—	—	—
Bushing, bottom	421998	421998	410590	419673	419430	410590	419430	421998	419430	421998	421998	419430
Clip, cap retaining	421824	421824	420262/S	421824	425765	420261	425765	421824	425765	421824	421824	425765
§Sundry parts, set	419644	419644	400843	419645	419644	400843	419644	419644	419644	419644	419644	419644

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Damper § Recommended spares for stock ¶ Oil seal
 ¶ Washer, insulating, contact spring

For illustrations, see pages F2-F7

continued

DETAILED SPARE PARTS

Part No.	40492B	40492D/E	40494A	40494B/ D and F	40494E and H	40495A	40495B	40495D/E	40496A	40496B/ D and F	40496E and H	40497A
Model	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4
Type	S94-1	S94-1	BN214-1	BN214-1	BN214-1	BN216-1	BN216-1	BN216-1	BN108-1	BN108-1	BN108-1	BN212-1
Rotation	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	574	574	504	504	504	430	430	430	393	393	393	376
Range	13°-15°	13°-15°	19°-21°	19°-21°	19°-21°	16°-18°	16°-18°	16°-18°	19°	19°	19°	16°-18°
§Plate/lever, clamping, timing or micrometer	421191	421191	421191	421191	421191	421191	421191	421191	421191	421191	421191	421191
Screw, or nut and screw assembly	415087	415087	415087	412202	412202	415087	415087	415087	412202	412202	412202	415087
Spring, ratchet, micrometer	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825
Spring, return, micrometer	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086
§Unit, vacuum control	421948	421948	54411101	54411101	54411101	54411727	54411727	54411727	421946	421946	421946	54411233
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087
§Details set, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	420620	420620	420620	420620	420620	—	—	—	—	—	—	420620
§Distributor, service	—	—	—	—	—	—	—	—	—	—	—	—
Cap, distributor	418871	418871	422905	422905	422905	418865	418865	418865	418865	418865	418865	422905
Nut, cable securing	—	—	—	—	—	410600	410600	410600	410600	410600	410600	—
Brush and spring	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856
Rotor arm	400051	400051	400051	400051	400051	400051	400051	400051	400051	400051	400051	400051
Contact breaker, complete	—	—	—	—	—	—	—	—	—	—	—	—
Contact set	423153	423153	423153	423153	423153	423153	423153	423153	423153	423153	423153	423153
Condenser	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871
Base plate, contact breaker (with condenser on DKY)	422318	422318	422318	422318	422318	422318	422318	422318	422318	422318	422318	422318
Plate, bearing, contact breaker	421078	421078	421078	421078	421078	421078	421078	421078	421078	421078	421078	421078
Spring, star, base fixing	—	—	—	—	—	—	—	—	—	—	—	—
Circlip, base fixing	—	—	—	—	—	—	—	—	—	—	—	—
§ Pin, terminal and details, L.T.	422238	422238	422238	422238	422238	422238	422238	422238	422238	422238	422238	422238
Bush, insulating, inside L.T. terminal or bridge	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353
Piece/pad, shaped, insulating, L.T. terminal	—	—	—	—	—	—	—	—	—	—	—	—
Bush, contact breaker spring	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Lead or connector, L.T.	422235	422235	422235	422235	422235	422235	422235	422235	422235	422235	422235	422235
Lead, earth	421088	421088	421088	421088	421088	421088	421088	421088	421088	421088	421088	421088
Cam	496076	491070	496076	496076	424424	496076	496076	491070	496078	496078	491071	496076
Springs, set, auto-advance	424103	421902	416103	416103	54410386	416155	416155	54410405	416168	416168	425105	408382
Toggle	418707	—	418707	418707	—	418707	418707	—	—	—	—	418707
Weight	418321	422353	418321	418321	422353	418321	418321	422353	410033/S	410033/S	422353	418321
Plate, shaft and action	419669	54410290	421153	421153	54410290	419669	419669	54410290	419689	419689	54410290	419669
Lubricator	—	—	—	—	—	—	—	—	—	—	—	—
Bearing, bushing, top	—	—	—	—	—	—	—	—	—	—	—	—
Bushing, bottom	421998	421998	419430	421998	421998	419430	421998	421998	419430	421998	421998	419430
Clip, cap retaining	421824	421824	425765	421824	421824	425765	421824	421824	425765	421824	421824	425765
§Sundry parts, set	419644	419644	419644	419644	419644	419644	419644	419644	419644	419644	419644	419644

§ Recommended spares for stock ¶ Washer, insulating, contact spring

DISTRIBUTORS

40492 — 40497

DETAILED SPARE PARTS

F38

40497 — 40504

DISTRIBUTORS

Part No.	40497B/D	40498A	40498B	40499A	40499B/D and F	40499E and H	40500A	40500B	40502A	40502B/D	40504A	40504B/D
Model	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4
Type	BN212-1	BN	BN	BN240-1	BN240	BN240	BN216-2	BN216-2	A203-1	A203	G95-1	C95-1
Rotation	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	376	591	591	587	587	587	538	538	504	504	467	467
Range	16°-18°	6°-8°	6°-8°	18°-20°	18°-20°	18°-20°	20°-23°	20°-23°	17°-19°	17°-19°	20°-22°	20°-22°
§Plate/lever, clamping, timing or micrometer	421191	421191	421191	421191	421191	421191	421191	421191	—	—	420151	420151
Screw, or nut and screw assembly	415087	415087	415087	412202	412202	412202	415087	415087	—	—	415087	415087
Spring, ratchet, micrometer	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825
Spring, return, micrometer	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086
§Unit, vacuum control	54411233	421946	421946	421947	54411241	54411241	421937	421937	421947	54411241	54411727	54411727
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087
§Details set, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	—	—	—	—	—	—	—	—	—	—	—	—
§Distributor, service	420620	420620	420620	410601	420620	420620	—	—	—	—	420620	420620
Cap, distributor	422905	422905	422905	422905	422905	422905	418865	418865	418865	418865	418871	418871
Nut, cable securing	—	—	—	—	—	—	410600	410600	410600	410600	—	—
Brush and spring	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856
Rotor arm	400051	400051	400051	400051	400051	400051	400051	400051	400051	400051	400051	400051
Contact breaker, complete	—	—	—	—	—	—	—	—	—	—	—	—
Contact set	423153	423153	423153	423153	423153	423153	423153	423153	423153	423153	423153	423153
Condenser	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871
Base plate, contact breaker (with condenser on DKY)	422318	422318	422318	422318	422318	422318	422318	422318	422318	422318	422318	422318
Plate, bearing, contact breaker	421078	421078	421078	421078	421078	421078	421078	421078	421078	421078	421078	421078
Spring, star, base fixing	—	—	—	—	—	—	—	—	—	—	—	—
Circlip, base fixing	—	—	—	—	—	—	—	—	—	—	—	—
§ Pin, terminal and details, L.T.	422238	422238	422238	422238	422238	422238	422238	422238	422238	422238	422238	422238
Bush, insulating, inside L.T. terminal or bridge	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353
Piece/pad, shaped, insulating, L.T. terminal	—	—	—	—	—	—	—	—	—	—	—	—
Bush, contact breaker spring	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
§ Lead or connector, L.T.	422235	422235	422235	422235	422235	422235	422235	422235	422235	422235	422235	422235
Lead, earth	421088	421088	421088	421088	421088	421088	421088	421088	421088	421088	421088	421088
Cam	496076	496076	496076	496076	496076	424424	496076	496076	496076	496076	496078	496078
Springs, set, auto-advance	408382	421386	421386	422243/S	422243	54411901	425779	425779	416146/S	416146/S	416159	416159
Toggle	418707	419149	419149	418707	418707	—	418707	418707	418707	418707	—	—
Weight	418321	418321	418321	418321	418321	—	422353	418321	418321	418321	410033/S	410033/S
Plate, shaft and action	419669	421629	421629	420007	420007	54410290	419668	419668	421153	421153	419689	419689
Lubricator	—	—	—	—	—	—	—	—	—	—	—	—
Bearing, bushing, top	—	—	—	—	—	—	—	—	—	—	—	—
Bushing, bottom	421998	419430	421998	419430	421998	421998	419430	421998	419430	421998	419430	421998
Clip, cap retaining	421824	425765	421824	425765	421824	421824	425765	421824	425765	421824	425765	421824
§Sundry parts, set	419644	419644	419644	419644	419644	419644	419644	419644	419644	419644	419644	419644

§ Recommended spares for stock ¶ Washer, insulating, contact spring

DETAILED SPARE PARTS

Part No.	†40507A/D	40509A	40509B/D	40510A	40510B/ D and F	40510E and H	40511A/B	40511D/E	40512A/B	40512D/F	40512J/K	40515A/B
Model	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4
Type	BS79	BN238-2	BN238-2	BN238-3	BN238-3	BN238-3	T91-1	T91-1	CW52	CW52-1	CW52-1	CJ33
Rotation	Clock	Clock	Clock	Clock	Clock	Clock	Anti-clock	Anti-clock	Clock	Clock	Clock	Anti-clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	621	562	562	546	546	546	230	230	484	484	484	493
Range	19°-21°	18°-20°	18°-20°	11½°-13°	11½°-13°	11½°-13°	9°-11°	9°-11°	7°-9°	7°-9°	7°-9°	11½°-13°
Replaced by (see footnote)	(40547)	—	—	—	—	—	—	—	—	—	—	—
§Plate/lever, clamping, timing or micrometer	421191	421191	421191	421191	421191	421191	421191	421191	421191	421191	421191	—
Screw, or nut and screw assembly	415087	415087	415087	412202	412202	412202	415087	415087	415087	415087	415087	—
Spring, ratchet, micrometer	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825
Spring, return, micrometer	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086
§Unit, vacuum control	421958	54410952	54410952	423438	54411301	54411301	54411691	54411691	421937	421937	54411479	421948
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087
§Details set, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	410601	420620	420620	420620	420620	420620	420620	420620	493010	493010	493010	—
§Distributor, service	—	—	—	—	—	—	—	—	—	—	—	—
Cap, distributor	418865	422905	422905	422905	422905	422905	421139	421139	418865	418865	418865	418871
Nut, cable securing	410600	—	—	—	—	—	—	—	410600	410600	410600	—
Brush and spring	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856
Rotor arm	400051	400051	400051	400051	400051	400051	400052	400052	400051	400051	400051	400052
Contact breaker, complete	—	—	—	—	—	—	—	—	—	—	—	—
Contact set	423153	423153	423153	423153	423153	423153	423153	423153	423153	423153	423153	423153
Condenser	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871
Base plate, contact breaker (with condenser on DKY)	422318	422318	422318	422318	422318	422318	422318	422318	422318	422318	422318	422318
Plate, bearing, contact breaker	421078	421078	421078	421078	421078	421078	421078	421078	421078	421078	421078	421078
Spring, star, base fixing	—	—	—	—	—	—	—	—	—	—	—	—
Circlip, base fixing	—	—	—	—	—	—	—	—	—	—	—	—
§ Pin, terminal and details, L.T.	419882	422238	422238	422238	422238	422238	422238	422238	422238	422238	422238	422238
Bush, insulating, inside L.T. terminal or bridge	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353
Piece/pad, shaped, insulating, L.T. terminal	—	—	—	—	—	—	—	—	—	—	—	—
Bush, contact breaker spring	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Lead or connector, L.T.	422235	422235	422235	422235	422235	422235	422235	422235	422235	422235	422235	422235
Lead, earth	421088	421088	421088	421088	421088	421088	421088	421088	421088	421088	421088	421088
Cam	496076	496076	496076	496076	496076	424422	496077	496077	496076	496076	424420	496077
Springs, set, auto-advance	423451	421458	421458	420469	420469	54412196	407267	407267	416131/S	416131/S	54411531	420128
Toggle	418707	418707	418707	418707	418707	—	418707	418707	419149	419149	—	407131
Weight	418321	418321	418321	418321	418321	422353	418915	418915	418321	418321	422353	418915
Plate, shaft and action	421153	420007	420007	423077	423077	54410290	420830	420830	421629	421629	54410290	420114
Lubricator	—	—	—	—	—	—	—	—	—	—	—	—
Bearing, bushing, top	—	—	—	—	—	—	—	—	—	—	—	—
Bushing, bottom	421998	419430	421998	419430	421998	421998	419430	421998	419430	421998	421998	419430
Clip, cap retaining	421824	425765	421824	425765	421824	421824	425765	421824	425765	421824	421824	425765
§Sundry parts, set	419644	419644	419644	419644	419644	419644	419644	419644	419644	419644	419644	419644

DISTRIBUTORS

40507 — 40515

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets § Recommended spares for stock
 ¶ Washer, insulating, contact spring

DETAILED SPARE PARTS

F40

40515 — 40529

DISTRIBUTORS

Part No.	40515D/E	40517A	40517B/D	†40519A/D	40520A	40520B/D	40524A	40527A/ B and H	40527D	40527J	40528A/B	40529A/B
Model	DM2P4	DM2P4	DM2P4	DM6	DM2P4	DM2P4	DM6	DM2P4	DM2P4	DM2P4	DMBZ6A	15D1
Type	CJ33	BP89-1	BP89-1	C64-1	YH13-1	YH13-1	BS72-1	P85	P85	P85	GC68	RO20
Rotation	Anti-clock	Clock	Clock	Anti-clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	493	526	526	624	569	569	627	500	500	500	625	631
Range	11½°-13°	16°-18°	16°-18°	7°-9°	16°-18°	16°-18°	14°-16°	14½°-16½°	14½°-16½°	14½°-16½°	22°	11½°
Replaced by (see footnote)	—	—	—	(40657)	—	—	—	—	—	—	—	—
§Plate/lever, clamping, timing or micrometer	—	421191	421191	421191	421191	421191	421191	414770	414770	414770	423605	406105
Screw, or nut and screw assembly	—	415087	415087	415087	415087	415087	415087	415087	415087	415087	415087	401119
Spring, ratchet, micrometer	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825	—
Spring, return, micrometer	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086	—
§Unit, vacuum control	421948	421948	421948	54412958	54411233	54411233	423040	423755	423755	54411304	423461	—
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087	—
§Details set, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	—	420620	420620	—	—	—	—	—	—	—	410601	—
§Distributor, service	—	—	—	—	—	—	—	—	—	—	—	—
Cap, distributor	418871	418865	418865	418857	418865	418865	418857	418865	418865	418865	418857	421112
Nut, cable securing	—	410600	410600	410600	410600	410600	410600	410600	410600	410600	410600	421561
Brush and spring	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	—
Rotor arm	400052	400051	400051	418731	400051	400051	418726	400051	400051	400051	418726	—
Contact breaker, complete	—	—	—	—	—	—	—	—	—	—	—	—
Contact set	423153	423153	423153	420197	423153	423153	420197	423153	423153	423153	420197	421106
Condenser	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871	421327
Base plate, contact breaker (with condenser on DKY)	422318	422318	422318	419980	422318	422318	419980	422318	422318	422318	419980	—
Plate, bearing, contact breaker	421078	421078	421078	420375	421078	421078	420375	421078	421078	421078	420375	—
Spring, star, base fixing	—	—	—	496058	—	—	496058	—	—	—	496058	—
Circlip, base fixing	—	—	—	496059	—	—	496059	—	—	—	496059	—
§ Pin, terminal and details, L.T.	422238	422238	422238	407019	422238	422238	407019	422238	422238	422238	407019	405314
Bush, insulating, inside L.T. terminal or bridge	¶161353	¶161353	¶161353	408927	¶161353	¶161353	408927	¶161353	¶161353	¶161353	408927	421109
Piece/pad, shaped, insulating, L.T. terminal	—	—	—	405319	—	—	405319	—	—	—	405319	—
Bush, contact breaker spring	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950	—
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	421102
§ Lead or connector, L.T.	422235	422235	422235	419021	422235	422235	419021	422235	422235	422235	419021	—
Lead, earth	421088	421088	421088	419023	421088	421088	419023	421088	421088	421088	419023	—
Cam	496077	496076	496076	496074	496076	496076	496074	496078	496078	491069	496079	423759
Springs, set, auto-advance	420128	416001	416001	416113	421596	421596	416904	416088	416088	54411253	423750	54412731
Toggle	407131	418707	418707	418707	418707	418707	418707	—	—	—	—	—
Weight	418915	418321	418321	418915	418321	418321	418321	410033/S	410033/S	422353	410033/S	421056/S
Plate, shaft and action	420114	420007	420007	423561	419669	419669	419913	419689	419689	54410290	419741	421054
Lubricator	—	—	—	419525/S	—	—	419525/S	—	—	—	‡418723	‡54160003
Bearing, bushing, top	—	—	—	—	—	—	—	—	—	—	189272	—
Bushing, bottom	421998	419430	421998	—	419430	421998	—	419430	421998	419430	419673	—
Clip, cap retaining	421824	425765	421824	421824	425765	421824	425765	421824	425765	421824	425765	‡421103
§Sundry parts, set	419644	419644	419644	419645	419644	419644	419645	419644	419644	419644	419645	54412407

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Oil seal
 § Recommended spares for stock || Collar, shaft ¶ Washer, insulating, contact spring

For illustrations, see pages F2-F7

continued

DETAILED SPARE PARTS

Part No.	40530A/D	40530E	40531A/B	40532A	40534A	40534B	40537A	40537B and E	40537D and F	40538A	40538B/D	40538E
Model	DM2P4	DM2P4	DM6	DM6	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4
Type	T104-2	T104-2	BS77	A209-1	CH34-1	CH34-1	V166-1	V166-1	V166-1	BN213-1	BN213-1	BN213-1
Rotation	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	619	619	632	583	356	356	543	543	543	508	508	508
Range	18°-20°	18°-20°	13°-15°	11½°-13°	20°-23°	20°-23°	14°-16°	14°-16°	14°-16°	16°-18°	16°-18°	16°-18°
§Plate/lever, clamping, timing or micrometer	421191	421191	421191	421191	—	—	—	—	—	421191	421191	421191
Screw, or nut and screw assembly	415087	415087	415087	415087	—	—	—	—	—	415087	415087	415087
Spring, ratchet, micrometer	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825
Spring, return, micrometer	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086
§Unit, vacuum control	54411333	54411333	54413188	54412033	421945	421945	421951	421951	54411814	421940	421940	54411302
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087
§Details set, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	420620	420620	—	—	—	—	420620	420620	420620	420620	420620	420620
§Distributor, service	—	—	—	—	—	—	—	—	—	—	—	—
Cap, distributor	418871	418871	418857	418861	418865	418865	418871	418871	418871	418871	418871	418871
Nut, cable securing	—	—	410600	—	410600	410600	—	—	—	—	—	—
Brush and spring	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856
Rotor arm	400051	400051	418726	418726	400051	400051	400051	400051	400051	400051	400051	400051
Contact breaker, complete	—	—	—	—	—	—	—	—	—	—	—	—
Contact set	423153	423153	420197	420197	423153	423153	423153	423153	423153	423153	423153	423153
Condenser	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871
Base plate, contact breaker (with condenser on DKY)	422318	422318	419980	419980	422318	422318	422318	422318	422318	422318	422318	422318
Plate, bearing, contact breaker	421078	421078	420375	420375	421078	421078	421078	421078	421078	421078	421078	421078
Spring, star, base fixing	—	—	496058	496058	—	—	—	—	—	—	—	—
Circlip, base fixing	—	—	496059	496059	—	—	—	—	—	—	—	—
§ Pin, terminal and details, L.T.	422238	422238	407019	407019	422238	422238	422238	422238	422238	422238	422238	422238
Bush, insulating, inside L.T. terminal or bridge	¶161353	¶161353	408927	408927	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353
Piece/pad, shaped, insulating, L.T. terminal	—	—	405319	405319	—	—	—	—	—	—	—	—
Bush, contact breaker spring	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Lead or connector, L.T.	422235	422235	419021	419021	422235	422235	422235	422235	422235	422235	422235	422235
Lead, earth	421088	421088	419023	419023	421088	421088	421088	421088	421088	421088	421088	421088
Cam	496076	491070	496074	496074	496076	496076	496076	496076	491069	496076	496076	423406
Springs, set, auto-advance	423391	54411543	423857	421851	416001	416001	416193	416193	54413020	420418	420418	54412983
Toggle	418707	—	418707	418707	418707	418707	418707	418707	—	418707	418707	—
Weight	418321	422353	418321	418321	418321	418321	418321	418321	422353	418321	418321	422353
Plate, shaft and action	420007	54410290	421321	421321	419668	419668	421065	421065	54410290	419669	419669	54410290
Lubricator	—	—	419525/S	419525/S	—	—	—	—	—	—	—	—
Bearing, bushing, top	—	—	—	—	—	—	—	—	—	—	—	—
Bushing, bottom	421998	421998	—	—	419430	421998	419430	421998	421998	419430	421998	421998
Clip, cap retaining	421824	421824	425765	421824	425765	421824	425765	421824	421824	425765	421824	421824
§Sundry parts, set	419644	419644	419645	419645	419644	419644	419644	419644	419644	419644	419644	419644

DISTRIBUTORS

§ Recommended spares for stock ¶ Washer, insulating, contact spring

DETAILED SPARE PARTS

F42

40539 — 40551

Part No.	40539A	40539B/D and F	40539E and H	40540A	40540B/D	†40542A/B	†40542E	40547A	40547D	40548A/B	40548D	40551A/B
Model	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DXH6A
Type	BN208-1	BN208-1	BN208-1	P79-1	P79-1	C61	C61	BS79-1	BS79	V179	V179	WG16
Rotation	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Anti-clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	376	376	376	500	500	634	634	638	638	646	646	641
Range	16°-18°	16°-18°	16°-18°	16°	16°	20°-23°	20°-23°	9°-11°	9°-11°	13°-15°	13°-15°	16°-18°
Replaced by (see footnote)	—	—	—	—	—	(40607)	(40607)	—	—	—	—	—
§Plate/lever, clamping, timing or micrometer	421191	421191	421191	414770	414770	421191	421191	421191	421191	421191	421191	410612
Screw, or nut and screw assembly	415087	412202	415087	415087	415087	415087	415087	415087	415087	415087	415087	401119
Spring, ratchet, micrometer	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825	—
Spring, return, micrometer	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086	—
§Unit, vacuum control	421940	421940	54411302	54411585	54411585	421954	54410952	421955	54411100	421955	54411100	—
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087	—
§Details set, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	—	—	—	—	—	—	—	410601	420620	410601	420620	410601
§Distributor, service	—	—	—	—	—	—	—	—	—	—	—	—
§ Cap, distributor	418865	418865	418865	418865	418865	418871	418871	418871	418871	418871	418871	407279
§ Nut, cable securing	410600	410600	410600	410600	410600	—	—	—	—	—	—	—
§ Brush and spring	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	404435
§ Rotor arm	400051	400051	400051	400051	400051	400051	400051	400051	400051	400051	400051	407106
§ Contact breaker, complete	—	—	—	—	—	—	—	—	—	—	—	—
§ Contact set	423153	423153	423153	423153	423153	423153	423153	423153	423153	423153	423153	407050
§ Condenser	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871	407044
§ Base plate, contact breaker (with condenser on DKY)	422318	422318	422318	422318	422318	422318	422318	422318	422318	422318	422318	410520
§ Plate, bearing, contact breaker	421078	421078	421078	421078	421078	421078	421078	421078	421078	421078	421078	—
§ Spring, star, base fixing	—	—	—	—	—	—	—	—	—	—	—	—
§ Circlip, base fixing	—	—	—	—	—	—	—	—	—	—	—	—
§ Pin, terminal and details, L.T.	422238	422238	422238	422238	422238	422238	422238	422238	422238	422238	422238	407019
§ Bush, insulating, inside L.T. terminal or bridge	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	407006
§ Piece/pad, shaped, insulating, L.T. terminal	—	—	—	—	—	—	—	—	—	—	—	407018
§ Bush, contact breaker spring	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950	—
§ Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
§ Lead or connector, L.T.	422235	422235	422235	422235	422235	422235	422235	422235	422235	422235	422235	420238
§ Lead, earth	421088	421088	421088	421088	421088	421088	421088	421088	421088	421088	421088	—
§ Cam	496076	496076	491069	496078	496078	496076	496076	496076	496076	496076	496076	54411781
§ Springs, set, auto-advance	408382	408382	54410406	416088	416088	423999	423999	424102	424102	424352	424352	424216
§ Toggle	418707	418707	—	—	—	418707	418707	418707	418707	418707	418707	407131
§ Weight	418321	418321	422353	410033/S	410033/S	418321	418321	418321	418321	418321	418321	415730
§ Plate, shaft and action	419669	419669	54410290	419689	419689	419668	419668	421065	421065	420274	420274	421485
§ Lubricator	—	—	—	—	—	—	—	—	—	—	—	189272
§ Bearing, bushing, top	—	—	—	—	—	—	—	—	—	—	—	410590
§ Bushing, bottom	419430	421998	421998	419430	421998	419430	421998	419430	421998	419430	421998	—
§ Clip, cap retaining	425765	421824	421824	425765	421824	425765	421824	425765	421824	425765	421824	420261
§Sundry parts, set	419644	419644	419644	419644	419644	419644	419644	419644	419644	419644	419644	400843

DISTRIBUTORS

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets § Recommended spares for stock
¶ Washer, insulating, contact spring

DETAILED SPARE PARTS

Part No.	40552A/B	40552D/E	40554A	40556A	40557A/B	†40558A	40559A	40559B/E	40559F	40560A/B	40560D/E	40560F
Model	DM2P4	DM2P4	DM6	DUH6A	DMBZ6A	DM6	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4
Type	T111	T111	BU45	A215	GC69	C62	V174	V174	V174	T107-1	T107	T107
Rotation	Clock	Clock	Anti-clock	Clock	Clock	Clock	Clock	Clock	Clock	Anti-clock	Anti-clock	Anti-clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	I.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	574	574	555	606	643	645	568	568	568	647	647	647
Range	16°-18°	16°-18°	11½°-13°	22°-24°	24°-26°	22°-24°	9°-11°	9°-11°	9°-11°	16°-18°	16°-18°	16°-18°
Replaced by (see footnote)	—	—	—	—	—	(40602)	—	—	—	—	—	—
§Plate/lever, clamping, timing or micrometer	421191	421191	421191	—	423605	421191	421191	421191	421191	421191	421191	421191
Screw, or nut and screw assembly	415087	415087	415087	401119	415087	415087	415087	415087	415087	415087	415087	415087
Spring, ratchet, micrometer	421825	421825	421825	—	421825	421825	421825	421825	421825	421825	421825	421825
Spring, return, micrometer	419086	419086	419086	—	419086	419086	419086	419086	419086	419086	419086	419086
§Unit, vacuum control	421948	421948	424277	424340	424374	421015	54411239	54411239	54411239	421947	54411241	54411241
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	419087	419087	419087	403321	419087	419087	419087	419087	419087	419087	419087	419087
Details set, micrometer	—	—	—	408989	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	406023	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	406028	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	‡	‡	410601	410601	410601	—	420620	420620	420620	420620	420620	420620
§Distributor, service	—	—	—	—	—	—	—	—	—	—	—	—
Cap, distributor	418871	418871	418861	404520	418857	418861	418865	418865	418865	418865	418865	418865
Nut, cable securing	—	—	—	—	410600	—	410600	410600	410600	410600	410600	410600
Brush and spring	418856	418856	418856	404435	418856	418856	418856	418856	418856	418856	418856	418856
Rotor arm	400051	400051	418731	410876	418726	418726	400051	400051	400051	400052	400052	400052
Contact breaker, complete	—	—	—	—	—	—	—	—	—	—	—	—
Contact set	423153	423153	420197	400415	420197	420197	423153	423153	423153	423153	423153	423153
Condenser	423871	423871	423871	400308	423871	423871	423871	423871	423871	423871	423871	423871
Base plate, contact breaker (with condenser on DKY)	422318	422318	419980	406469	419980	419980	422318	422318	422318	422318	422318	422318
Plate, bearing, contact breaker	421078	421078	420375	—	420375	420375	421078	421078	421078	421078	421078	421078
Spring, star, base fixing	—	—	496058	—	496058	496058	—	—	—	—	—	—
Circlip, base fixing	—	—	496059	—	496059	496059	—	—	—	—	—	—
§ Pin, terminal and details, L.T.	422238	422238	407019	123120	407019	407019	422238	422238	422238	422238	422238	422238
Bush, insulating, inside L.T. terminal or bridge	¶161353	¶161353	408927	—	408927	408927	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353
Piece/pad, shaped, insulating, L.T. terminal	—	—	405319	—	405319	405319	—	—	—	—	—	—
Bush, contact breaker spring	419950	419950	419950	—	419950	419950	419950	419950	419950	419950	419950	419950
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Lead or connector, L.T.	422235	422235	419021	—	419021	419021	422235	422235	422235	422235	422235	422235
Lead, earth	421088	421088	419023	—	419023	419023	421088	421088	421088	421088	421088	421088
Cam	496076	496076	496074	419947	496079	496074	496076	496076	424420	496077	496077	421299
Springs, set, auto-advance	424103	424103	424275	424342	424377	424347	54411428	54411428	54412888	424561	424561	54412981
Toggle	418707	418707	418707	400141	—	418707	418707	418707	—	418707	418707	—
Weight	418321	418321	418915	403268	410033/S	418321	418321	418321	422353	418915	418915	422353
Plate, shaft and action	419669	419669	424274	404888	419741	420447	419953	419953	54410290	420917	420917	54410294
Lubricator	—	—	419525/S	405394	‡418723	419525/S	—	—	—	—	—	—
Bearing, bushing, top	—	—	—	—	189272	—	—	—	—	—	—	—
Bushing, bottom	419430	421998	—	410590	419673	—	419430	421998	421998	419430	421998	421998
Clip, cap retaining	425765	421824	421824	420261	421824	421824	425765	421824	421824	425765	421824	421824
§Sundry parts, set	419644	419644	419645	400843	419645	419645	419644	419644	419644	419644	419644	419644

DISTRIBUTORS

40552 — 40560

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Supplied by Vehicle Manufacturer
 § Recommended spares for stock ¶ Oil seal ¶ Washer, insulating, contact spring

DETAILED SPARE PARTS

F44

40561 — 40570

DISTRIBUTORS

Part No.	40561A/B	40561D/H and K	40561J and L	†40562A/B	40564A/E	40565A	40566A/B	‡40568A	40569A	40569B/F and J	40569H and K	40570A
Model	DM2P4	DM2P4	DM2P4	D2A4	D2A4	DMBZ6A	D3AH4A	DM6	DM2P4	DM2P4	DM2P4	DM2P4
Type	BN260	BN260	BN260	T115	T112	—	SA29	T116	BN261	BN261	BN261	BN262
Rotation	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	651	651	651	619	649	426	600	650	371	371	371	616
Range	14°-16°	14°-16°	14°-16°	18°-20°	22°-24°	16°-18°	18°-20°	14°-16°	16°-18°	16°-18°	16°-18°	11°-13°
Replaced by (see footnote)	—	—	—	(40689)	—	—	—	(40601)	—	—	—	—
§Plate/lever, clamping, timing or micrometer	421191	421191	421191	421191	421191	420151	415158	421191	421191	421191	421191	421191
Screw, or nut and screw assembly	412202	412202	412202	415087	415087	415087	415087	415087	412202	412202	412202	412202
Spring, ratchet, micrometer	421825	421825	421825	—	—	421825	—	421825	421825	421825	421825	421825
Spring, return, micrometer	419086	419086	419086	—	—	419086	—	419086	419086	419086	419086	419086
§Unit, vacuum control	54411100	54411100	54411100	—	—	424625	—	419890	423438	54411301	54411301	54411101
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	419087	419087	419087	—	—	419087	—	419087	419087	419087	419087	419087
§Details set, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	410601	420620	420620	410601	410601	420620	422012	410601	420620	420620	420620	420620
§Distributor, service	—	—	—	—	—	—	—	—	—	—	—	—
Cap, distributor	422905	422905	422905	418888	418888	418861	420760	418857	422905	422905	422905	422905
Nut, cable securing	—	—	—	410600	410600	—	—	410600	—	—	—	—
Brush and spring	418856	418856	418856	418856	418856	418856	404435	418856	418856	418856	418856	418856
Rotor arm	400051	400051	400051	400051	400051	418726	408355	418726	400051	400051	400051	400051
Contact breaker, complete	—	—	—	54411507	54411507	—	—	—	—	—	—	—
Contact set	423153	423153	423153	407050	407050	420197	54411216	420197	423153	423153	423153	423153
Condenser	423871	423871	423871	54413006	54413006	423871	407044	423871	423871	423871	423871	423871
Base plate, contact breaker (with condenser on DKY)	422318	422318	422318	418886	418886	419980	415272	419980	422318	422318	422318	422318
Plate, bearing, contact breaker	421078	421078	421078	—	—	420375	—	420375	421078	421078	421078	421078
Spring, star, base fixing	—	—	—	—	—	496058	—	496058	—	—	—	—
Circlip, base fixing	—	—	—	—	—	496059	—	496059	—	—	—	—
§ Pin, terminal and details, L.T.	422238	422238	422238	405314	405314	407019	407019	407019	422238	422238	422238	422238
Bush, insulating, inside L.T. terminal or bridge	¶161353	¶161353	¶161353	409565	409565	408927	415263	408927	¶161353	¶161353	¶161353	¶161353
Piece/pad, shaped, insulating, L.T. terminal	—	—	—	405319	405319	405319	405319	405319	—	—	—	—
Bush, contact breaker spring	419950	419950	419950	—	—	419950	—	419950	419950	419950	419950	419950
Bush, insulating, terminal	—	—	—	—	—	‡422557	415262	—	—	—	—	—
Lead or connector, L.T.	422235	422235	422235	—	—	419021	—	419021	422235	422235	422235	422235
Lead, earth	421088	421088	421088	—	—	419023	—	419023	421088	421088	421088	421088
Cam	496076	496076	491068	420944	420944	496079	421803	496074	496076	496076	491070	496076
Springs, set, auto-advance	424875	424875	54411529	423391	424537	424564	423182	424631/S	416001	416113	54411690	416103
Toggle	418707	418707	—	418707	418707	—	407131	418707	418707	418707	—	418707
Weight	418321	418321	422353	418321	418321	410033/S	415729	418321	418321	418321	422353	418321
Plate, shaft and action	421065	421065	54410290	421442	424539	419741	416517	419913	420007	420007	54410290	423077
Lubricator	—	—	—	—	—	¶418723	—	419525/S	—	—	—	—
Bearing, bushing, top	—	—	—	—	—	189272	189272	—	—	—	—	—
Bushing, bottom	419430	421998	421998	419430	419430	419673	410590	—	419430	421998	421998	419430
Clip, cap retaining	425765	421824	421824	425218	425218	421824	420262/S	421824	425765	421824	421824	425765
§Sundry parts, set	419644	419644	419644	420491	420491	419645	400843	419645	419644	419644	419644	419644

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Damper § Recommended spares for stock ¶ Oil seal ¶¶ Washer, insulating, contact spring

For illustrations, see pages F2-F7

continued

DETAILED SPARE PARTS

Part No.	40570B/D and F	40570E and H	40571A	40571B	40571D/E	40576A/D	†40577A/B	40578A/D	40580A/B	†40581A/B	40583A/B	40583D/E and H
Model	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DMBZ6A	DMBZ6	DMBZ6A	DM6	DM6	DM2P4	DM2P4
Type	BN262	BN262	AJ41-1	AJ41-1	AJ41-1	GC71	G123	GC74	A209	A222	BN264	BN264
Rotation	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	616	616	398	398	398	654	655	658	659	659	661	661
Range	11°-13°	11°-13°	9°-11°	9°-11°	9°-11°	17°-19°	8°-10°	17°-19°	14°-16°	14°-16°	14°-16°	14°-16°
Replaced by (see footnote)	—	—	—	—	—	—	(40721)	—	—	(40662)	—	—
§Plate/lever, clamping, timing or micrometer	421191	421191	421191	421191	421191	423605	421191	423605	421191	421191	421191	421191
Screw, or nut and screw assembly	412202	412202	415087	415087	414087	415087	415087	415087	415087	415087	412202	412202
Spring, ratchet, micrometer	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825
Spring, return, micrometer	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086
§Unit, vacuum control	54411101	54411101	421942	54411693	54411693	54413188	419681	424374	421189	421189	425682	425682
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087
§Details set, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	420620	420620	420620	420620	420620	410601	410601	410601	420620	—	—	—
§Distributor, service	—	—	—	—	—	—	—	—	—	—	—	—
Cap, distributor	422905	422905	418871	418871	418871	418857	418857	418857	418861	418861	418865	418865
Nut, cable securing	—	—	—	—	—	410600	410600	410600	—	—	410600	410600
Brush and spring	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856
Rotor arm	400051	400051	400051	400051	400051	418726	418726	418726	418726	418726	400051	400051
Contact breaker, complete	—	—	—	—	—	—	—	—	—	—	—	—
Contact set	423153	423153	423153	423153	423153	420197	420197	420197	420197	420197	423153	423153
Condenser	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871
Base plate, contact breaker (with condenser on DKY)	422318	422318	422318	422318	422318	419980	419980	419980	419980	419980	422318	422318
Plate, bearing, contact breaker	421078	421078	421078	421078	421078	420375	420375	420375	420375	420375	421078	421078
Spring, star, base fixing	—	—	—	—	—	496058	496058	496058	496058	496058	—	—
Circlip, base fixing	—	—	—	—	—	496059	496059	496059	496059	496059	—	—
§ Pin, terminal and details, L.T.	422238	422238	422238	422238	422238	407019	407019	407019	407019	407019	422238	422238
Bush, insulating, inside L.T. terminal or bridge	¶161353	¶161353	¶161353	¶161353	¶161353	408927	408927	408927	408927	408927	¶161353	¶161353
Piece/pad, shaped, insulating, L.T. terminal	—	—	—	—	—	405319	405319	405319	405319	405319	—	—
Bush, contact breaker spring	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Lead or connector, L.T.	422235	422235	422235	422235	422235	419021	419021	419021	419021	419021	422235	422235
Lead, earth	421088	421088	421088	421088	421088	419023	419023	419023	419023	419023	421088	421088
Cam	496076	424422	496076	496076	424421	496079	496079	496079	496079	496079	496076	496076
Springs, set, auto-advance	416103	416108	406136	406136	54412974	424950	416145/S	425183	421616	421616	424629	424629
Toggle	418707	—	418707	418707	—	—	‡422557	—	418707	418707	419149	419149
Weight	418321	422353	418321	418321	422353	410033/S	410033/S	410033/S	418321	418321	418321	418321
Plate, shaft and action	423077	54410290	419953	419953	54410290	419741	419741	419741	419913	419913	421065	421065
Lubricator	—	—	—	—	—	‡418723	‡418723	‡418723	419525/S	419525/S	—	—
Bearing, bushing, top	—	—	—	—	—	189272	189272	189272	—	—	—	—
Bushing, bottom	421998	421998	419430	421998	421998	419673	419673	419673	—	—	419430	421998
Clip, cap retaining	421824	421824	421824	421824	421824	421824	421824	421824	421824	421824	425765	421824
§Sundry parts, set	419644	419644	419644	419644	419644	419645	419645	419645	419645	419645	419644	419644

DISTRIBUTORS

40570 — 40583

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Damper § Recommended spares for stock ¶ Oil seal
 ¶ Washer, insulating, contact spring

DETAILED SPARE PARTS

F46

40583 — 40598

DISTRIBUTORS

Part No.	40583F and J	†40586A/D	40587A	40587B/D and F	40587E and H	40588A	40588B/D	40588E	†40592A	40593A/E	40593F	40598A/D
Model	DM2P4	D2A4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DX6A	DM2P4	DM2P4	DM2P4
Type	BN264	RT6	DA50	DA50	DA50	V184	V184	V184	WG14	V185	V185	V187
Rotation	Clock	Anti-clock	Clock	Clock	Clock	Clock	Clock	Clock	Anti-clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	661	384	665	665	665	666	666	666	669	670	670	676
Range	12°-14°	7°-9°	13°-15°	13°-15°	13°-15°	14°-16°	14°-16°	14°-16°	20°-23°	11½°-13°	11½°-13°	16°-18°
Replaced by (see footnote)	—	(40678)	—	—	—	—	—	—	(40629)	—	—	—
§Plate/lever, clamping, timing or micrometer	421191	422311	421191	421191	421191	421191	421191	421191	410612	—	—	—
Screw, or nut and screw assembly	412202	401119	412202	412202	412202	415087	415087	415087	401119	—	—	—
Spring, ratchet, micrometer	421825	—	421825	421825	421825	421825	421825	421825	—	421825	421825	421825
Spring, return, micrometer	419086	—	419086	419086	419086	419086	419086	419086	—	419086	419086	419086
§Unit, vacuum control	425682	—	421947	54411241	54411241	425417	425417	425417	—	54411232	54411232	421957
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	419087	—	419087	419087	419087	419087	419087	419087	—	419087	419087	419087
§Details set, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	—	—	420620	420620	420620	420620	420620	420620	410601	420620	420620	420620
§Distributor, service	—	40586/S	—	—	—	—	—	—	—	—	—	—
Cap, distributor	418865	418888	422905	422905	422905	418865	418865	418865	407043	418871	418871	418871
Nut, cable securing	410600	410600	—	—	—	410600	410600	410600	410600	—	—	—
Brush and spring	418856	418856	418856	418856	418856	418856	418856	418856	404435	418856	418856	418856
Rotor arm	400051	400052	400051	400051	400051	400051	400051	400051	407106	400051	400051	400051
Contact breaker, complete	—	54411507	—	—	—	—	—	—	—	—	—	—
Contact set	423153	407050	423153	423153	423153	423153	423153	423153	407050	423153	423153	423153
Condenser	423871	54413006	423871	423871	423871	423871	423871	423871	424535	423871	423871	423871
Base plate, contact breaker (with condenser on DKY)	422318	418886	422318	422318	422318	422318	422318	422318	410520	422318	422318	422318
Plate, bearing, contact breaker	421078	—	421078	421078	421078	421078	421078	421078	—	421078	421078	421078
Spring, star, base fixing	—	—	—	—	—	—	—	—	—	—	—	—
Circlip, base fixing	—	—	—	—	—	—	—	—	—	—	—	—
§ Pin, terminal and details, L.T.	422238	405314	422238	422238	422238	422238	422238	422238	407019	422238	422238	422238
Bush, insulating, inside L.T. terminal or bridge	¶161353	409565	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	407006	¶161353	¶161353	¶161353
Piece/pad, shaped, insulating, L.T. terminal	—	405319	—	—	—	—	—	—	407018	—	—	—
Bush, contact breaker spring	419950	—	419950	419950	419950	419950	419950	419950	—	419950	419950	419950
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Lead or connector, L.T.	422235	—	422235	422235	422235	422235	422235	422235	—	422235	422235	422235
Lead, earth	421088	—	421088	421088	421088	421088	421088	421088	—	421088	421088	421088
Cam	491068	420945	496076	496076	424423	496076	496076	423406	54411781	496076	424422	496076
Springs, set, auto-advance	54412887	407248/S	425416	425416	54411530	425419	425419	54412950	416904	54411429	54412948	425803
Toggle	—	418707	418707	418707	—	418707	418707	—	407131	418707	—	418707
Weight	422353	418915	418321	418321	422353	418321	418321	422353	424346	418321	422353	418321
Plate, shaft and action	54410290	54411525	420274	420274	54410290	421065	421065	54410290	408404	423077	54410290	419669
Lubricator	—	—	—	—	—	—	—	—	—	—	—	—
Bearing, bushing, top	—	—	—	—	—	—	—	—	189272	—	—	—
Bushing, bottom	421998	419430	419430	421998	421998	419430	421998	421998	410590	419430	419430	419430
Clip, cap retaining	421824	425218	425765	421824	421824	425765	421824	421824	420261	425765	425765	425765
§Sundry parts, set	419644	420491	419644	419644	419644	419644	419644	419644	400843	419644	419644	419644

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets § Recommended spares for stock
 ¶ Washer, insulating, contact spring

DETAILED SPARE PARTS

Part No.	40598E	40600A	40600B/D and F	40600E and H	40601A/D	40602A	40606A/D	40606E	40607A/B	40608A	40609A	40609B/E
Model	DM2P4	DM2P4	DM2P4	DM2P4	DM6	DMX6A	DM2P4	DM2P4	DM2P4	DMBX6A	DM2P4	DM2P4
Type	V187	BN268	BN268	BN268	T116-1	C62-1	V187-1	V187-1	C61-1	C54-1	G126	G126
Rotation	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	676	616	616	616	388	645	676	676	634	540	677	705
Range	16°-18°	11½°-13°	11½°-13°	11½°-13°	11½°-13°	20°-23°	16°-18°	16°-18°	18°-20°	16°-18°	17°-19°	19°-21°
§Plate/lever, clamping, timing or micrometer	—	421191	421191	421191	421191	421191	54410620	54410620	421191	421191	420151	420151
Screw, or nut and screw assembly	—	412202	412202	412202	415087	415087	415087	415087	415087	415087	415087	415087
Spring, ratchet, micrometer	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825
Spring, return, micrometer	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086
§Unit, vacuum control	421957	54411233	54411233	54411233	54412438	421015	54411230	54411230	54410952	421015	54411598	54411598
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087
§Details set, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	420620	420620	420620	420620	420620	—	420620	420620	—	—	420620	420620
§Distributor, service	—	—	—	—	—	—	—	—	—	—	—	—
Cap, distributor	418871	422905	422905	422905	418857	418861	418871	418871	418871	418861	418865	418865
Nut, cable securing	—	—	—	—	410600	—	—	—	—	—	410600	410600
Brush and spring	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856
Rotor arm	400051	400051	400051	400051	418726	418726	400051	400051	400051	418726	400051	400051
Contact breaker, complete	—	—	—	—	—	—	—	—	—	—	—	—
Contact set	423153	423153	423153	423153	420197	420197	423153	423153	423153	420197	423153	423153
Condenser	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871
Base plate, contact breaker (with condenser on DKY)	422318	422318	422318	422318	419980	419980	422318	422318	422318	419980	422318	422318
Plate, bearing, contact breaker	421078	421078	421078	421078	420375	420375	421078	421078	421078	420375	421078	421078
Spring, star, base fixing	—	—	—	—	496058	496058	—	—	—	496058	—	—
Circlip, base fixing	—	—	—	—	496059	496059	—	—	—	496059	—	—
§ Pin, terminal and details, L.T.	422238	422238	422238	422238	407019	407019	422238	422238	422238	407019	422238	422238
Bush, insulating, inside L.T. terminal or bridge	¶161353	¶161353	¶161353	¶161353	408927	408927	¶161353	¶161353	¶161353	408927	¶161353	¶161353
Piece/pad, shaped, insulating, L.T. terminal	—	—	—	—	405319	405319	—	—	—	405319	—	—
Bush, contact breaker spring	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950
Bush, insulating, condenser connector	—	—	—	—	—	—	—	—	—	—	—	—
Lead or connector, L.T.	422235	422235	422235	422235	419021	419021	422235	422235	422235	419021	422235	422235
Lead, earth	421088	421088	421088	421088	419023	419023	421088	421088	421088	419023	421088	421088
Cam	423406	496076	496076	424422	496074	420683	496076	423406	491071	420683	496078	496078
Springs, set, auto-advance	54412982	416103	416103	416108	424631/S	425861	425803	54412982	54410063	421018	54410187	54410187
Toggle	418707	418707	418707	—	418707	418707	418707	—	—	418707	—	—
Weight	422353	418321	418321	422353	418321	415729	418321	422353	422353/S	415729	410033/S	410033/S
Plate, shaft and action	54410290	423077	423077	54410290	421321	421022	419669	54412090	54410290	422006	419689	419689
Lubricator	—	—	—	—	54410441	419525/S	—	—	—	—	—	—
Bearing, bushing, top	—	—	—	—	—	—	—	—	—	189272	—	—
Bushing, bottom	419430	419430	421998	421998	—	—	421998	421998	421998	419673	419430	421998
Clip, cap retaining	425765	425765	421824	421824	421824	421824	421824	421824	421824	421824	425765	421824
§Sundry parts, set	419644	419644	419644	419644	419645	419645	419644	419644	419644	419645	419644	419644

DISTRIBUTORS

40598 — 40609

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets § Recommended spares for stock
 ¶ Washer, insulating, contact spring

DETAILED SPARE PARTS

F48

40609 — 40622

Part No.	40609F	40610A	40611B	†40613A/D	†40614A/B	40616A/B	40617A/D	40620A	40620B	40620D	40622A/D	40622E
Model	DM2P4	18D2	DM2P4	DMBZ6A	DM6	DMBZ6A	DMBZ6A	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4
Type	G126	AQ	V190	—	BS84	GC82	GC81	V193	V193	V193	V193-1	V193-1
Rotation	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	705	667	681	655	680	684	683	682	682	682	682	682
Range	19°-21°	11°-13°	16°-18°	7°-9°	14°-16°	8°-10°	10°-12°	20°-23°	20°-23°	20°-23°	20°-23°	20°-23°
Replaced by (see footnote)	—	—	—	(40721)	(40725)	—	—	—	—	—	—	—
§Plate/lever, clamping, timing or micrometer	420151	420151	—	421191	420617	423605	423605	—	—	—	54410620	54410620
Screw, or nut and screw assembly	415087	415087	—	412202	401119	415087	415087	—	—	—	415087	415087
Spring, ratchet, micrometer	421825	—	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825
Spring, return, micrometer	419086	—	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086
§Unit, vacuum control	54411598	—	54410450	54413040	423040	423461	54412348	54411101	54411101	54411101	54411101	54411101
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	419087	—	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087
§Details set, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	420620	—	410601	410601	410601	410601	410601	420620	420620	420620	420620	420620
§Distributor, service	—	—	—	—	—	—	—	—	—	—	—	—
Cap, distributor	418865	425049	418871	418857	418857	418857	418871	418871	418871	418871	418871	418871
Nut, cable securing	410600	—	—	410600	410600	410600	—	—	—	—	—	—
Brush and spring	418856	404435	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856
Grommet, rubber	—	421554	—	—	—	—	—	—	—	—	—	—
Clip, cable contact	—	421863	—	—	—	—	—	—	—	—	—	—
Rotor arm	400051	423486	400051	418726	418726	418726	418726	400051	400051	400051	400051	400051
Contact breaker, complete	—	—	—	—	—	—	—	—	—	—	—	—
Contact set	423153	425219	423153	420197	420197	420197	420197	423153	423153	423153	423153	423153
Condenser	423871	54410823	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871
Cover, rubber	—	421569	—	—	—	—	—	—	—	—	—	—
§ Base plate, contact breaker (with condenser on DKY)	422318	423113	422318	419980	419980	419980	419980	422318	422318	422318	422318	422318
Plate, bearing, contact breaker	421078	—	421078	420375	420375	420375	420375	421078	421078	421078	421078	421078
Spring, star, base fixing	—	—	—	496058	496058	496058	496058	—	—	—	—	—
Circlip, base fixing	—	—	—	496059	496059	496059	496059	—	—	—	—	—
§ Pin, terminal and details, L.T.	422238	123154	422238	407019	407019	407019	407019	422238	422238	422238	422238	422238
Bush, insulating, inside L.T. terminal or bridge	¶161353	423110	¶161353	408927	408927	408927	408927	¶161353	¶161353	¶161353	¶161353	¶161353
Piece/pad, shaped, insulating, L.T. terminal	—	—	—	405319	405319	405319	405319	—	—	—	—	—
Bush, contact breaker spring	419950	—	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950
Bush, insulating, condenser connector	—	423109	—	‡199279	—	—	—	—	—	—	—	—
Lead or connector, L.T.	422235	423108	422235	419021	419021	419021	419021	422235	422235	422235	422235	422235
Lead, earth	421088	—	421088	419023	419023	419023	419023	421088	421088	421088	421088	421088
Cam	491072	425598	496076	496079	496074	496079	496079	496076	496076	491072	496076	54412531
Springs, set, auto-advance	54411631	54412732	54410451	416145/S	54410271	410049/S	54410416	54410380	54410380	54411553	54410380	54411553
Toggle	—	—	—	‡422557	418707	—	—	418707	418707	—	418707	—
Weight	422353	421056/S	418321	410033/S	418321	410033/S	410033/S	418321	418321	422353	418321	422353
Plate, shaft and action	54410290	425596	419669	419741	419913	419741	419741	419668	420911	54410290	419668	54410290
Lubricator	—	—	—	§418723	54410441	§418723	§418723	—	—	—	—	—
Bearing, bushing, top	—	—	—	189272	—	189272	189272	—	—	—	—	—
Bushing, bottom	421998	423121	419430	419673	—	419673	419673	419430	419430	419430	421998	421998
Clip, cap retaining	421824	424158	425765	421824	421824	421824	421824	425765	425765	425765	421824	421824
§Sundry parts, set	419644	425243	419644	419645	419645	419645	419645	419644	419644	419644	419644	419644

DISTRIBUTORS

Note. For replacement distributor spare parts, see appropriate column under part number
 § Recommended spares for stock ¶ Damper ¶ Washer, insulating, contact spring † When ordering, quote part number shown in brackets ‡ Blade, Lucar, low tension terminal § Oil seal

For illustrations, see pages F2-F7

continued

DETAILED SPARE PARTS

Part No.	40624A/D and F	40624E and H	40629A	40633A/E	40634A/D	40635A/D	40637A	40637B	40637D	40638A/B	40638D	40640A/D
Model	DM2P4	DM2P4	DX6A	DM6	DM6	DM6	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DMBZ6A
Type	BN	BN	WG14	CW94	CW	BN273	V195	V195	V195	V190-1	V190-1	—
Rotation	Clock	Clock	Anti-clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	587	587	687	639	637	583	676	676	—	681	681	688
Range	18°-20°	18°-20°	16°-18°	11½°-13°	14°-16°	11½°-13°	16°-18°	16°-18°	16°-18°	16°-18°	16°-18°	17°-19°
§Plate/lever, clamping, timing or micrometer	421191	421191	410612	421191	421191	421191	54410620	54410620	54410620	54410620	54410620	423605
Screw, or nut and screw assembly	412202	412202	401119	415087	415087	412202	415087	415087	415087	415087	415087	415087
Spring, ratchet, micrometer	421825	421825	—	421825	421825	421825	421825	421825	421825	421825	421825	421825
Spring, return, micrometer	419086	419086	—	419086	419086	419086	419086	419086	419086	419086	419086	419086
§Unit, vacuum control	54411241	54411241	—	54411917	424017	421189	421957	54411230	54411230	54411589	54411589	54412438
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	419087	419087	—	419087	419087	419087	419087	419087	419087	419087	419087	419087
§Details set, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	420620	420620	410601	493010	493010	—	420620	420620	420620	420620	420620	410601
§Distributor, service	—	—	—	—	—	—	—	—	—	—	—	—
Cap, distributor	422905	422905	407043	418857	418857	418857	418871	418871	418871	418871	418871	418857
Nut, cable securing	—	—	410600	410600	410600	410600	—	—	—	—	—	410600
Brush and spring	418856	418856	404435	418856	418856	418856	418856	418856	418856	418856	418856	418856
Rotor arm	400051	400051	407106	418726	418726	418726	400051	400051	400051	400051	400051	418726
Contact breaker, complete	—	—	—	—	—	—	—	—	—	—	—	—
Contact set	423153	423153	407050	420197	420197	420197	423153	423153	423153	423153	423153	420197
Condenser	423871	423871	407044	423871	423871	423871	423871	423871	423871	423871	423871	423871
Base plate, contact breaker (with condenser on DKY)	422318	422318	410520	419980	419980	419980	422318	422318	422318	422318	422318	419980
Plate, bearing, contact breaker	421078	421078	—	420375	420375	420375	421078	421078	421078	421078	421078	420375
Spring, star, base fixing	—	—	—	496058	496058	496058	—	—	—	—	—	496058
Circlip, base fixing	—	—	—	496059	496059	496059	—	—	—	—	—	496059
§ Pin, terminal and details, L.T.	422238	422238	407019	407019	407019	407019	422238	422238	422238	422238	422238	407019
Connector, Lucar	199279	199279	—	199279	199279	—	199279	199279	199279	199279	199279	—
Bush, insulating, inside L.T. terminal or bridge	¶161353	¶161353	407006	408927	408927	408927	¶161353	¶161353	¶161353	¶161353	¶161353	408927
Piece/pad, shaped, insulating, L.T. terminal	—	—	407018	405319	405319	405319	—	—	—	—	—	405319
Bush, contact breaker spring	419950	419950	—	419950	419950	419950	419950	419950	419950	419950	419950	419950
Piece, insulating, contact breaker spring	—	—	—	‡161353	—	—	—	—	—	—	—	—
Lead or connector, L.T.	422235	422235	420238	419021	419021	419021	422235	422235	422235	422235	422235	419021
Lead, earth	421088	421088	—	419023	419023	419023	421088	421088	421088	421088	421088	419023
Cam	496076	424424	54411781	496074	496074	496074	496076	496076	491071	496076	423406	496079
Springs, set, auto-advance	422243	54411901	54410603	424135	424012	421851	425803	425803	54412982	54410451	54411552	425183
Toggle	418707	—	407131	419149	418707	418707	418707	418707	—	418707	—	—
Weight	418321	422353	415730	418321	418321	418321	418321	418321	422353	418321	422353	410033/S
Plate, shaft and action	420007	54410290	408475	421321	419913	421321	419669	419669	54410290	419669	54410290	419741
Lubricator	—	—	—	419525/S	419525/S	419525/S	—	—	—	—	—	¶418723
Bearing, bushing, top	—	—	189272	—	—	—	—	—	—	—	—	189272
Bushing, bottom	421998	421998	410590	—	—	—	421998	421998	421998	421998	421998	419673
Clip, cap retaining	421824	421824	420261	421824	421824	421824	421824	421824	421824	421824	421824	421824
§Sundry parts, set	419644	419644	400843	419645	419645	419645	419644	419644	419644	419644	419644	419645

DISTRIBUTORS

‡ Washer, insulating, terminal § Recommended spares for stock ¶ Oil seal ¶ Washer, insulating, contact spring

DETAILED SPARE PARTS

F50

40641 — 40656

DISTRIBUTORS

Part No.	40641A	40643A/D and F	40643E and H	40644A/B and E	40644D and F	40648A/D and F	40648E and H	40649A/B	40650A/D	40652A	40652B/F	40656A/B and E
Model	DM6	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DMBZ6A	DM2P4	DM2P4	DMP24
Type	BU45	PE2	PE2	PE4	PE4	BN276	BN276	BZ8	C65	CW89	CW89	PE5
Rotation	Anti-clock	Clock	Clock	Clock	Clock	Clock	Clock	Anti-clock	Clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	555	616	616	665	665	694	694	504	711	691	715	697
Range	11½°-13°	11½°-13°	11½°-13°	13°-15°	13°-15°	16°-18°	16°-18°	18°-20°	13°-15°	14°-16°	12°-14°	13°-15°
§Plate/lever, clamping, timing or micrometer	421191	421191	421191	421191	421191	421191	421191	420151	420151	54410930	54410930	421191
Screw, or nut and screw assembly	415087	412202	412202	412202	412202	412202	412202	415087	415087	415087	415087	412202
Spring, ratchet, micrometer	421825	421825	421825	421825	421825	421825	421825	—	421825	421825	421825	421825
Spring, return, micrometer	419086	419086	419086	419086	419086	419086	419086	—	419086	419086	419086	419086
§Unit, vacuum control	424277	54411233	54411233	54411241	54411241	54411478	54411478	54410912	424017	54411100	54411100	425700
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	419087	419087	419087	419087	419087	419087	419087	—	419087	419087	419087	419087
§Details set, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	410601	420620	420620	420620	420620	420620	420620	420620	—	54410365	54410365	420620
§Distributor (less Lucar connector)	—	40600F	40600H	40587F	—	—	—	—	—	—	—	—
Cap, distributor	418857	422905	422905	422905	422905	422905	422905	418865	418861	422905	422905	422905
Nut, cable securing	410600	—	—	—	—	—	—	410600	—	—	—	—
Brush and spring	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856
Rotor arm	418731	400051	400051	400051	400051	400051	400051	400052	418726	400051	400051	400051
Contact breaker, complete	—	—	—	—	—	—	—	—	—	—	—	—
Contact set	420197	423153	423153	423153	423153	423153	423153	420196	420197	423153	423153	423153
Condenser	423871	423871	423871	423871	423871	423871	423871	422849	423871	423871	423871	423871
Base plate, contact breaker (with condenser on DKY)	419980	422318	422318	422318	422318	422318	422318	424858	419980	422318	422318	422318
Plate, bearing, contact breaker	420375	421078	421078	421078	421078	421078	421078	420178	420375	421078	421078	421078
Spring, star, base fixing	496058	—	—	—	—	—	—	—	496058	—	—	—
Circlip, base fixing	496059	—	—	—	—	—	—	—	496059	—	—	—
§ Pin, terminal and details, L.T.	407019	422238	422238	422238	54410855	422238	422238	423369	407019	422238	422238	422238
Connector, Lucar	—	‡199279	‡199279	‡199279	199279	199279	199279	—	—	199279	199279	—
Bush, insulating, inside L.T. terminal or bridge	408927	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	408927	¶161353	¶161353	¶161353
Piece/pad, shaped, insulating, L.T. terminal	405319	—	—	—	—	—	—	—	405319	—	—	—
Bush, contact breaker spring	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Lead or connector, L.T.	419021	422235	422235	422235	422235	422235	422235	¶54410460	419021	422235	422235	422235
Lead, earth	419023	421088	421088	421088	421088	421088	421088	418664	419023	421088	421088	421088
Cam	496074	496076	424422	496076	424423	496076	491070	421854	496079	496076	491068	496076
Springs, set, auto-advance	424275	416103	416108	425416	54411530	54410984	54412934	54410386	54412110	407267	54411899	54411178
Toggle	418707	418707	—	418707	—	418707	—	—	—	418707	—	419149
Weight	418915	418321	422353	418321	422353	418321	422353	422353	410033/S	418321	422353	418321
Plate, shaft and action	424274	423077	54410290	420274	54410290	419669	54410290	54410294	419741	421065	54410290	420274
Lubricator	419525/S	—	—	—	—	—	—	§188639	§418723	—	—	—
Bearing, bushing, top	—	—	—	—	—	—	—	**425251	189272	—	—	—
Bushing, bottom	—	421998	421998	421998	421998	421998	421998	421998	419673	421998	421998	421998
Clip, cap retaining	421824	421824	421824	421824	421824	421824	421824	421824	421824	421824	421824	421824
§Sundry parts, set	419645	419644	419644	419644	419644	419644	419644	419644	419645	419644	419644	419644

‡ Supplied separately § Recommended spares for stock ¶ Plate, felt supporting ¶ Washer, insulating, contact spring § Oil seal ** Felt, cam lubricating

For illustrations, see pages F2-F7

continued

DETAILED SPARE PARTS

Part No.	40656D and F DM2P4 PE5	40657B/D DM6 C64-1	†40658A/B DM2P4 V200	†40658D DM2P4 V200	40660A/E DM6	40661A/D DM6 PE3	40662A/D DM6 A	40665A/B DMBZ6 GC	40667A DM2P4 T117	40667B/D DM2P4 T117	40671A DMBZ6A YW22	40673A/D DM6 BN282
Model	DM2P4	DM6	DM2P4	DM2P4	DM6	DM6	DM6	DMBZ6	DM2P4	DM2P4	DMBZ6A	DM6
Type	PE5	C64-1	V200	V200	—	PE3	A	GC	T117	T117	YW22	BN282
Rotation	Clock	Anti-clock	Clock	Clock	Clock	Clock	Clock	Clock	Anti-clock	Anti-clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	Anti-clock	Anti-clock	E.R.	E.R.
E.C.M. Curve No.	697	624	682	682	698	659	659	700	695	695	696	606
Range	13°-15°	7°-9°	20°-23°	20°-23°	9°-11°	14°-16°	14°-16°	11°-13°	20°-23°	20°-23°	14°	20°-23°
Replaced by (see footnote)	—	—	(40622)	(40622)	—	—	—	—	—	—	—	—
§Plate/lever, clamping, timing or micrometer	421191	421191	54410620	54410620	421191	421191	421191	423605	421191	421191	421191	421191
Screw, or nut and screw assembly	412202	415087	415087	415087	415087	415087	415087	415087	415087	415087	415087	412202
Spring, ratchet, micrometer	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825	421825
Spring, return, micrometer	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086	419086
§Unit, vacuum control	425700	54412958	54411101	54411101	54412438	421189	421189	421189	54411692	54411692	419681	421189
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087	419087
§Details set, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	420620	—	420620	420620	420620	420620	—	420620	420620	420620	420620	410601
§Distributor (less Lucar connector)	—	—	—	—	—	40580B	40581B	—	—	—	—	40472B
Cap, distributor	422905	418857	418871	418871	418857	418861	418861	418857	418871	418871	418861	418861
Nut, cable securing	—	410600	—	—	410600	—	—	410600	—	—	—	—
Brush and spring	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856
Rotor arm	400051	418731	400051	400051	418726	418726	418726	418726	400052	400052	418726	418726
Contact breaker, complete	—	—	—	—	—	—	—	—	—	—	—	—
Contact set	423153	420197	423153	423153	420197	420197	420197	420197	423153	423153	420197	420197
Condenser	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871	423871
Base plate, contact breaker (with condenser on DKY)	422318	419980	422318	422318	419980	419980	419980	419980	422318	—	419980	419980
Plate, bearing, contact breaker	421078	420375	421078	421078	420375	420375	420375	420375	421078	421078	420375	420375
Spring, star, base fixing	—	496058	—	—	496058	496058	496058	496058	—	—	496058	496058
Circlip, base fixing	—	496059	—	—	496059	496059	496059	496059	—	—	496059	496059
§ Pin, terminal and details, L.T.	422238	407019	422238	422238	407019	407019	407019	407019	422238	422238	407019	407019
Connector, Lucar	—	—	199279	199279	—	‡199279	‡199279	—	—	—	—	‡199279
Bush, insulating, inside L.T. terminal or bridge	¶161353	408927	¶161353	¶161353	408927	408927	408927	408927	¶161353	¶161353	408927	408927
Piece/pad, shaped, insulating, L.T. terminal	—	405319	—	—	405319	405319	405319	405319	—	—	405319	405319
Bush, contact breaker spring	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950	419950
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Lead or connector, L.T.	422235	419021	422235	422235	419021	419021	419021	419021	422235	422235	419021	419021
Lead, earth	421088	419023	421088	421088	419023	419023	419023	419023	421088	421088	419023	419023
Cam	424423	424797	496076	54412531	496074	496074	496074	496079	496077	54412627	496079	496074
Springs, set, auto-advance	54412231	54410393	54410380	54411553	424631	421616	421616	54411290	54411318	54412895	425317/S	406136
Toggle	—	—	418707	—	418707	418707	418707	—	418707	—	—	418707
Weight	422353	54410282	418321	422353	418321	418321	418321	410033/S	418915	422353	410033/S	418321
Plate, shaft and action	54410290	54410295	419668	54412090	421185	419913	419913	419741	421678	54410294	419741	420447
Lubricator	—	419525/S	—	—	419525	419525	419525	¶418723	—	—	¶418723	419525/S
Bearing, bushing, top	—	—	—	—	—	—	—	189272	—	—	189272	—
Bushing, bottom	421998	—	421998	421998	—	—	—	419673	421998	421998	419673	—
Clip cap retaining	421824	421824	421824	421824	421824	421824	421824	421824	421824	421824	421824	421824
§Sundry parts, set	419644	419645	419644	419644	419645	419645	419645	419645	419644	419644	419645	419645

DISTRIBUTORS

40556 - 40673

Note. For replacement distributor spare parts, see appropriate column under part number
 § Recommended spares for stock ¶ Oil seal ¶ Washer, insulating, contact spring
 † When ordering, quote part number shown in brackets ‡ Supplied separately

DETAILED SPARE PARTS

F52

40674 — 40685

DISTRIBUTORS

Part No.	40674A/B	40675A/B	40676A/D	40677A	40678A/B	40681A	40681B	40682A	40682B	40683A	40683B	40685A/D
Model	DM2P4	DM2P4	20D8	D3AH4	D2A4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM2P4	DM6
Type	A216	A225	BS	SA32	RT6-1	T121	T121	T122	T122	—	—	T101
Rotation	Clock	Clock	Clock	Clock	Anti-clock	Clock	Clock	Clock	Clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	371	651	704	708	707	619	619	574	574	481	481	716
Range	16°-18°	14°-16°	10½°-12½°	13°-15°	9°-11°	18°-20°	18°-20°	13°-15°	13°-15°	9°-11°	9°-11°	7°-9°
§Plate/lever, clamping, timing or micrometer	421191	421191	421191	415158	422311	421191	421191	421191	421191	421191	421191	421191
Screw, or nut and screw assembly	412202	412202	415087	415087	401119	415087	415087	415087	415087	415087	415087	415087
Spring, ratchet, micrometer	421825	421825	—	—	—	421825	421825	421825	421825	421825	421825	421825
Spring, return, micrometer	419086	419086	—	—	—	419086	419086	419086	419086	419086	419086	419086
§Unit, vacuum control	54411301	54411100	54411675	—	—	54411333	54411333	421948	421948	54411463	54411463	54412438
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	419087	419087	54412562	—	—	419087	419087	419087	419087	419087	419087	419087
§Details set, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	420620	420620	‡	422012	—	420620	420620	420620	420620	‡	‡	420620
§Distributor (less Lucar connector)	—	—	—	—	—	40530A/D	40530E	40492B	40492E	—	—	—
Cap, distributor	422905	422905	54411740	420760	418888	418871	418871	418871	418871	418871	418871	418871
Nut, cable securing	—	—	410600	—	410600	—	—	—	—	—	—	410600
Brush and spring	418856	418856	418856	404435	418856	418856	418856	418856	418856	418856	418856	418856
Rotor arm	400051	400051	425620	408355	400052	400051	400051	400051	400051	400051	400051	418726
Contact breaker, complete	—	—	54410355	—	54411507	—	—	—	—	—	—	—
Contact set	423153	423153	54411772	54411216	407050	423153	423153	423153	423153	423153	423153	420197
Condenser	423871	423871	54411935	407044	54413006	423871	423871	423871	423871	423871	423871	423871
Base plate, contact breaker (with condenser on DKY)	422318	422318	54410755	415272	418886	422318	422318	422318	422318	422318	422318	419980
Plate, bearing, contact breaker	421078	421078	—	§415293	—	421078	421078	421078	421078	421078	421078	420375
Spring, star, base fixing	—	—	425772	—	—	—	—	—	—	—	—	496058
Circlip, base fixing	—	—	496059	—	—	—	—	—	—	—	—	496059
Pin, terminal and details, L.T.	422238	422238	**425928	407019	405314	422238	422238	422238	422238	422238	422238	407019
Connector, Lucar	199279	199279	‡‡54410349	—	—	‡‡199279	‡‡199279	‡‡199279	‡‡199279	‡‡199279	‡‡199279	—
Bush, insulating, inside L.T. terminal or bridge	¶161353	¶161353	¶161353	415263	409565	¶161353	¶161353	¶161353	¶161353	¶161353	¶161353	408927
Piece/pad, shaped, insulating, L.T. terminal	—	—	54411877	405319	405319	—	—	—	—	—	—	405319
Bush, contact breaker spring	419950	419950	419950	§§415262	—	419950	419950	419950	419950	419950	419950	419950
Piece, insulating, contact breaker spring	—	—	¶¶418723	—	—	—	—	—	—	—	—	—
Lead or connector, L.T.	422235	422235	54410351	—	—	422235	422235	422235	422235	422235	422235	419021
Lead, earth	421088	421088	421088	—	—	421088	421088	421088	421088	421088	421088	419023
Cam	491070	491068	425915	421803	420945	496076	491070	496076	491070	496076	424421	496074
Springs, set, auto-advance	54412328	54411529	54411934	421457	416133	423391	54411543	424103	421902	416106	416108	416194
Toggle	—	—	400141	407131	418707	418707	—	418707	—	418707	—	418707
Weight	422353	422353	54410277	415729	418915	418321	422353	418321	422353	418321	422353	418321
Plate, shaft and action	54410290	54410290	425913	54411505	54411525	420007	54410290	419669	54410290	419953	54410290	419258
Lubricator	—	—	425605	—	—	—	—	—	—	—	—	419525/S
Bearing, bushing, top	—	—	189272	189272	—	—	—	—	—	—	—	—
Bushing, bottom	421998	421998	423571	410590	419430	421998	421998	421998	421998	421998	421998	—
Clip, cap retaining	421824	421824	425684	420262	54411165	421824	421824	421824	421824	421824	421824	421824
§Sundry parts, set	419644	419644	54411933	400843	420491	419644	419644	419644	419644	419644	419644	419645

‡ Supplied by Vehicle Manufacturer § Recommended spares for stock || Housing ¶ Washer, insulating, contact spring § Cover, dust excluding ** Lead, contact breaker connecting
 †† Lead, condenser to contact breaker †† Supplied separately §§ Bush, rubber, terminal insulating ¶¶ Oil seal

DETAILED SPARE PARTS

Part No.	40689A/B	40692A/B	40693A	40694A	40695A	40696A	40697A/B	40698A	40698B	40705A/B	†40706A/B	40707A/D
Model	D2A4	DM2P4	DMBZ6	DMBZ6	DMBZ6A	DMBZ6	DMBZ6A	DM2P4	DM2P4	DM2P4	D2A4	DM2P4
Type	T125	DA51	—	—	—	RX/GC53	—	V167-1	V167-1	BN281	CW67-1	PE8
Rotation	Clock	Clock	Clock	Clock	Clock	Clock	Anti-clock	Clock	Clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	619	710	496	578	440	362	696	550	550	574	548	725
Range	18°-20°	12°-14°	—	13°-15°	13°-15°	13°-15°	14°	14°-16°	14°-16°	16°-18°	6°-8°	11°-13°
Replaced by (see footnote)	—	—	—	—	—	—	—	—	—	—	(40711)	—
§Plate/lever, clamping, timing or micrometer	421191	421191	423605	423605	423605	423605	421191	421191	421191	421191	421305	421191
Screw, or nut and screw assembly	415087	412202	415087	415087	415087	415087	415087	415087	415087	412202	415087	412202
Spring, ratchet, micrometer	—	421825	421825	421825	421825	421825	421825	421825	421825	421825	—	421825
Spring, return, micrometer	—	419086	419086	419086	419086	419086	419086	419086	419086	419086	—	419086
§Unit, vacuum control	—	54411241	420005	423461	54412133	419681	54412119	54411480	54411480	421945	—	54411090
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	—	419087	419087	419087	419087	419087	419087	419087	419087	419087	—	419087
§Details set, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	410601	420620	420620	420620	420620	420620	420620	420620	420620	—	493010	420620
§Distributor (less Lucar connector)	40562A/B	—	—	—	—	—	—	—	—	—	40402	—
Cap, distributor	418888	422905	418857	418857	418857	418857	418861	418871	418871	418865	418888	422905
Nut, cable securing	410600	—	410600	410600	410600	410600	—	—	—	410600	410600	—
Brush and spring	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856	418856
Rotor arm	400051	400051	418726	418726	418726	418726	418726	400051	400051	400051	400051	400051
Contact breaker, complete	54411507	—	—	—	—	—	—	—	—	—	54411507	—
Contact set	407050	423153	420197	420197	420197	420197	420197	423153	423153	423153	407050	423153
Condenser	54413006	423871	423871	423871	423871	423871	423871	423871	423871	423871	54413006	423871
Base plate, contact breaker (with condenser on DKY)	418886	422318	419980	419980	419980	419980	419980	422318	422318	422318	418886	422318
Plate, bearing, contact breaker	—	421078	420375	420375	420375	420375	420375	421078	421078	421078	—	421078
Spring, star, base fixing	—	—	496058	496058	496058	496058	496058	—	—	—	—	—
Circlip, base fixing	—	—	496059	496059	496059	496059	496059	—	—	—	—	—
§ Pin, terminal and details, L.T.	405314	422238	407019	407019	407019	407019	407019	422238	54412750	422238	405314	422238
Connector, Lucar	‡199279	—	—	—	—	—	—	‡199279	—	199279	‡199279	199279
Bush, insulating, inside L.T. terminal or bridge	409565	¶161353	408927	408927	408927	408927	408927	¶161353	¶161353	¶161353	409565	¶161353
Piece/pad, shaped, insulating, L.T. terminal	405319	—	405319	405319	405319	405319	—	—	—	—	405319	—
Bush, contact breaker spring	—	419950	419950	419950	419950	419950	419950	419950	419950	419950	—	419950
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—	—	—
Lead or connector, L.T.	—	422235	419021	419021	419021	419021	422235	—	—	422235	—	422235
Lead, earth	—	421088	419023	419023	419023	419023	421088	421088	421088	421088	—	421088
Cam	420944	424423	496079	496079	496079	496079	496079	496076	424423	419070	420944	424422
Springs, set, auto-advance	423391	54412530	54412143	54412142	416105	416145	425317/S	421277	54412549	421902	416097/S	54412714
Toggle	418707	—	—	—	—	—	—	418707	—	—	—	—
Weight	418321	422353	410033/S	410033/S	410033/S	410033/S	410033/S	418321	422353	422353	418321	422353
Plate, shaft and action	421442	54410290	419741	419741	419741	419741	419741	421065	54410290	54410290	421310	54410290
Lubricator	—	—	¶418723	¶418723	¶418723	¶418723	¶418723	—	—	—	—	—
Bearing, bushing, top	—	—	189272	189272	189272	189272	189272	—	—	—	—	—
Bushing, bottom	419430	421998	419673	419673	419673	419673	421998	421998	421998	421998	419430	421998
Clip, cap retaining	425218	421824	421824	421824	421824	421824	421824	421824	421824	421824	54411165	421824
§Sundry parts, set	420491	419644	419645	419645	419645	419645	419645	419644	419644	419644	420491	419644

DISTRIBUTORS

40689 - 40707

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Supplied separately
 § Recommended spares for stock ¶ Oil seal ¶ Washer, insulating, contact spring

DETAILED SPARE PARTS

F54

40711 — 405515

DISTRIBUTORS

Part No.	40711A	40716A	40717A	40718A	40719A	40720A/B	40721A/D	40725A	†400206	†404425	†405507	†405515
Model	23D4	DM6	23D4	23D4	DMBZ6	DMBZ6	DMBZ6	DM6	DK4A	DK4A	DK4A	DK4A
Type	CW	BS84	—	—	C	—	—	PE13	BN24-0	CH5-1	BP55-0	AL8
Rotation	Clock	Clock	Anti-clock	Clock	Clock	Clock	Clock	Clock	Anti-clock	Anti-clock	Anti-clock	Anti-clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	—	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	548	680	721	710	723	596	739	680	77	359	173	187
Range	6°-8°	14°-16°	20½°-22½°	12°-14°	10°-12°	12½°-14½°	6°-8°	14°-16°	7°-8½°	20°-23°	14°-16°	12°-14°
Replaced by (see footnote)	—	—	—	—	—	—	—	—	(40224)	(40091)	(40062)	(40100)
§Plate/lever, clamping, timing or micrometer	421305	420617	—	421191	420151	421191	421191	420617	—	—	405588	401335
Screw, or nut and screw assembly	415087	401119	—	412202	415087	412202	412202	401119	—	—	401119	401119
Spring, ratchet, micrometer	—	421825	—	—	421925	421825	421825	421825	—	—	—	—
Spring, return, micrometer	—	419086	—	—	419086	419086	419086	419086	—	—	—	—
§Unit, vacuum control	—	423040	—	—	54412504	54413040	54413040	423040	—	—	—	402251
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	—	419087	—	—	419087	419087	419087	419087	—	—	—	—
§Details set, micrometer	—	—	—	—	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	—	—	—	—	—	406138
§Lever, actuating	—	—	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	493010	410601	420620	420620	—	420620	420620	—	—	—	—	410601
§Distributor, service	—	‡40614	—	—	—	—	—	—	†400206/S	†404425/S	†405507/S	†405515/S
									(40224)	(40091)	(40062)	(40100)
Cap, distributor	418865	418857	418865	422905	418861	418861	418861	418857	400135	400135	400135	400135
Nut, cable securing	410600	410600	410600	—	—	—	—	410600	410600	410600	410600	410600
Brush and spring	418856	418856	418856	418856	418856	418856	418856	418856	404435	404435	404435	404435
Rotor arm	400051	418726	400052	400051	418726	418726	418726	418726	400052	400052	400052	400052
Contact breaker, complete	—	—	—	—	—	—	—	—	400164	400164	400164	400164
Contact set	423153	420197	423153	54413568	420197	420197	420197	420197	400415	400415	400415	400415
Condenser	423871	423871	423871	423871	423871	423871	423871	423871	400308	400308	400308	400308
Base plate, contact breaker (with condenser on DKY)	54410498	419980	54410498	54410498	419980	419980	419980	419980	400001	400001	400001	400001
Plate, bearing, contact breaker	—	420375	—	—	420375	420375	420375	420375	—	—	—	—
Spring, star, base fixing	—	496058	—	—	496058	496058	496058	496058	—	—	—	—
Circlip, base fixing	—	496059	—	—	496059	496059	496059	496059	—	—	—	—
§ Pin, terminal and details, L.T.	422238	407019	422238	422238	407019	407019	407019	407019	123022	123022	123022	123022
Connector, Lucar	199279	199279	199279	199279	—	199279	199279	199279	—	—	—	—
Bush, insulating, inside L.T. terminal or bridge	—	408927	—	—	408927	408927	408927	408927	—	—	—	—
Piece/pad, shaped, insulating, L.T. terminal	—	405319	—	—	405319	405319	405319	405319	—	—	—	—
Bush, contact breaker spring	419950	419950	419950	419950	419950	419950	419950	419950	409894	409894	409894	409894
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	¶422557	—	—	—
Lead or connector, L.T.	422235	419021	422235	422235	419021	419021	419021	419021	400034	400034	400034	400034
Lead, earth	421088	419023	421088	421088	419023	419023	419023	419023	—	—	—	—
Cam	491065	496074	54412627	424423	496079	496079	496079	496079	496016	496016	496016	496016
Springs, set, auto-advance	54410390	54410271	54412507	54412530	425305	422425	416145/S	54410271	405396/S	405590	404453	404458
Toggle	—	418707	—	—	—	—	—	—	400141	400141	400141	400141
Weight	422353	418321	422353	422353	410033/S	410033/S	410033/S	418321	400150	400150	400150	400150
Plate, shaft and action	54410290	419913	54410294	54410290	419741	419741	419741	419913	400125	400131	400127	400127
Lubricator	—	54410441	—	—	§418723	§418723	§418723	54410441	400304	400304	400304	400304
Bearing, bushing, top	—	—	—	421998	189272	189272	189272	—	404374	404374	404374	404374
Bushing, bottom	421998	—	421998	—	419673	419673	419673	—	410590	410590	410590	410590
Clip, cap retaining	421824	421824	421824	421824	421824	421824	421824	421824	420261	420261	420261	420261
§Sundry parts, set	54412406	419645	54412406	54412406	419645	419645	419645	419645	400843	400843	400843	400843

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Distributor less Lucar connector
 § Recommended spares for stock || Supplied separately ¶ Damper § Oil seal

For illustrations, see pages F2-F7

DETAILED SPARE PARTS

Part No.	†405516	†405543	†405569	†405570	†405601	†405616	†405651	†406269	†406319	†406335
Model	DK4A	DK4A	DK4A	DK4A	DK4A	DK4A	DKX4A	DKH4A	DKH4A	DKH4A
Type	FA14-1	BP62-0	A109	AE3-0	BN112-0	RT	BE2	A95	S50-1	A110
Rotation	Anti-clock	Anti-clock	Clock	Anti-clock	Anti-clock	Anti-clock	Clock	Clock	Anti-clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	95	178	133	178	77	77	300	289	187	188
Range	16°-18°	18°-20°	11½°-13°	18°-20°	7°-8½°	7°-8½°	23°-27°	11½°-13°	12°-14°	9°-11°
Replaced by (see footnote)	(40069)	(40062)	(40076)	(40091)	(40224/S)	(40224)	(40174)	(40053)	(40196/S)	(40251)
§Plate/lever, clamping, timing or micrometer	400812	405588	404422	—	409596	405588	401327	404422	406298	404422
Screw, or nut and screw assembly	401119	401119	401119	401119	401119	401119	401092	401119	401119	401119
Spring, ratchet, micrometer	—	—	—	—	—	—	—	—	—	—
Spring, return, micrometer	—	—	—	—	—	—	—	—	—	—
§Unit, vacuum control	—	—	—	—	400853	—	—	—	400881	—
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	—	—	—	—	—	—	—	—	—	—
§Details set, micrometer	—	—	—	—	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	409625	—	—	—	406287	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	410601	410601	—	—	—	—	—	—	410601	410601
§Distributor, service	†405516/S	†405543/S	†405569/S	†405570/S	†405601/S	†405616/S	†405651/S	†406269/S	†406319/S	†406335/S
(40069)	(40062)	(40076)	(40091)	(40224/S)	(40224)	(40174)	(40053)	(40196/S)	(40251)	(400316)
§ Cap, distributor	400135	400135	400135	400135	400135	400135	400135	400316	400316	400316
§ Nut, cable securing	410600	410600	410600	410600	410600	410600	410600	—	—	—
§ Brush and spring	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435
§ Rotor arm	400052	400052	400051	400052	400052	400052	400051	400051	400052	400051
§ Contact breaker, complete	400164	400164	400164	400164	400164	400164	400164	400164	400164	400164
Contact set	400415	400415	400415	400415	400415	400415	400415	400415	400415	400415
Condenser	400308	400308	400308	400308	400308	400308	400308	400308	400308	400308
§ Base plate, contact breaker (with condenser on DKY)	400001	400001	400001	400001	400001	400001	400001	400001	400001	400001
Plate, bearing, contact breaker	—	—	—	—	—	—	—	—	—	—
Spring, star, base fixing	—	—	—	—	—	—	—	—	—	—
Circlip, base fixing	—	—	—	—	—	—	—	—	—	—
§ Pin, terminal and details, L.T.	123022	123022	123022	123022	123022	123022	123022	123022	123022	123022
Bush, insulating, inside L.T. terminal or bridge	—	—	—	—	—	—	—	—	—	—
Piece/pad, shaped, insulating, L.T. terminal	—	—	—	—	—	—	—	—	—	—
Bush, contact breaker spring	409894	409894	409894	409894	409894	409894	409894	409894	409894	409894
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—
§ Lead or connector, L.T.	400034	400034	400034	400034	400034	400034	400034	400034	400034	400034
Lead, earth	—	—	—	—	—	—	—	—	—	—
Cam	496016	496016	420588	496016	496016	496016	408408	420588	496016	420588
Springs, set, auto-advance	406136/S	405590	407206/S	404437	405396/S	405396/S	407917	406350	404458	404461
Toggle	400141	400141	400141	400141	400141	400141	407131	400141	400141	400141
Weight	400150	400150	400149	400150	400150	400150	415729	400149	400150	400149
Plate, shaft and action	400130	400131	400116	400131	400125	400125	407916	400116	400127	400116
Lubricator	400304	400304	403306	400304	400304	400304	400304	400304	400304	400304
Bearing, bushing, top	404374	404374	404374	404374	404374	404374	404374	404374	404374	404374
Bushing, bottom	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590
Clip, cap retaining	420261	420261	420261	420261	420261	420261	420261	420261	420261	420261
§Sundry parts, set	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843

DISTRIBUTORS

405516 — 406335

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets § Recommended spares for stock

DETAILED SPARE PARTS

F56

406345 — 409641

DISTRIBUTORS

Part No.	†406345	406354	†407345	†407348	409607	†409615	†409624	†409629	†409639	†409641
Model	DKH4A	DKH4A	DY6A	DY6A	DKY2A	DKY4A	DKYH4A	DKY4A	DKYH4A	DKY4A
Type	V-AD	FA33	G47-0	G48-0	AJ22	A55-0	S67	G45	V87-0	BP75
Rotation	Clock	Clock	Clock	Clock	Anti-clock	Clock	Anti-clock	Clock	Clock	Anti-clock
Earth Return or Insulated Return	E.R.	I.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	187	109	295	292	150	293	282	294	282	264
Range	11½°-13°	11½°-13°	16°-18°	24°-27°	16°-18°	14°-16°	11½°-13°	24°-27°	11½°-13°	16°-18°
Replaced by (see footnote)	(40027 and 401091)	—	(40282)	(40453)	—	(40197)	(40196/S)	(40194)	(40195)	(40192)
§Plate/lever, clamping, timing or micrometer	405588	404370	408352	408352	401290	405903	406298	408352	405588	405588
Screw, or nut and screw assembly	401119	401119	401119	401119	401092	401119	401119	401119	401119	401119
Spring, ratchet, micrometer	—	—	—	—	—	—	—	—	—	—
Spring, return, micrometer	—	—	—	—	—	—	—	—	—	—
§Unit, vacuum control	—	—	—	—	—	—	400881	—	—	—
§Housing, micrometer	—	—	—	—	—	—	—	—	—	—
Terminal details, housing	—	—	—	—	—	—	—	—	—	—
§Nut, adjusting, micrometer	—	—	403321	403321	—	403321	—	403321	—	—
§Details set, micrometer	—	—	408989	408989	—	—	—	—	—	—
§Bracket, vacuum control unit	—	—	—	—	—	—	406287	—	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	—	406132	410601	410601	406142	—	410601	410601	—	410601
§Distributor, service	†406345/S (40027 and 401091)	406354/S	†407345/S (40282)	†407348/S (40453)	409607/S	†409615/S (40197/S)	†409624/S (40196/S)	†409629/S (40194)	†409639/S (40195)	†409641/S (40192)
§ Cap, distributor	400316	400316	407043	407043	409603	418888	409635	418888	409635	418888
Nut, cable securing	—	—	410600	410600	410600	410600	—	410600	—	410600
Brush and spring	404435	404435	404435	404435	404435	404435	404435	404435	404435	404435
Rotor arm	400051	400051	415088	415088	400052	400051	400052	400051	400051	400052
Contact breaker, complete	400164	—	—	—	409614	409614	409614	409614	409614	409614
Contact set	400415	400415	407050	407050	407050	407050	407050	407050	407050	407050
Condenser	400308	400308	407044	407044	—	—	—	—	—	—
Base plate, contact breaker (with condenser on DKY)	400001	405488	410520	410520	409613	409613	409613	409613	409613	409613
Plate, bearing, contact breaker	—	—	—	—	—	—	—	—	—	—
Spring, star, base fixing	—	—	—	—	—	—	—	—	—	—
Circlip, base fixing	—	—	—	—	—	—	—	—	—	—
§ Pin, terminal and details, L.T.	123022	123022	407019	407019	405314	—	405314	405314	405314	405314
Bush, insulating, inside L.T. terminal or bridge	—	—	407006	407006	409565	409565	409565	409565	409565	409565
Piece/pad, shaped, insulating, L.T. terminal	—	—	407018	407018	405319	405319	405319	405319	405319	405319
Bush, contact breaker spring	409894	409894	—	—	—	—	—	—	—	—
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—	—
Lead or connector, L.T.	400034	400034	407010	407010	409568	409568	409568	409568	409568	409568
Lead, earth	—	—	—	—	—	—	—	—	—	—
Cam	420588	420588	419947	419947	418996	420588	496016	420588	420588	496016
Springs, set, auto-advance	404458	404455	407206/S	407344	404455	405583	404458	409631/S	409636	407313
Toggle	400141	400141	400141	400141	400141	400141	400141	400141	400141	400141
Weight	400149	400149	400149	400149	400150	400149	400150	400149	400149	400150
Plate, shaft and action	400116	400284	407185	407189	409592	409579	409588	409583	409577	409592
Lubricator	400304	400304	—	—	—	—	—	—	—	—
Bearing, bushing, top	404374	404374	404374	404374	404374	404374	404374	404374	404374	404374
Bushing, bottom	410590	410590	410590	410590	410590	410590	410590	410590	410590	410590
Clip, cap retaining	420261	420261	420261	420261	420261	420261	420261	420261	420261	420261
§Sundry parts, set	400843	400843	400843	400843	400843	400843	400843	400843	400843	400843

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets § Recommended spares for stock

For illustrations see pages F2-F7

continued

DETAILED SPARE PARTS

Part No.	†409642	†409929	409930	†410041	†410042	†410501	†410504	†410700	†411052
Model	DKY4A	DVX4A	DVXH4A	DKZ4A	DKZ4A	DZ6A	DZ6A	DVXH6A	DULFH8A
Type	AA61	BS36-1	DC62	P27	P31	P32-0	BN109	T39	CW23-3
Rotation	Clock	Clock	Anti-clock	Clock	Clock	Clock	Clock	Clock	Clock
Earth Return or Insulated Return	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.	E.R.
E.C.M. Curve No.	303	344	292	225	256	260	320	266B	312
Range	11½°-13°	17½°-20°	24°-27°	8°-10°	12½°-14½°	8°-10°	14°-16°	9°-11°	8°-10°
Replaced by (see footnote)	(40193)	(40112 and 401091)	—	(40225)	(40164)	(40165)	(40133)	(40135)	(40223)
§Plate/lever, clamping, timing or micrometer	405903	—	405588	408370	408370	407238	407238	405588	411012
Screw, or nut and screw assembly	401119	401119	401119	401119	401119	401119	401119	401119	—
Spring, ratchet, micrometer	—	—	—	—	—	—	—	—	—
Spring, return, micrometer	—	—	—	—	—	—	—	—	—
§Unit, vacuum control	—	419072	419063	402313	402313	402345	400853	418958	—
§Housing, micrometer	—	408913	408914	—	—	—	—	408913	—
Terminal details, housing	—	408986	408986	—	—	—	—	408986	—
§Nut, adjusting, micrometer	403321	408948	408948	407241	407241	407241	403321	408948	—
§Details set, micrometer	—	408989	408989	—	—	—	—	408989	—
§Bracket, vacuum control unit	—	—	—	408374	408374	404912	406601	—	—
§Lever, actuating	—	—	—	—	—	—	—	—	—
§Washer/sleeve, thrust, shaft	—	—	—	—	—	—	—	—	—
§Dog or gear, driving	—	‡	410601	—	—	—	—	—	405282
§Distributor, service	†409642/S (40193)	—	—	†410041/S (40225)	†410042/S (40164)	†410501/S (40165)	†410504/S (40133)	—	—
Cap, distributor	418888	415298	420760	418888	418888	407043	407043	415708	411029
Nut, cable securing	410600	410600	—	410600	410600	410600	410600	—	—
Brush and spring	404435	404435	404435	404435	404435	404435	404435	404435	404435
Rotor arm	400051	408355	408357	400051	400051	415088	415088	415088	411031
Contact breaker, complete	409614	—	—	409614	409614	—	—	—	—
Contact set	407050	407050	407050	407050	407050	407050	407050	407050	403670
Condenser	—	407044	407044	—	—	407044	407044	407044	400308
Base plate, contact breaker (with condenser on DKY)	409613	408940	408940	409613	409613	410520	410520	408940	‡411087
Plate, contact breaker bearing	—	—	—	—	—	—	—	—	—
Spring, star, base fixing	—	410712	410712	—	—	—	—	410712	—
Circlip, base fixing	—	414728	414728	—	—	—	—	414728	—
§ Pin, terminal and details, L.T.	405314	408988	408988	405314	405314	—	—	408988	123120
Bush, insulating, inside L.T. terminal or bridge	409565	408945	408945	409565	409565	—	—	408945	—
Piece/pad, shaped, insulating L.T. terminal	405319	408944	408944	405319	405319	—	—	408944	—
Bush, contact breaker spring	—	—	—	—	—	—	—	—	—
Piece, insulating, contact breaker spring	—	—	—	—	—	—	—	—	—
Lead or connector, L.T.	409568	407010	407010	409568	409568	407010	407010	407010	‡405139/S
Lead, earth	—	414715	414715	—	—	—	—	414715	—
Cam	420588	409922	409921	418426	418426	410509	410509	408999	—
Springs, set, auto-advance	407248/S	406137/S	409644	410046/S	416083/S	410048/S	410529	407248/S	411045/S
Toggle	400141	407131	407131	—	—	—	—	407131	400141
Weight	400149	415729	415730	410033/S	410033/S	410033/S	410033/S	415729	403268
Plate, shaft and action	409577	416525	409958	410021	410021	410021	410021	408991	405281
Lubricator	—	—	—	—	—	—	—	—	405394
Bearing, bushing, top	404374	189272	189295	404374	404374	404374	404374	189295	189315
Bushing, bottom	410590	410590	410590	410590	410590	410590	410590	410590	—
Clip, cap retaining	410261	420262/S	420262/S	420261	420261	420261	420261	420262/S	425765
§Sundry parts, set	400843	400843	400843	400843	400843	400843	400843	400843	400843


DISTRIBUTORS

409642 — 411052

Note. For replacement distributor spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets ‡ Supplied by Vehicle Manufacturer
 § Recommended spares for stock || Complete with cam † Felt, with packing spring



IGNITION COILS

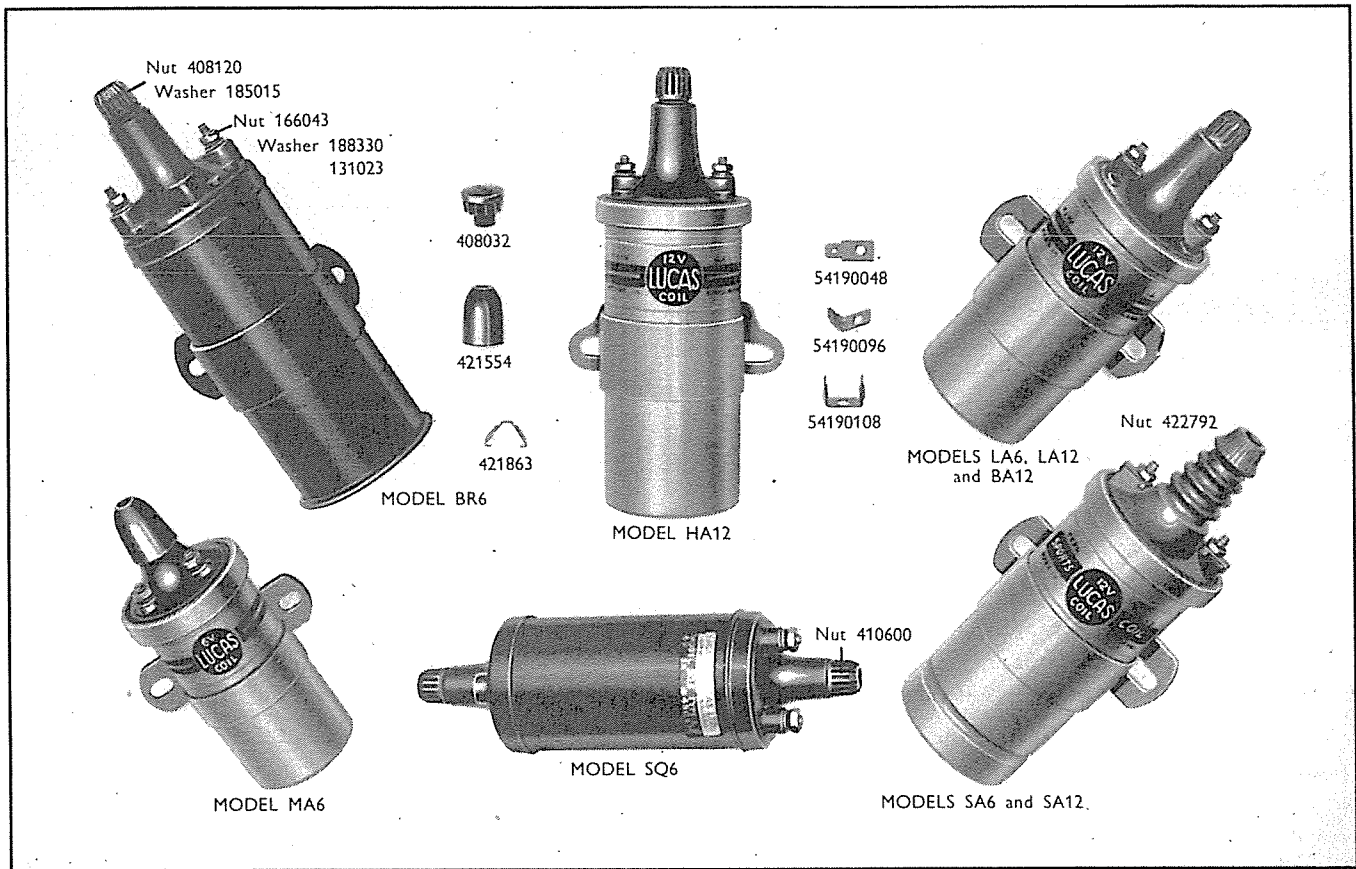

Descriptive Reference

Part No.	Model	Voltage	Finish	Earth Return (E.R.) or Insulated Return (I.R.)	Special Features
45057A	SQ6	6	Black	E.R.	Double-ended; for use on twin cylinder, four stroke engines.
45058A	SA12	12	Aluminium case ..	E.R.	Sports; fluid cooled.
45065A	SA6	6	Aluminium case ..	E.R.	Sports; fluid cooled.
45066A/J	HA12	12	Special	E.R. (Negative)	High performance; fluid cooled; special finish.
45074A/H	LA12	12	Satin etched ..	E.R. (Positive)	Standard; fluid cooled.
45075A/F	HA12	12	Satin etched ..	E.R. ,,	High performance; fluid cooled.
45076A/H	LA6	6	Satin etched ..	E.R. ,,	Standard; fluid cooled.
45077A/E	MA6	6	Satin etched ..	E.R. ,,	Fluid cooled; special H.T. connector.
45093A/E	LA12	12	Satin etched ..	I.R.	Fluid cooled; terminal on saddle.
45094A/E	HA12	12	Satin etched ..	I.R.	High performance; fluid cooled.
45102A/E	HA12	12	Satin etched ..	E.R. (Positive)	High performance; fluid cooled; Lucar connectors.
45111A/D	LA12	12	Satin etched ..	E.R. ,,	Standard; fluid cooled; double Lucar connectors.
45121A	BA12	12	Aluminium case ..	E.R. ,,	High performance; fluid cooled; used with ballast resistance 47147A.

IGNITION COILS



DETAILED SPARE PARTS

Part No.	†45012A/D B12-1 (45075)	†45013A B6 (45042)	†45014A R6 (45076)	†45016A Q6 (45076)	†45020A/B Q12 (45074)	†45021A Q12 (45093)	†45023A Q12 (45093)
§Terminal nut, moulded	408120	408120	408120	408120	408120	408120	408120
§Washer, split, cable end	185015	185015	185015	185015	185015	185015	185015
Nut, L.T. terminal	166043	166043	166043	166043	166043	166043	166043
Washer, shakeproof, terminal	188330	188330	188330	188330	188330	188330	188330
Washer, plain, terminal	131023	131023	131023	131023	131023	131023	131023

Part No.	†42025A/B B12 (45075)	†45036A CQ6 (45077)	†45038A HS12 (45058)	†45039A BR12 (45075)	45042A BR6 —	†45046A/B HV12 (45075)	†45052A/J LA6 (45076)	†45053A/M LA12 (45074)
§Terminal nut, moulded	408120	410600	408120	408120	408120	408120	408120	408120
§Washer, split, cable end	185015	185015	185015	185015	185015	185015	185015	185015
Nut, L.T. terminal	408032	166043	166043	166043	166043	166043	166043	166043
Washer, shakeproof, terminal	188330	188330	188330	188330	188330	188330	188330	188330
Washer, plain, terminal	131023	—	131023	131023	131023	131023	131023	131023

Part No.	†45054A/M HA12 (45075)	45057A SQ6 —	45058A/E SA12 —	45058F SA12 —	45065E SA6 —	45066A/J HA12 —	45067A/E HA12 (45075)	45074A/J LA12 —
§Terminal nut, moulded	408120	410600	422792	422792	422792	408120	408120	408120
§Washer, split, cable end	185015	185015	185015	185015	185015	185015	185015	185015
Nut, L.T. terminal	166043	181310	166043	166043	166043	408032	166043	166043
Washer, shakeproof, terminal	188330	188330	—	—	—	188330	185040	188330
Washer, plain, terminal	131023	—	—	—	—	131023	131023	131023
Connector, Lucar, L.T. terminal	—	—	—	54190096	—	—	—	—
Connector, Lucar, L.T. terminal	—	—	—	54190108	—	—	—	—

Part No.	45074H LA12	45075A/D HA12	45075E/F HA12	45076A/H LA6	45077A/E MA6	45093A LA12	45094A/E HA12
§Terminal nut, moulded	408120	408120	408120	408120	—	408120	408120
§Grommet, rubber	—	—	—	—	421554	—	—
§Washer, split, cable end	185015	185015	185015	185015	—	185105	185015
§Clip, cable contact	—	—	—	—	421863	—	—
Nut, L.T. terminal	166043	166043	166043	166043	166043	166043	166043
Washer, plain, terminal	131023	131023	131023	131023	131023	131023	131023
Connector, Lucar, contact breaker	54190096	—	54190096	—	—	—	—
Connector, twin, Lucar, switch	54190108	—	54190108	—	—	—	—
Washer, shakeproof, terminal	188330	188330	188330	188330	188330	188330	188330

Part No.	†45096A/E HA12 (45075)	45102A/E HA12 —	†45103A/D LA12 (45111)	45111A/D LA12 —	†45113A/D LA12 (45111)	45121A BA12 —	402032 B12 (45094)
§Terminal nut, moulded	408120	408120	408120	408120	408120	408120	408120
§Washer, split, cable end	185015	185015	185015	185015	185015	185015	185015
Nut, L.T. terminal	408032	166043	166043	166043	166043	166043	166043
Washer, shakeproof, terminal	188330	188330	188330	188330	188330	188330	188330
Washer, plain, terminal	131023	131023	131023	131023	131023	—	131023
Connector, Lucar, L.T. terminal	—	54190096	54190048	54190096	54190096	54190096	—
Connector, twin Lucar, L.T. terminal	—	—	—	54190108	—	—	—

Note. For replacement coil spare parts, see appropriate column under part number † When ordering, quote part number shown in brackets
 § Recommended spares for stock




MAGNETO

Model Interpretation



- 4 For use on four cylinder engines.
- V Vertical.
- R Rotating magnet.
- A Fitted with automatic advance and retard mechanism.

DETAILED SPARE PARTS

Part No.	44088A/D	44088E/H
Model	4VRA	4VRA
Type	DC100	DC100
Rotation	Anti-clock	Anti-clock
Finish	Standard	Standard
Plate, clamping	405588	405588
Screw assembly	401119	401119
Dog	410601	410601
Bushing, base	410590	410590
Lubricator	489347	489347
Shaft and action plate	488751	488751
Toggle	488054	488054
Springs, set, auto-advance or impulse	488651	488651
Split pin, auto-advance spring securing	186730	186730
Weight, large	491242	491242
Split pin, felt pad securing	186711	186711
Weight small	488592	488592
Foot with pins, rotor to toggle	488139	488139
Gasket	489902	489902
Key, Woodruff	189386	189386
Cap, distributor	488659	488659
Brush and spring assembly	404435	404435
Rotor arm	489916	489916
Base, with studs	489616	489616
Contact set	488657	491255
Condenser assembly	418114	418114
Washer, terminal insulating	161714	161714
Terminal	407019	407019
Bush, terminal insulating	407006	407006
Plate, terminal insulating	407018	407018
Housing, with spun-in bearing	489944	489944
Bearing	189307	189307
Washer, steel, cupped, oil retaining	488072	488072
Collar, housing to rotor	488069	488069
Rotor, magnetic	488644	488644
Cam	488528	488528
Washer, dished, contact breaker end of rotor	488520	488520
Washer, felt, special (fits in dished washer)	488530	488530
Bearing, contact breaker end	189322	189322
Washer, brass, special (next to bearing)	488642	488642
Washer, felt, special (next to brass washer)	488643	488643
Cover, coil	493416	493416
Screw, cable and contact fixing	124289	124289
Nipple, coil cover fixing	450066	450066
Stud, coil fixing	412380	412380
Coil, wound	489922	489922
Sundry parts, set	488888	488888

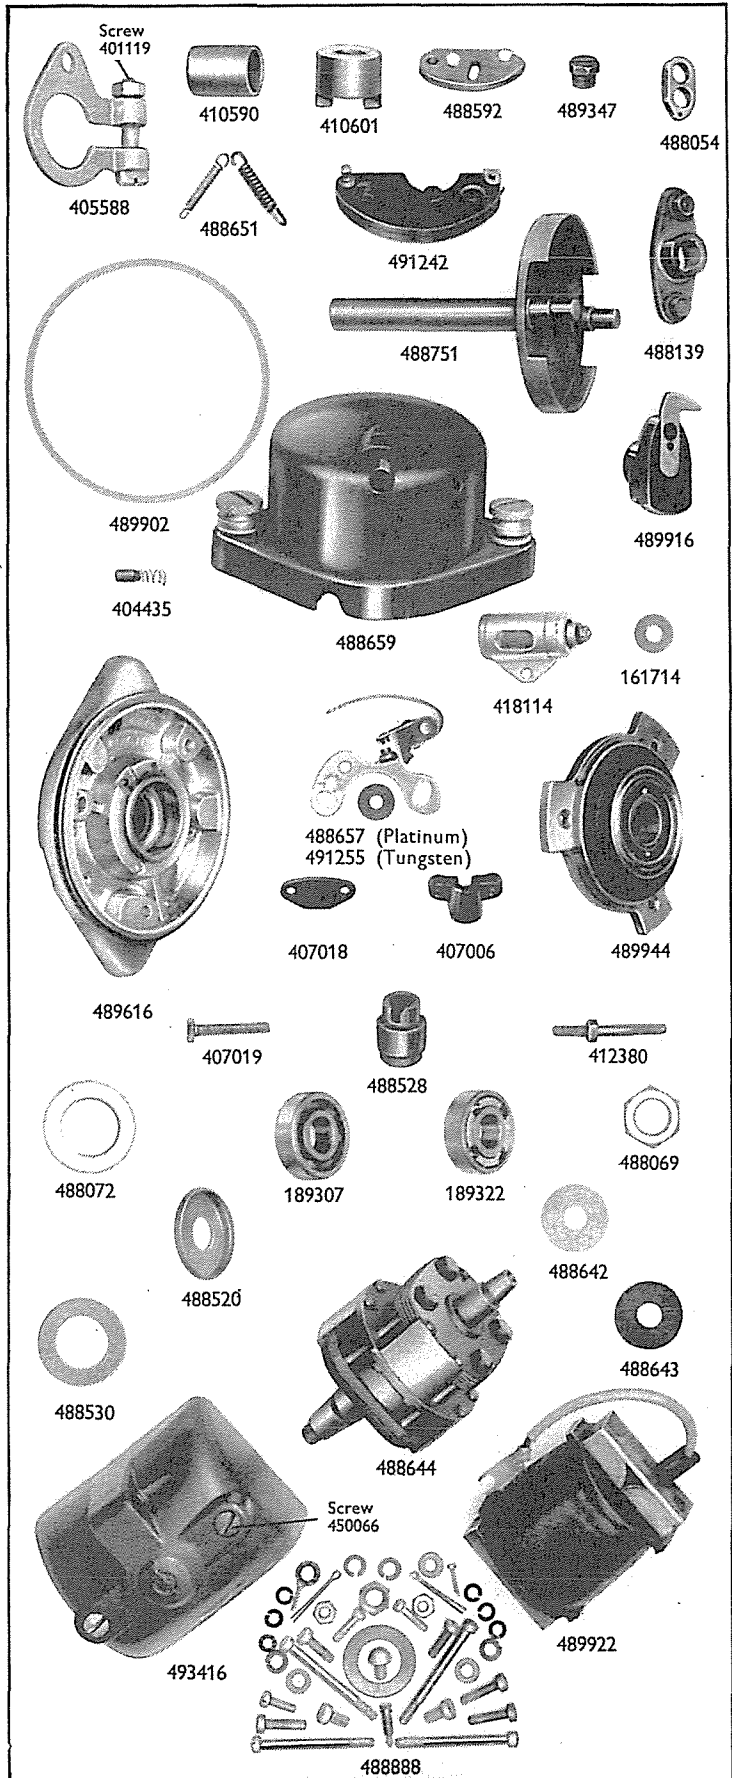

BUSHINGS AND BEARINGS

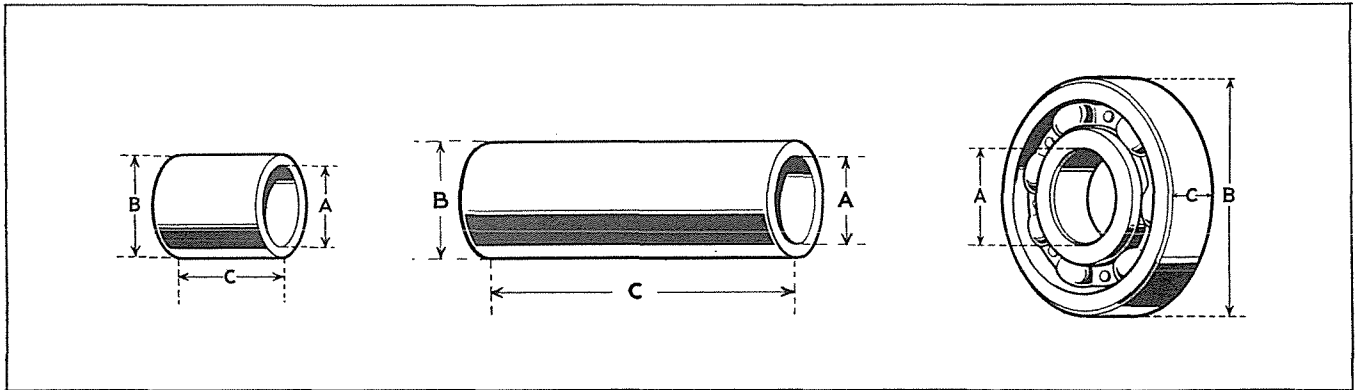 


BUSHING CHART

Part No.	Description	Dimensions		
		A Bore	B Diameter	C Width
404374	Oil-less bearing490"	.625"	.625"
410590	Oil-less bearing490"	.625"	.813"
419231	Porous bronze bearing490"	.750"	1.500"
419430	Porous bronze bearing490"	.750"	2.473"
419673	Porous bronze bearing490"	.750"	1.000"
420064	Porous bronze bearing490"	.655"	2.420"
420406	Porous sintered iron bearing490"	.750"	2.361"
421998	Porous sintered iron bearing490"	.750"	2.483"
423121	Porous sintered iron bearing490"	} Max. .746" Min. .741" }	2.006"
423571	Porous sintered iron bearing490"		.625"


BEARING CHART

Part No.	Type	Description	Dimensions		
			A Bore	B Diameter	C Width
189272	S5	Single row; 'S' type journal; English sizes500"	1.125"	.250"
189295	LS5	Single row; rigid ball journal; light type; English sizes	.500"	1.313"	.375"
189307	115	Single row; rigid ball journal; light type; metric sizes	15 mm.	35 mm.	11 mm.
189315	ULS5	Double row; self aligning ball journal; light type; English sizes500"	1.313"	.375"
189322	R112	Roller journal; light type; metric sizes	12 mm.	32 mm.	10 mm.

 


GEAR SETS


DISTRIBUTOR AND GENERATOR

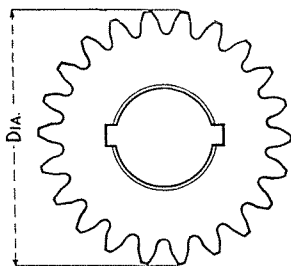

SPUR TYPE

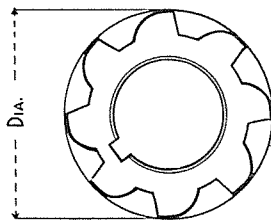


SPIRAL TYPE

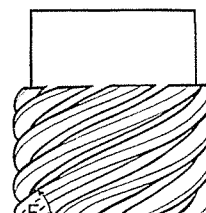

ELEVATION

Part No.	Fitted to	Set consisting of	Outside diameter (inches)	No. of Teeth	Type of Gear	Direction of Spiral
220408	Generator C35A ..	Distributor gear Generator gear	.997 1.001	6 15	Spiral Spiral	L.H. L.H.
220498	Distributors DKX2A and DKY2A	Distributor gear Generator gear	.972 1.103	16 8	Spiral Spiral	R.H. R.H.
224259	Generator C45A ..	Distributor gear Generator gear	1.015 1.014	20 10	Spiral Spiral	R.H. R.H.
229044	Generator C45D ..	Distributor gear Generator gear	1.015 1.016	20 10	Spiral Spiral	R.H. R.H.
239301	Generator C45A ..	Distributor gear Generator gear	1.016 1.016	20 10	Spiral Spiral	R.H. R.H.
239302	Generator C45A ..	Distributor gear Generator gear	.908 1.207	12 5	Spur Spur	— —
239303	Generator C45AL ..	Distributor gear Generator gear	.987 1.152	20 10	Spiral Spiral	R.H. R.H.
402074	Distributor DCR4A ..	Gear Pinion	.966 1.044	14 7	Spiral Spiral	L.H. L.H.
406142	Generator C418A ..	Distributor gear Generator gear	.962 1.140	20 8	Spiral Spiral	R.H. R.H.
421370	Generator DEL42 ..	Gear Pinion	1.009 1.003	15 6	Spiral Spiral	L.H. L.H.

 SUPPRESSORS



RESISTORS AND CAPACITORS

To avoid interference with television reception the ignition system on all new cars is now suppressed by the manufacturers to the required standard. It is, of course, desirable that owners of older cars should voluntarily suppress their vehicles. Suppression to the legal standard can be readily achieved by fitting resistors in the H.T. part of the ignition circuit. One resistor, fitted at the **distributor end** of the coil to distributor H.T. cable will, in most cases, be all that is required. The fitting of further resistors at the **plug end** of the plug to distributor leads will almost certainly reduce the interference below the maximum permitted under the Ignition Interference Regulations.

Lucas DM distributors are fitted with a special resistive brush in the distributor cap, and this is equivalent to an external resistor in the coil distributor lead. This cannot be fitted to older type distributors because of its length.

Ignition suppressors have no adverse effect on the performance of car engines or on the other components of the ignition system. One beneficial effect is the reduction of wear on the sparking plug electrodes.


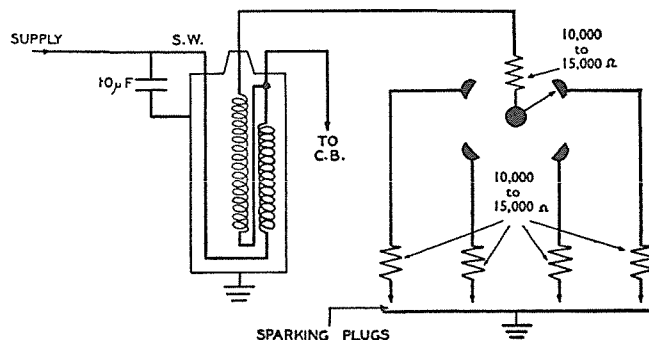


Diagram showing resistor in distributor lead, resistors in the plug leads, and a capacitor across the low tension supply and earth.

Where car radio is installed, additional suppression may be required on the low tension side, and for this purpose capacitors can be fitted at the appropriate points.

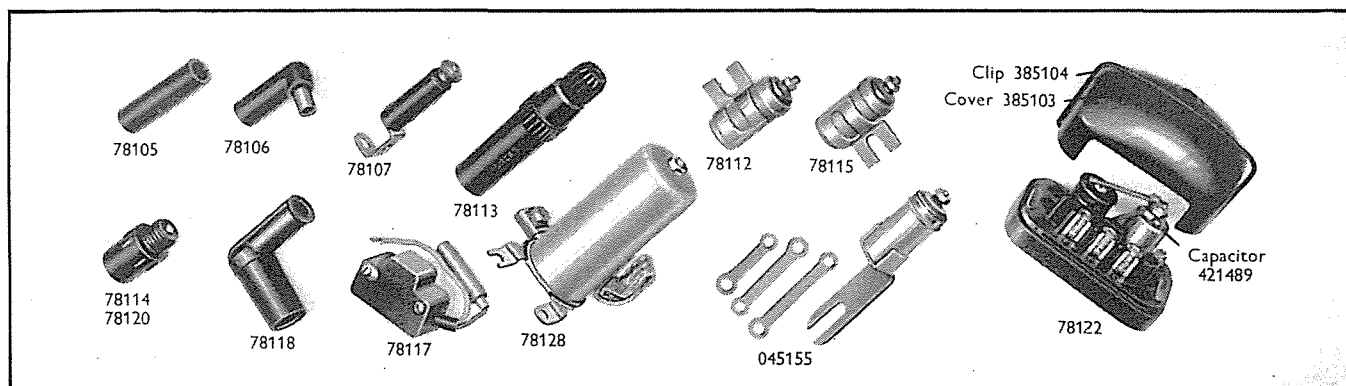


RESISTORS

Part No.	Description	Special Features
78105A	WS5	Cable type suppressor for use in coil to distributor H.T. cable.
78106A	WS5	Sparking plug suppressor. Right angle type with push-in clip fixing.
78107A	WS5	Sparking plug suppressors for plugs with knurled terminal nuts.
78113A	WS5	Sparking plug suppressor. Straight type with shroud to protect plug insulator; push-on clip fixing.
78114A	WS5	Distributor suppressor for centre of vertical outlet distributor caps.
78117A	WS10	Wiper motor suppressor. Base fixing.
78118A	WS11	Sparking plug suppressor. Right angle type with shroud to protect plug insulator; push-on clip fixing.
78120A	WS5	Similar to 78114A, but resistance 4,000-6,000 ohms.

CAPACITORS

78112A	WS8	Suitable for use on electric petrol pumps, gauges, clocks, fans, etc.; slotted clip.
78115A	WS9	Similar to 78112, but clip assembly reversed.
78122A	WS12	Radio suppressor; box type.
78128A	WS14	Radio suppressor; cylindrical type.
045155	WS6	Capacitor with fixing clip suitable for attachment to ignition coil and strap connectors for connecting to S.W. coil terminal.

 

DISTRIBUTORS, COILS AND MAGNETO

 
VEHICLE APPLICATION REFERENCE

DISTRIBUTORS

- 40027 DKH4A
Morgan 'Plus Four' 1946-47.
Standard 12 and 14 (Holland and Belgium) 1946-48.
- 40051 DY6A
Wolseley 18 1946-48.
- 40053 DKYH4A
Morris 10 cwt. 1946-49.
Standard 8 1946-48; 14 1946-47.
- 40054 DKYH4A
Sunbeam-Talbot 10 1946-47.
- 40061 DVX4A
Sunbeam-Talbot 2 litre 1946.
- 40062 DKY4A
H.R.G. 12 1946-49.
Singer 9 and 10 1946; 12 1946-49.
- 40063 DY6A
Wolseley 14 1946-48; 25 1948.
- 40064 DKY4A
Morris 'Oxford' Taxi and Hire Car 1947-49.
Wolseley 12 1946-48.
- 40068 D4A8
Allard All Models (except 16, '21C', '21Z' and 'Cadillac' engines 1949-55).
- 40069 DKY4A
Morris Commercial 15/20 cwt. (PV) 1946-53; LC Models 1946-53; 25/35 cwt. 1946.
- 40070 DKYH4A
Commer 8 cwt. 1947-52; Estate Car 1949; 'Express' Delivery Van and Pick up Truck (S.V. engine) 1953-56; 'Cob' 1957; 25 cwt. Models (late) 1953 Hillman 'Minx' (S.V. engine) 1946-56; 'Husky' 1955-57.
Humber 'Hawk' 1946-50 and 1953.
Karrier 'Bantam' (later) 1953.
- 40071 DKY4A
Alvis 14 1946-50.
H.R.G. 12 1950-52.
Singer 4AC and 4AD 1952-53; 'SM1500' 1949-53; 'Hunter' (single carburettor) 1955-56; 'Hunter S' (single carburettor) 1956.
Standard 'Vanguard' 1948-49; 12 cwt. Van and Truck 1948-49.
Triumph '2000' 1949.
- 40074 DKYH4A
Commer 8 cwt. 1946.
Triumph '1800' 1946-48.
- 40076 DKYH4A
Morris 10 1946; 10 cwt. 1950.
Standard 14 1948.
- 40077 DUBA
Daimler 36 1946-53.
- 40079 DKX1A
A.C. Invalid Carriage 1952-53.
Larmor Invalid Carriage 1948-50.
- 40081 DKY4A
Healey All Models 1948-54.
Lea Francis 14 1949-53; 1½ litre Sports 1949.
Riley 2½ litre 1947-51.
- 40085 DKY4A
Austin 16 1946.
- 40089 DKYH4A
M.G. 1½ litre 1947-52.
- 40090 DYX6A
Dodge Petrol Models 1947-48.
- 40091 DKY4A
Jaguar 1½ litre 1946-48.
Lea Francis 14 1946-48.
Riley 1½ litre 1946 and 1949-55.
- 40092 DXH6A
Jaguar 2½ litre (later) 1946-47.
- 40093 DXH6A
Jaguar 3½ litre 1946-47.
- 40094 D9A2
Lloyd Roadster 1948-50.
Trojan 15/20 cwt. 1946-60.
- 40100 DKH4A
Citroen 15 1946-49.
- 40103 DVXH4A
Rover '60' 1948.
- 40105 DVXH6A
Rover '75' 1948.
- 40109 DX6A
A.F.N. 'Le Mans' and 'Mille Miglia' 1951-53.
Bristol All Models 1947-50.
- 40110 DX6A
Armstrong Siddeley All Models 1946-49.
- 40112 DVX4A
Lanchester 10 1946-51
- 40114 DVXH4A
Sunbeam-Talbot 2 litre 1947; '90' 1948-50.
- 40115 DKYH4A
Jowett 'Javelin' and 'Jupiter' 1948-52.
- 40121 DKY2A
Jowett 'Bradford' Van 1947-52; De Luxe Van and Utility 1949-52.
- 40123 DKYH4A
Sunbeam-Talbot '80' 1948-50.
- 40125 DVXH6A
Aston Martin DB2 1951-52.
Lagonda 2½ litre 1949-52; 3 litre Saloon and Coupé 1954-58.
- 40129 DKYH4A
Morris Commercial CV Models 1949-51; ECV13/5 (Petrol) 1949; FV 1949-53; NV 1954; NV12/3 1955; PP Coach 1950-51.
- 40133 DX6A
Austin Coach 1947-48.
- 40135 DVXH6A
Commer 2/3, 3/4 and 4/5 ton 1949-51; 5 ton 1947; 8 ton Tractor Trailer (Petrol) 1950.
Humber 'Imperial' and 'Pullman' 1946-53; 'Snipe' 1946; 'Super Snipe' 1946-52.
Karrier CK3 1946-52.
- 40140 DVXH4A
Aston Martin 2 litre 1947-50.
- 40141 DKYH4A
Austin A40 (except Sports) 1948-52.
- 40142 DKY4A
Morris 'Oxford' Taxi and Hire Car 1950-51.
- 40143 DX6A
A.C. 16 1948-56; 'Ace' 1955.
- 40149 DVXH6A
Jaguar 3½ litre 1948-50.
- 40152 DKYH4A
Morris 'Cowley' Van and Truck 1950; 'Oxford' 1948-50.
- 40156 DVXH6A
Jaguar 2½ litre 1948-51.
- 40157 DVXH6A
Morris 'Six' 1948-49.
Wolseley 'Six Eighty' 1949-54.
- 40158 DVXH4A
Wolseley 'Four Fifty' 1949-53.
- 40161 DX6A
Austin A125 'Sheerline' 1948; A135 Princess' 1948 and 1951-54; 2 and 5 ton Trucks 1949-52.
- 40162 DKY4A
M.G. 1½ litre Tourer 1949-50; 'Midget' 1946-52.
- 40164 DKZ4A
Bedford 10/12 cwt. (later) 1948-52.
Vauxhall 10 1946-47; 'Wyvern' 1948-52.
- 40165 DZ6A
Vauxhall 'Velox' 1948-52.
- 40166 DXH6A
Dodge Petrol Models 1949-54.
- 40172 DVX4A
Austin A90 1949-52.
- 40173 DK6A
Citroen 23 1946-55.
- 40175 DZ6A
Daimler 2½ litre (except 'Consort' 1946-47; 2½ litre 1950-53).
- 40179 DX6A
Daimler 27 1946-53; 2½ litre (except 'Consort') 1948-49; DC27 Ambulance 1949-54.
- 40181 DVXH6A
Morris 'Six' 1950-54.
- 40189 DVX6A
Austin A135 'Princess' (later) 1950.
- 40192 DKY4A
H.R.G. 9 1946-52.
Singer 9 Roadster 1947-51; 10 (later) 1946-49.
- 40193 DKY4A
Wolseley 8 1946-48.
- 40194 DKY4A
Rover 10 and 12 1946-47.
- 40195 DKYH4A
Morgan 'Plus Four' 1948-50; 'Four Four' (Standard engine) 1949-50.
Standard 12 1946-48.
- 40196 DKYH4A
Commer 15/25 cwt. 1946-48; 25 cwt. 1946-50.
Karrier 'Bantam' 1946-50; 'Cob' 1947-48.
- 40197 DKY4A
M.G. 1½ litre 1953.
Morris 10 (later) 1946-48.
Wolseley 10 1946-48.
- 40206 DKYH4A
Lea Francis 18 and 2½ litre Sports 1950-52.
- 40207 DVX6A
Armstrong Siddeley All Models (except 'Sapphire') 1950-53.
- 40210 DVZ6A
Commer 2/3, 3/4 and 5 ton 'Superpoise' and 'Commando' 1952; Fire Tender or Pump Chassis 1952-53.
- 40216 DVXH6A
Alvis TA21 1951-53; TB21 1952.
- 40217 DVXH4A
Sunbeam-Talbot '90' 1951-53.
- 40218 DKYH4A
Commer 25 cwt. 1951-53.
Humber 'Hawk' 1951-52.
Karrier 'Bantam' 1951-53.
- 40223 DULFH8A
Allard 16 1947-49; All models with Cadillac engine 1951-55.
Jensen 3½ litre 1946-47.
- 40224 DK4A
Austin 8, 10 and 12 1946-47.
Reliant All Models 1946-57.
- 40225 DKZ4A
Bedford 5/6 cwt. Van 1946-47; 10/12 cwt. Van 1946-48.
Vauxhall 10 1946-47.
- 40228 DX6A
Morris Commercial FVS 1954-55; NVS 1951-55.
- 40232 DKYH4A
Triumph 'Mayflower' 1950-53.
- 40235 DX6A
Bristol '401' 1951-52.

continued

DISTRIBUTORS, COILS AND MAGNETO




VEHICLE APPLICATION REFERENCE—continued

DISTRIBUTORS—continued

- 40236 DKYH4A
Citroen 15 (later) 1949-52.
- 40239 DVXH4A
Lea Francis 18 and 2½ litre Sports 1952-54.
- 40241 DKH4A
Morris Commercial Petrol Tanker 1951-52.
- 40245 DVX4A
Lea Francis 14 (later) 1953-54.
- 40249 DVX6A
Jaguar XK120 (7-1 compression ratio) 1949-54.
- 40251 DKYH4A
Morris 8 1946-48; 'Minor' 1948-52; 'Cowley' Van and Truck 1951-53; 'Oxford' 1951-53; 5 cwt. Van 1946-53.
Morris Commercial 'J' Van 1951-53.
- 40252 DM6
Allard '21Z' 1953-55.
- 40258 DKYH4A
Austin A70 (Police Car) 1951-52.
- 40264 DVXH6A
Aston Martin DB2 Models 1953-56.
Lagonda 2½ litre (later) 1952.
- 40269 DKY4A
Austin 16 1947-48; A70 1948-50; Taxi 1948-53; Hire Car 1951-53; 25 cwt. Van and Ambulance 1948-52.
- 40270 DKY4A
Austin A40 Sports 1951.
- 40277 DKY4A
Riley 2½ litre 1952.
- 40282 DY6A
Rover 14 1946-47.
- 40283 DMBZ6A
Rover '75' 1950-54.
- 40286 Special
Dellow Sports 1952-54.
Jensen 'Jen-Tug' 1946-52.
Meynell All Models 1952.
Morgan 3-wheeler 1948-52.
Paramount All Models 1951-54.
- 40290 DMZ6A
Vauxhall 'Velox' and 'Cresta' 1952-56.
- 40294 DVX4A
Lanchester 14 1952-53.
- 40307 DM6
Austin 2, 3 and 5 ton (later) 1952-55; Coach (later) 1952-53.
- 40308 DM6
Austin A135 'Princess' (later) 1954; Ambulance and Hearse 1955; Cargo Truck 1954-55; Series III Trucks (high speed engine) 1953-59.
Morris Commercial 3 ton 3KNC (G.P.O., high speed engine) 1958-59; Series III Trucks (high speed engine) 1959-60.
- 40318 DVXH4A
Jowett 'Jupiter' (racing model) 1953-54.
- 40327 DM6
Austin 3 ton 1956-57; Coach 1954-55.
Morris Commercial 3KNC (G.P.O.) 1956-57; 3 ton 1956-57.
- 40333 D2AH4
Morris 'Minor' (S.V. engine) 1953.
- 40337 DM2P4
Lanchester 14 (later) 1953.
- 40339 DUH6A
Austin 2½ ton Petrol Tanker 1946-55.
- 40345 DX6A
Bristol All Models 1953-55.
- 40347 DKY2A
Jowett 'Bradford' Van 1953-54.
- 40357 DXH4A
Jensen 'Jen-Tug' 1953.
- 40358 D2AH4
Morris 'Oxford' (later) 1953-54; Half Ton Van and Truck 1954-56.
Morris Commercial 'J' Van 1954-57.
- 40359 DM6
Austin Coach 1948-52.
Commer 3 ton Cross Country Vehicle 1956; 4, 5 and 6 ton Forward Control 1959-60; 5 and 7 ton Forward Control and 'Avenger' 1949-60; 6½ and 7 ton 1949-50; Fire Tender or Pump 1954-60.
Karrier 'Gamecock' 1953-60.
- 40360 DM6
Commer 2/3, 3/4 and 5 ton 'Superpoise' and 'Commando' 1952-54; Fire Tender or Pump (later) 1953.
- 40367 D2A4
M.G. 'Midget' (later) 1953-55.
- 40368 D2A4
M.G. 'Midget' 1953.
- 40369 D2A4
M.G. 1½ litre (later) 1953.
- 40371 DM6
Austin A125 1949-54; A135 'Princess' 1949-50 and 1955; 'Princess' Mk. IV 1957-58; Ambulance and Hearse 1951-54 and 1956-60; 2 and 5 ton (high speed engine) 1952.
Jensen 'Interceptor' 1950-55; '541' and '541R' 1954-60.
- 40377 DM2P4
Sunbeam-Talbot '90' (later) 1953-54.
- 40394 DM6
Daimler 'Conquest Century' 1954.
- 40401 DM6
Humber 'Imperial' and 'Pullman' 1954; 'Super Snipe' 1953-55.
- 40404 DMZ6
Bedford 1/6 ton TA, TD and TJ, 5 ton Truck and Tractor 1946-50; Ambulance 1949-50; Bus 1946-50; K, OSA-OLA, OSB-OLB, MS and OSS 1951-53.
- 40405 DMZ6
Bedford SH Fire Engine 1951-53; S Type Truck and Tractor 1951-57; 'SB' Type Coach and Fire Engine Chassis 1951-57.
- 40408 DMBZ6
Rover '90' 1954-55.
- 40410 DMBZ4
Rover '60' 1954-59.
- 40411 DVXH6A
Alvis All Models 1954-55.
- 40417 DX6A
Bristol All Models 1954-55.
- 40424 DM6
Daimler 'Conquest' Models 1954-57.
- 40429 DM6
Daimler 'Empress' and 3½ litre 'Regency' 1955; 'One-O-Four' Saloon 1958-59; 4½ litre 'Regency' and 'Regina' 1955; 4½ litre Limousine 1956-60.
- 40431 DM2P4
Alfa Romeo 'Giulietta' 1955-60; T10 Van 1958-60.
- 40434 DM2P4
Standard 'Eight' Saloon
- 40435 DVX6A
Daimler 3 litre 'Regency' 1953.
Jaguar 3½ litre (7-1 compression ratio) 1951-58; XK140 (7-1 compression ratio) 1955-57.
- 40442 DM6
Austin A105 1957-59.
Morris 'Isis' 1956-57.
Wolseley 'Six Ninety' 1955-57.
- 40444 DM6
Dodge Petrol Models 1955-56 and 1958-60.
- 40445 DVX6A
Jaguar 3½ litre (special equipment) 1956-58; XK140 (9-1 compression ratio) 1955-57.
- 40449 DKX2A
Fairthorpe 'Atomota' 1959-60.
- 40453 DY6A
Rover 16 1946-47.
- 40462 DX6A
A.C. 16 1951; 'Ace' and 'Aceca' (A.C. engine) 1955-60.
- 40464 DMZ6
Vauxhall All Models (except 'Wyvern') 1957.
- 40465 DM2P4
Fairthorpe 'Electron' 1958.
- 40467 DM6
Dodge Petrol Models 1957.
- 40471 DM6
Humber 'Super Snipe' 1956-57.
- 40477 DM2P4
Standard 'Eight' (later) 1956-57; 'Eight' (low compression) 1958-59.
- 40478 DM2P4
Standard 'Ten' 1954-57; 'Ten' (low compression) and 'Pennant' 1958.
- 40479 DM2P4
Morgan 'Plus Four' 1951-54; 'Plus Four' ('Vanguard' engine) 1956-57.
Standard 'Vanguard' (low compression) 1950-59; 12 cwt. Van and Pick-up Truck 1950-57.
Swallow 'Doretta' 1954-55.
Triumph '2000' (later) 1949; 'Renown' 1950-54.
- 40484 DVXH6A
Aston Martin DB2/4 1957; DB3/S Competition 1956; DB Mk. III 1958-59.
- 40485 DMBZ6A
Rover '90' 1956-59.
- 40489 DX6A
Bristol '405' 1956-58.
- 40490 DM2P4
Sunbeam 'Rapier' (high compression) 1956-59.
- 40491 DM2P4
Commer 1½/1½ ton Forward Control and 1/1½ ton 'Superpoise' 1956-59; 1 ton Forward Control 1959.
Humber 'Hawk' 1955-57.
Karrier 'Bantam' and 1½/1½ ton Passenger Chassis 1957-59.
Sunbeam 'Alpine' 1953; Coupé 1955; Saloon Mk. III 1955-57.
Sunbeam-Talbot '90' 1954.
- 40492 DM2P4
Commer 'Express' Delivery Van and Truck (O.H.V. engine) 1956-60; 'Cob' Series I (low compression) 1958-60.
Hillman 'Minx' (O.H.V. engine, low compression) 1956-59; 'Minx Special' and 'Husky' Series I (low compression) 1958-60.
Singer 'Gazelle' (low compression) 1959.
- 40494 DM2P4
Austin A30 1952-56.
Morris 'Minor' 1953-56; Quarter Ton 1954-56; Quarter Ton Van (G.P.O.) 1954-60.
- 40495 DM2P4
Austin A90 (later) 1952; 'Healey 100' 1954-56.
- 40496 DM2P4
Austin Taxi 1953-58; LD1A and LD2A 1955-60; 301 Range 1957-60.
Morris Commercial LC, LD1 and LD2 1954-60.

 continued



DISTRIBUTORS, COILS AND MAGNETO

VEHICLE APPLICATION REFERENCE—continued

DISTRIBUTORS—continued

- 40497 DM2P4
Austin A40 (later) 1952-54.
Jensen 'Jen-Tug' (later) 1953-54.
Nash Metropolitan 1954-55.
- 40498 DM2P4
Austin A40 1955-56.
Morris 'Cowley' 1955-56.
Nash Metropolitan 1956.
- 40499 DM2P4
Austin 'Cambridge' (low compression) 1958-59;
A55 Pick-up Truck Chassis and Van (low compression) and 'Metropolitan' (low compression) 1957-60.
Jensen 'Tempo 1500' 1958-60.
Morris 'Cowley' 1957-59; 'Oxford' and 'Hindustan' (low compression) 1956-60; Half Ton Van and Truck 1957-60.
Morris Commercial 'J2' Models 1957-60; 'JB' Van 1958-60.
Nash Metropolitan (low compression) 1958-60.
Wolseley 'Fifteen Hundred' 1958-60; 'Fifteen Fifty' (low compression) 1957-60.
- 40500 DM2P4
Austin 'Champ' 1954-56.
- 40502 DM2P4
Wolseley 'Four Forty-Four' 1953-56.
- 40503 DM2P4
Riley 'Pathfinder' 1955-57.
- 40504 DM2P4
Rover '60' 1949; 'Landrover' 1948-59.
- 40509 DM2P4
M.G. 'Magnetite' 1954-56.
- 40510 DM2P4
Lotus Mk. IX (M.G. engine) 1958-59.
M.G. MGA and MGA 1600 1956-60; 'Magnetite' 1957.
Riley 'One-Point-Five' 1958.
- 40511 DM2P4
Commer 25 cwt. Forward Control and 'Superpoise' 1954-56.
Humber 'Hawk' (later) 1953-54.
Karrier 'Bantam' 1954-56.
- 40512 DM2P4
Allard '21C' (later) 1953-55.
Beardmore Taxi 1955-58.
- 40515 DM2P4
Citroen 15 1952-55.
- 40517 DM2P4
Singer 4AC and 4AD (later) 1953-55; 'SM1500' (later) 1953-54; 'Hunter' (twin carburetter) 1955-56; 'Hunter S' (twin carburetter) 1956.
- 40520 DM2P4
Austin-Healey '100M' 1956.
- 40524 DM6
Daimler 'One-O-Four' 1956-57 and (later) 1959.
- 40527 DM2P4
Bedford CA Van 1956-57.
Vauxhall 'Wyvern' 1956-57.
- 40528 DMBZ6
Jaguar 2.4 litre (8-1 compression ratio) 1956-60.
- 40530 DM2P4
Commer 'Cob' (high compression) 1960.
Hillman 'Minx' (O.H.V. engine, high compression) 1957-60; 'Husky' Series I 1960.
Singer 'Gazelle' (high compression) (later) 1959.
- 40531 DM6
Daimler 'Conquest Century' 1958.
- 40532 DM6
Austin-Healey '100 Six' 1957.
- 40534 DM2P4
Riley 2½ litre 1953; 'Pathfinder' 1954.
- 40536 DM2P4
Sunbeam 'Alpine Special' 1955.
- 40537 DM2P4
Standard 'Eight' 1954.
- 40538 DM2P4
Austin A40 Sports 1952-53.
- 40539 DM2P4
Austin A70 1952-55; 25 cwt. Van and Ambulance (later) 1952-54.
- 40540 DM2P4
Bedford CA Van 1953-55.
Vauxhall 'Wyvern' 1953-55.
- 40547 DM2P4
Lanchester 'Sprite' 1955-56.
- 40548 DM2P4
Morgan 'Plus Four' ('Vanguard' engine) 1959-60.
Standard 'Vanguard Sportsman' 1957-58.
- 40551 DXH6A
A.C. 'Ace' and 'Aceca' (Bristol engine) 1956-60.
- 40552 DM2P4
Sunbeam 'Rapier' (low compression) 1957-59.
- 40554 DM6
Alvis TC108G 1956-57.
- 40556 DUH6A
Austin Petrol Tanker Series III 1957-60.
Morris Commercial Petrol Tanker Series III 1957-60.
- 40557 DMBZ2A
Jaguar 2.4 litre (7-1 compression ratio) 1957-60.
- 40559 DM2P4
Standard 'Vanguard' (high compression) 1957-60.
- 40560 DM2P4
Humber 'Hawk' 1958-60.
- 40561 DM2P4
Austin A35 (high compression) 1957-60; A40 (high compression) 1959; Austin-Healey 'Sprite' 1958-60.
Morris '1000' and Quarter Ton Van and Truck (high compression) 1957-60.
- 40564 D2A4
Singer 'Gazelle' (low compression) 1957-58.
- 40565 DMBZ6A
Rover '75' 1949.
- 40566 D3AH4A
Cooper 'Monaco' Sports (Climax engine) 1959-60.
Fairthorpe 'Electron' 1959.
Layton Sports Cars 'Jomar' (T.V.R.) (Climax engine) 1959-60.
Lotus Mk. IX (Climax engine) 1958-59; 'Elite' 1959-60.
- 40569 DM2P4
Austin A35 (low compression) 1957-60; A40 (low compression) 1959.
Morris 'Minor 1000' and Quarter Ton Van and Truck (low compression) 1957-60.
- 40570 DM2P4
Austin 'Cambridge' (high compression) (later) 1957-58.
Morris 'Oxford' Series I-IV and 'Hindustan' (high compression) 1957-60.
Wolseley 'Fifteen Fifty' (high compression) 1957-59.
- 40571 DM2P4
Jowett 'Javelin' and 'Jupiter' 1953-54.
- 40576 DMBZ6
Jaguar Mk. VIII (8-1 compression ratio) 1957-59; 3.4 litre and XK150 (8-1 compression ratio) 1958-60.
- 40578 DMBZ6
Jaguar Mk. VIII (7-1 compression ratio) 1957-59; 3.4 litre and XK150 (7-1 compression ratio) 1958-60.
- 40580 DM6
Morris 'Isis' (Premium Petrol) 1958.
Wolseley 'Six Ninety' 1958-59.
- 40583 DM2P4
Austin 'Gipsy' 1958-60.
- 40587 DM2
M.G. 'Magnetite' 1958-59.
Riley 'One-Point-Five' 1959-60.
- 40588 DM2
Standard 'Ensign' (76 mm. engine) 1958-60.
- 40593 DM2P4
Standard 'Eight' (high compression) 1958-59.
- 40598 DM2P4
Fairthorpe 'Electron Minor' 1958-59.
Standard 'Ten' and 'Pennant' (high compression) 1958-59.
- 40600 DM2P4
Austin A55 (high compression) (later) 1958-59; 'Metropolitan' (high compression) 1958-60.
Elva 'Courier' (B.M.C. 1,500 c.c. engine) 1959-60.
Nash Metropolitan (high compression) (later) 1958-60.
- 40601 DM6
Humber 'Super Snipe' 1959.
- 40602 DMX6A
Armstrong Siddeley ½ ton Pick-up Truck 1957.
- 40606 DM2P4
Standard 'Companion' 1960.
- 40607 DM2P4
Armstrong Siddeley 'Sapphire 234' 1956-58.
- 40608 DMBX6A
Armstrong Siddeley 'Sapphire' 1953-55; 'Sapphire 346' 1956-59.
- 40609 DM2P4
Rover '80' 1960; 'Landrover' 1959-60.
- 40610 18D2
Berkeley Sports (700 c.c. engine) 1959-60.
- 40611 DM2
Fairthorpe 'Electron Minor' (high compression) (later) 1959-60.
Standard 'Ten' (alternative) and 'Pennant' (twin carburetter) 1959.
- 40616 DMZ6A
Jaguar XK150 (9-1 compression ratio) 1959-60.
- 40617 DMBZ6
Jaguar 3.4 litre (9-1 compression ratio) 1959-60.
- 40620 DM2P4
Standard 'Ten' and 'Pennant' (low compression) 1959.
- 40622 DM2P4
Standard 'Atlas' 1959-60; 6 cwt. Van and Truck 1960.
Triumph 'Herald' (low compression) 1959-60.
- 40624 DM2P4
Austin 'Cambridge' (low compression) 1959-60.
Morris 'Oxford' 1954-56 and 1959-60; 'Hindustan' 1955-56.
Wolseley 'Fifteen Sixty' (low compression) 1959-60.
- 40629 DX6A
Bristol '406' 1958-60.
- 40633 DM6
Fairthorpe 'Zeta' (high compression) 1960.
- 40634 DM6
Fairthorpe 'Zeta' (low compression) 1960.
- 40635 DM6
Austin 'Princess' Mk. IV 1957-59.
- 40637 DM2P4
Triumph 'Herald' (high compression) 1959-60.
- 40638 DM2P4
Fairthorpe 'Electron Minor' (later) 1959-60.
Triumph 'Herald' (twin carburetter) 1959-60.

continued

DISTRIBUTORS, COILS AND MAGNETO



VEHICLE APPLICATION REFERENCE—continued

DISTRIBUTORS—continued

40640 DMBZ6A
Jaguar Mk. IX (8-1 compression ratio) 1959-60;
3.8 litre (8-1 compression ratio) 1960.

40641 DM6
Alvis TD21 1958-60.

40643 DM2P4
Austin A55 Mk. II (high compression) 1959-60.
Morris 'Oxford' Series V (high compression)
1959-60.
Wolseley 'Fifteen Sixty' 1959-60.

40644 DM2P4
M.G. 'Magnette' Mk. III 1959-60.
Riley 'Four Sixty-Eight' 1959-60.

40648 DM2P4
Austin 'Seven' 850 and $\frac{1}{2}$ ton Van 1959-60.
Morris 'Mini-minor' 850 and $\frac{1}{2}$ ton 'Mini-van'
1959-60.

40649 DM2P4
Alfa Romeo 'Giulietta' 1960.

40650 DMBZ6A
Armstrong Siddeley 'Star Sapphire' 1959-60.

40652 DM2P4
Lotus Mk. VII Series II (Ford 105E engine) 1960.

40656 DM2P4
Austin-Healey 'Sprite' (high compression) 1959-60.

40657 DM6
Armstrong Siddeley 'Sapphire 236' 1956-58.

40660 DM6
Humber 'Super Snipe' (later) 1959.

40661 DM6
Austin A99 1959-60; B.M.C. 3 litre 'Princess' 1960.
Wolseley 'Six Ninety-Nine' 1959-60.

40662 DM6
Austin-Healey '100 Six' 1958-59; 3000' 1959-60.
Riley 'Two-Point-Six' 1958-59.

40665 DMBZ6
Jaguar Mk. IX (9-1 compression ratio) 1959-60;
3.8 litre (9-1 compression ratio) 1960.

40667 DM2P4
Commer $1\frac{1}{4}/1\frac{1}{4}$ ton Forward Control 1960;
 $\frac{3}{4}/1\frac{1}{2}$ ton 'Superpoise' 1959-60.
Karrier 'Bantam' (later) 1959-60; $1\frac{1}{4}/1\frac{1}{2}$ ton
Passenger Chassis 1960.

45057 SQ6 6 volt Earth return.
Citroen 2CV 1954-60.

45058 SA12 12 volt.
A.C. Cars 'Ace' and 'Aceca' (A.C. engine) 1955-57.

45066 HA12 12 volt Negative earth.
Bentley Model 'S' 1957-59; Sports Saloon 1955-56;
'Continental' Sports 1955-59.
Rolls-Royce 'Silver Wraith' and 'Silver Cloud'
1956-59.

45074 LA12 12 volt.
A.C. Cars 1948-57.
Alfa Romeo 'Giulietta' (Sports, 'Berlina') 1956-60;
'Giulietta Spyder' and T10 Van (Petrol) 1958-60.
Armstrong Siddeley All Models (except 'Sapphire')
1946-53.
Austin 10, 12 and 16 1946-47; A30 1952-56; A35
and 'Metropolitan' 1957-60; A40 1948-56; A50
1956-57; A40 1959-60; A55 'Cambridge'
1958-59; A55 Pick-up Truck and Van 1958-60;
A70 1948-50; Austin-Healey 'Sprite' 1958-60;
Taxi and Hire Car 1948-58; LD1A and LD2A
1955; LD1A, LD2A, 'Gipsy' and 301 Range
1958-60; 25 cwt. Van and Ambulance 1948-54;
2, 3 and 5 ton Trucks 1946-53; Series III Trucks
1956-60; Series IVFF Trucks 1959-60; Coach
1947-60.
Beardmore Taxi Mk. VII (Ford 'Consul' engine)
1955-58.

40671 DMBZ6A
Aston Martin DB4 1959-60.

40673 DM6
Austin 5 ton Trucks and Coach Series III (Petrol)
1956-60; Series IVFF Trucks 1959-60; 2, 3 and
4 ton Series IVFG Trucks and Coach 1960.
Morris Commercial 3KNC (G.P.O.) 1958-59;
Series III Trucks and Coach 1956-60; 2, 3 and
4 ton Series IVFG Trucks 1960; Series IVFF
Trucks and Coach 1959-60.

40674 DM2P4
Austin A40 (low compression) 1960.

40675 DM2P4
Austin A40 (high compression) 1960.
Lotus Mk. VII Series II (Austin A40 engine) 1960.

40676 20D8
Daimler SP250 1960.

40677 D3A4
Fairthorpe 'Electron' (later) 1959-60.

40678 D2A4
Reliant 'Regal' Car 1958-60.

40681 DM2P4
Commer 'Cob' Series II (high compression) 1960.
Hillman 'Minx Special' Series IIIA and 'Husky'
Series II (high compression) 1959-60.
Singer 'Gazelle' Series IIIA (high compression)
1959-60.

40682 DM2P4
Commer 'Cob' Series II (low compression) and
 $\frac{3}{4}$ ton Forward Control 1960.
Hillman 'Minx' Series IIIA 1959-60; 'Husky'
Series II (low compression) 1960.
Singer 'Gazelle' Series IIIA (low compression)
1959-60.

40683 DM2P4
Sunbeam 'Rapier' and 'Alpine' Sports 1959-60.

40685 DM6
Humber 'Super Snipe' 1960.

40689 D2A4
Commer 'Cob' (high compression) 1958-59.
Hillman 'Husky' (high compression) 1959.

40693 DMBZ6
Jaguar $3\frac{1}{2}$ litre (8-1 compression ratio) 1951-53.

40694 DMBZ6
Jaguar $3\frac{1}{2}$ litre (8-1 compression ratio) 1955-58;
XK140 (8-1 compression ratio) 1955-57.

40695 DMBZ6
Jaguar XK120 (8-1 compression ratio) 1949-54;
XK140 (competition) 1955-57.

40696 DMBZ6
Jaguar $3\frac{1}{2}$ litre (8-1 compression ratio) 1954-58.
Morris 'Isis' (low grade petrol) 1956-58.
Wolseley 'Six Ninety' (Export, special orders)
1955-58.

40697 DMBZ6A
Aston Martin DB4 GT 1960.

40698 DM2P4
Morgan 'Plus Four' (TR2/3 engine) 1955-60.
Peerless 'Gran Turismo' 1959-60.
Triumph 2-seater Sports 1954; TR2 and TR3
1955-60.

40705 DM2P4
Austin $1\frac{1}{2}$ ton Series IVFG 1960.
Morris Commercial $1\frac{1}{2}$ ton Series IVFG 1960.

40707 DM2P4
Austin 'Seven' 850 and $\frac{1}{2}$ ton Van (special orders)
1959-60.
Morris 'Mini-minor' 850 and $\frac{1}{2}$ ton 'Mini-van'
1959-60.

40708 DM2P4
Morgan 'Plus Four' ('Vanguard' engine) 1958.
Standard 'Vanguard' (high compression) 1957-60;
'Ensign' (85 mm. engine) 1958-59.

40711 23D4
Dellow Mk. IIC and Mk. V 1955-57.
Layton 'Jomar' (T.V.R.) (Ford engine) 1959-60.
Lotus (Ford 100E engine) 1958 and 1960.
Morgan 'Four Four' Series II (Ford engine)
1956-60.
Reliant 'Regent Four' Van (Export only) 1959-60.

40716 DM6
Daimler 'Majestic' 1959-60.

40717 23D4
Simca 'Aronde' 1960.

40718 23D4
M.G. 'MGA 1600' 1960.

40719 DMBZ6
Armstrong Siddeley 'Star' Limousine 1960.

40720 DMBZ6
Rover '75' 1955-59; 3 litre (7.5 compression ratio)
1959-60.

40721 DMBZ
Rover '105' 1957-59; '100' 1960; 3 litre (8.75
compression ratio) 1959-60.

COILS

45074—continued
Citroen 15 1946-54; 23 1949-53.
Commer 8 cwt. 1946-52; Estate Car 1949; 'Express'
Delivery Van and Truck 1953-59; 'Cob' 1957-60;
15/25 cwt. 1946-48; 25 cwt. Forward Control
1946-50; $\frac{3}{4}/1\frac{1}{2}$ ton 'Superpoise' 1958.
Dodge Petrol Models 1947-50.
Elva 'Courier' (B.M.C. 1,500 c.c. engine) 1959-60.
Hillman 'Minx' 1949-60; 'Husky' Series I 1955-60.
Humber 'Hawk' 1958-59.
Isetta (Great Britain) '300' 1957-60.
Jaguar $1\frac{1}{2}$ litre 1946-48.
Jensen 'Jen-Tug' (later) 1952-54; 'Tempo 1500'
1958-60.
Jowett 'Javelin' 1948-54; 'Jupiter' 1951-54;
'Bradford' Van 1951-54; De Luxe Van and
Utility 1951-52.
Karrier 'Bantam' 1946 and 1958; 'Cob' 1947-48.
Lea Francis 14 1946-48.
Lotus Mk. VII and Mk. VIII 1958; Mk. VII Series
II 1960.
Meynell All Models 1952.
M.G. $1\frac{1}{2}$ litre 1947-53; 'Midget' 1946-55; 'Mag-
nette' 1954-56.
Morgan 'Four Four' Series II (Ford engine)
1956-60.
Morris 10 1946-48; 'Minor' 1948-60; 'Cowley'
1955-59; 'Oxford' Series I-IV 1948-59; 'Travel-
ler' Series I-IV 1953-60; 'Hindustan' Series
I-III 1955-60; Quarter Ton Van and Truck
1954-60; 10 cwt. Van and Truck 1946-50.

45074—continued
Morris Commercial 15/20 cwt. (PV) 1946-50;
25/35 cwt. 1946; LC Models 1953-60; 35/40,
45/55 and 60/70 cwt. and 5 ton Forward Control
Tipper 1946-48; CV and ECV Models 1946-51;
FV and FVS 1949-55; NV and NVS 1951-55;
PP Coach 1950-52; 'J' Van 1949-57; 'J2'
1957-60; 'JB' Van 1958-60; LD1 and LD2
1954-60; 3KNC (G.P.O.) 1956-59; Series III
Truck and Coach 1956-60.
Nash Metropolitan 1954-60.
Paramount All Models 1951-54.
Reliant 'Regal' Car (12 volt) 1959-60; 10 cwt.
(12 volt) 1951-56; 'Regent Four' Van 1959-60.
Riley 'One-Point-Five' 1958.
Rover 10, 12, 14 and 16 1946-47; '80' and '100'
1960.
Singer 9 1946-51; 10 1946-49; 4AC and 4AD
1952-55; 'SM1500' 1949-54; 'Hunter' 1955-56;
'Hunter S' (single carburettor) 1956; 'Gazelle'
1957-59.
Standard 'Eight' and 'Ten' 1954-59; 'Companion',
6 cwt. Van and Truck 1956-60; 'Pennant' 1958-59;
'Ensign' 1958-60; 'Atlas' 1959-60.
Sunbeam 'Rapier' 1956-59.
Triumph 'Mayflower' 1950-53.
Trojan 15/20 cwt. Van 1946-60.
Wolseley 12, 14, 18 and 25 1946-48; 'Four Forty-
Four' 1953-56; 'Four Fifty' 1949-53; 'Forty-
Hundred' 1958-60; 'Fifteen Fifty' 1957-59.

continued



DISTRIBUTORS, COILS AND MAGNETO

VEHICLE APPLICATION REFERENCE—continued

COILS—continued

45075 HA12 12 volt.

A.C. Cars 'Ace' and 'Aceca' 1956-60.
 A.F.N. 'Le Mans' and 'Mille Miglia' 1951-54.
 Alfa Romeo 'Giulietta' (Sports, 'Berlina') 1955.
 Allard 16 1947-49; All Models 1949-55.
 Alvis All Models 1946-60.
 Armstrong Siddeley 'Sapphire' and 'Star Sapphire' 1953-60; ½ ton Pick-up Truck 1957.
 Aston Martin All Models 1947-60.
 Austin A40 Sports 1952-53; A70 1951-55; A90 1949-52; A90 and A95 1955-59; A105 1957-59; A125 1948-54; A135 'Princess' 1948-60; 'Princess' Mk. IV 1957-59; Ambulance and Hearse 1951-60; Healey '100' and '100M' 1954-56; Healey '100 Six' 1957-59; 'Champ' 1954-56; Cargo Truck 1954-55; LD1A and LD2A 1956-57; 2/3 and 5 ton Trucks (high speed engine) 1952-55; 301 Range (except 301FC) 1957.
 Bedford 10/12 cwt. Van 1948-52; K, OSA-OLA, OSB-OLB, MS-ML and OSS 1951-53; Bus 1946-50; CA Van 1953; SH Fire Engine Chassis 1951-53; TA 1953-54; 'S' and 'SB' Type 1951-54.
 Bentley 4½ litre 1946-54; 'Continental' Sports 1952-54.
 Bristol All Models 1947-60.
 Citroen 15 and 23 1954-55.
 Commer 'Express' Delivery Van and Truck 1960; 25 cwt. Forward Control 1951-56; ¾/1½ ton 'Superpoise' 1956-57 and 1959-60; 2 and 3 ton 1946-47; 1¼/1½ ton Forward Control 1956-60; 25 cwt. 'Superpoise' 1949-56; 2/3, 3/4 and 4/5 ton 1949-54; 5 ton 'Superpoise' 1952-54; 'Commando' 1950-53; 2½ ton 'Superpoise' 1955-60; 6 ton 'Superpoise' 1959-60; 3 ton Cross Country Vehicle 1956; 1, 4 and 6 ton Forward Control 1959-60; 5 ton 1947; 5 and 7 ton Forward Control 1949-60; 6½ ton 1949-50; 8 ton Tractor Trailer 1950; 'Avenger' 1949-60; Fire Tender or Pump Chassis 1952-60.
 Cooper 'Monaco' Sports (Coventry Climax engine) 1959-60.
 Daimler All Models (except SP250) 1946-60.
 Dellow Sports 1955-57.
 Dodge Petrol Models 1951-60.
 Fairthorpe 'Electron' and 'Electron Minor' 1958-60; 'Atomota' and 'Zeta' 1960.
 Frazer Nash 'Mille Miglia', 'Targa Florio' and 'Sebring' Hard Top 1955.
 Healey All Models 1948-54.
 Hillman 'Minx' 1946-48.
 H.R.G. 9 and 12 1946-52.
 Humber 'Hawk' and 'Super Snipe' 1946-57; 'Hawk' 1960; 'Pullman' and 'Imperial' 1946-54; 'Snipe' 1946; 'Super Snipe' 1959-60.
 Jensen ¾ litre 1946-47.
 Jaguar All Models (except 1½ litre) 1946-60.
 Jensen ¾ litre 1946-47; 'Interceptor' 1950-55; '541' and '541R' 1954-60.

45075—continued

Karrier 'Bantam' 1947-57 and 1959-60; 'Gamecock' 1953-60; 1¼/1½ ton Passenger Chassis 1957-60.
 Lagonda 2½ litre 1949-52; 3 litre 1954-58.
 Lanchester LD10 1946-51; 14 1952-53; 'Sprite' 1955-56.
 Layton 'Jomar' (T.V.R.) 1959-60.
 Lea Francis All Models 1949-54.
 Lotus Mk. IX (Climax or M.G. engine) 1958-59; 'Elite' 1959-60.
 M.G. 'MGA' 1956-60; 'Magnette' 1957-59.
 Morgan 'Plus Four' 1946-60; 'Four Four' (Standard engine) 1950.
 Morris 'Six' 1948-54; 'Isis' 1956-58.
 Morris Commercial LC5 1956; 3KNC (G.P.O.) 1958-59; Series III Trucks 1959-60.
 Peerless 'Gran Turismo' 1959-60.
 Riley 1½ litre 1946-55; 2½ litre 1947-53; 'Pathfinder' 1954-57; 'One-Point-Five' 1959-60; 'Two-Point-Six' 1958-59.
 Rolls-Royce 'Silver Wraith' 1946-55; 'Silver Dawn' 1953-55.
 Rover All Models (except '80', '100' and 3 litre) 1948-60.
 Singer 'Hunter' and 'Hunter S' (twin carburetter) 1955-56.
 Smith's Delivery Vehicles Mobile Shop 1956-58.
 Standard 12 and 14 1946-48; 'Vanguard' 1948-60; 12 cwt. Van and Truck 1948-57.
 Sunbeam All Models (except 'Rapier') 1953-57.
 Sunbeam-Talbot All Models 1946-54.
 Swallow 'Doretti' 1954-55.
 Triumph All Models (except 'Mayflower' and 'Herald') 1946-59.
 Vauxhall 10 1946-47; 14 1946-48; 'Wyvern' and 'Velox' 1948-54.
 Wolseley 'Six Eighty' 1949-54; 'Six Ninety' 1955-59.

45076 LA6 6 volt.

Austin 8 1946-47.
 Barrett, W. & F. Invalid Carriage 1949-54.
 Bedford 30 cwt., 2/3, 3/4 and 5 ton Trucks and Scammel Tractor 1946-50.
 Dellow Sports 1952-54.
 Dodge Petrol Models (6 volt) 1947.
 Jensen 'Jen-Tug' 1946-52.
 Jowett 'Bradford' Van 1946-50; De Luxe Van and Utility 1949-50.
 Lloyd '650' 1948-50.
 Morgan 3-wheeler 1948-52.
 Morris 5 cwt. Van 1946-53.
 Reliant 750 c.c. 3-wheeler 1946-54; 'Regal' Car (6 volt) 1953-58; 5 cwt. Van (6 volt) 1953-59; 6 cwt. Van and Truck (6 volt) 1954-55.
 Standard 8 1946-48.
 Vauxhall 12 1946-47.
 Wolseley 8 1946-48.

45077 MA6 6 volt.

A.C. Invalid Carriage 1947-53.
 Larmor Invalid Carriage 1948-54.
 Light Delivery Vehicles 'Bi-Van' and 'Tri-Van' 1951.

45093 LA12 12 volt.

Austin Petrol Tanker 1946-60.
 Morris Commercial Petrol Tanker 1951-52 and 1957-60.

45094 HA12 12 volt Insulated return.

Morgan 'Four Four' (Standard engine) 1949.

45102 HA12 12 volt.

Armstrong Siddeley 'Star' Limousine 1960.
 Austin A99 1959-60; B.M.C. 3 litre 'Princess' 1960; Austin-Healey '3000' 1959-60.
 Commer 'Cob' Series II 1960; ¾ ton Forward Control Van and Passenger Chassis 1960.
 Daimler SP250 Sports 1960.
 Fairthorpe 'Electron' and 'Electron Minor' (later) 1959-60; 'Atomota' and 'Zeta' 1960.
 Hillman 'Minx' Series IIIA 1959-60; 'Husky' Series II 1960.
 Rover 3 litre 1959-60.
 Singer 'Gazelle' Series IIIA 1959-60.
 Sunbeam 'Alpine' Sports and 'Rapier' 1959-60.
 Triumph TR3 1960.
 Wolseley 'Six Ninety-Nine' 1959-60.

45111 LA12 12 volt.

Lotus Mk. VII Series II (Ford 105E engine) 1960.
 Triumph 'Herald' 1959-60.

45113 LA12 12 volt.

Austin 'Seven' (850) 1959-60; ¼ ton Van 1960; A55 'Cambridge' 1959-60; Series IVFG Trucks 1960.
 M.G. 'Magnette' Mk. III 1959-60.
 Morris 'Mini-minor' (850) 1959-60; 'Mini-van' 1960; 'Oxford' Series V 1959-60.
 Morris Commercial Series IVFG Trucks 1960.
 Riley 'Four Sixty-Eight' 1959.
 Simca 'Aronde' 1960.
 Wolseley 'Fifteen Sixty' 1959-60.

45121 BA12 12 volt.

Aston Martin BD4GT 1960.

MAGNETO

44088 4VRA

Karrier 'Bantam' 1947-54.